

Central Power Supply System multiControl *plus*

Important note about updating to SW version 1.8.9 (1349)

1 Introduction

Valued customer, thank you for installing this software update. Several improvements have been made including one newly introduced important network security function (see release notes for details). The new security function comprises an IP address filter that in case of connected systems will guard both master and slave systems from unwanted network access. For this, both master and slave systems need to be programmed to “know” the IP address of systems that shall be granted access. While the IP addresses of monitored slaves are already stored in the master system and will automatically be used for the IP filter, slave systems still need to be given the IP address of the monitoring master system. That is why after installing this new software version, slave systems will require you to enter the IP address of the master system.

Notes:

- Please make sure that this software update is installed on all connected systems.
- Please be sure to register the master system's IP address in all slave systems (see instructions below).
- Not entering the master IP address in a slave system will cause the monitoring of that slave system to fail and will result in a sub-system error.

The master IP address can be set through both the LCD interface and the WebInterface.

1.1 Registering the master IP address through the LCD interface

1. In the LCD menu of each slave system, navigate to **configuration > administration > network > communication**.



2. Enter the IP address of the master system that shall monitor this slave system (see red frame in the above picture).
3. Press the **done** button to make the setting take effect.
4. Note that you need to be authorized as **customer** to save the changes.
5. Confirm saving the changes by pressing the **yes** button.

Central Power Supply System multiControl *plus*

Page 2

1.2 Registering the master IP address through the WebInterface

1. In the WebInterface of each slave system, navigate to **administration > subsystems**. Note that you need to be logged on as **customer**.

Sicherheitsbeleuchtung
Emergency lighting

overview test results maps administration

multiControl plus : 123456789123456789123456789123456 > administration > subsystems

save system reload ⚠ After saving the configuration all systems have to be rebooted

ip addresses slaves inter-system communication on ▼

slave	ip address	connection to subsystem	cumulative error
master	192.168.2.85		⚠ v1.8.9: The IP address of the mainstation has to be registered at all substations!
1		monitor ▼	forward ▼
2		monitor ▼	forward ▼
3		monitor ▼	forward ▼

2. Enter the IP address of the master system that shall monitor this slave system (see red frame in the picture above).
3. Click **save system** to make the setting take effect.