

WirelessProfessional WLZent04

Operating instructions



WirelessProfessional WLZent04

Installation instructions

Content

1	General information	5
2	Introduction	6
3	Technical data	7
4	Structure.....	8
5	Assembly instructions	10
6	Commissioning.....	13
6.1	First switch-on	13
6.2	System behaviour in the event of a power failure	15
6.2.1	Without integrated UPS unit	15
6.2.2	With integrated UPS unit (optional accessory).....	15
6.3	System behaviour when the mains power returns	15
6.4	Restart	15
6.4.1	Software restart	15
6.4.2	Hardware restart.....	16
6.5	Shutdown.....	17
6.6	Logout.....	18
7	Operation.....	19
7.1	Touch operation.....	19
7.2	On-screen keyboard.....	20
7.3	Using a USB memory stick on the WLZent04	22
7.3.1	Connecting a USB memory stick.....	22
7.3.2	Storing building plans on WLZent04	23
7.3.3	Ejecting the USB stick via the taskbar icon.....	23
7.4	Meaning of the LED signals in the housing	24
8	Tamper-proof operating system.....	25
9	MaintenanceMode.....	26
9.1	Starting MaintenanceMode.....	26
9.2	Exiting MaintenanceMode	28
10	Setting the date and time	29
11	Adjusting backlighting.....	30
12	System Tool Launcher	31
13	WLX Settings Tool	33
13.1	System Language Settings	34
13.2	Set Update Time	35
13.3	Change User Password	36
13.4	Set Update	37
14	Bluetooth.....	38

WirelessProfessional WLZent04

Installation instructions

14.1	Turning on Bluetooth.....	38
14.2	Disabling Bluetooth	38
14.3	Pairing a device via Bluetooth	39
14.4	Disconnecting a paired device.....	40
15	Network configuration	41
15.1	Connecting to a cable network	41
15.1.1	Static IP address.....	42
15.2	Connecting to a wireless network	44
15.3	Displaying connection information	46
16	Remote access via RustDesk.....	47
16.1	Establishing a connection	47
16.2	Terminating a connection	50
16.3	Online connection.....	51
16.4	Offline connection	52
16.5	Changing the RustDesk connection password	56
16.6	RustDesk connections from WLZent04 to other devices.....	56
17	Data backup.....	57
17.1	Automatic backup	57
17.2	Manual backup.....	57
17.3	Long Term Backup	61
17.4	Recovering long-term backup data	61
18	Transferring systems to WLZent04	64
19	Webbrowser	69
20	Text editor	70
20.1	Launching text editor	70
20.2	Pasting text from the clipboard.....	71
20.3	Save file	72
20.4	Exit program	73
21	Updates to the operating system and WirelessProfessional software.....	74
21.1	Online Update	75
21.2	Offline Update	77
22	Firewall.....	79
23	Installing additional languages	81
24	FAQs.....	82
24.1	Which devices can be connected to the USB port?	82
24.2	Is it possible to install additional software on the device?	82
24.3	Why does the WirelessProfessional application keep restarting?	82
24.4	How long can the UPS unit supply power to WLZent04 in the event of a power failure?	82
25	Revision history	83

WirelessProfessional WLZent04

Installation instructions

26	Contact information	84
----	---------------------------	----

1 General information

These operating instructions are intended for the following target group: Qualified electrician in accordance with DIN VDE 0105 and authorised specialist personnel. It explains how to use the monitoring system safely and correctly. The general safety regulations and local accident prevention regulations applicable to the area of use, as well as instructions and safety information, must be observed. The operating instructions, in particular the chapter on safety, must be read in full before starting any work on the system.

These operating instructions have been compiled in accordance with the applicable regulations. These operating instructions must be kept nearby at all times and freely accessible to all persons working on and with the system.

In addition, all laws, standards and guidelines of the respective country in which the system is installed and operated must be observed.

The manufacturer accepts no warranty or liability for damage or consequential damage arising from:

- improper use
- Unauthorised or improper modification of the system's connections, settings or programming
- Failure to comply with regulations and rules of conduct for safe operation

Packaging materials are not rubbish, but recyclable materials that should be reused or recycled.

Batteries and electronic components contain substances that can cause damage to health and the environment if not disposed of properly. National guidelines and regulations for the proper disposal of used batteries and electronic components must be observed!

2 Introduction

The WirelessProfessional WLZent04 is an industrial PC with touch display, integrated power supply and WirelessProfessional USB coordinator, as well as USB and network sockets. A Linux operating system, remote access software and WirelessProfessional software are installed on the industrial PC.

The WirelessProfessional WLZent04 is intended for use as a central testing device in the WirelessProfessional system. The touch display allows operation directly on the device. The WLZent04 meets the requirements for an automatic testing system in accordance with EN 62034.



Note: The operating instructions for the WLZENT04 and the WirelessProfessional software are stored on the device under `/media/rp/WLPROSAFE/manual` and can be accessed via the file explorer.

Alternatively, the manual can be downloaded as a PDF file from the WLZENT04 product page on the manufacturer's website <https://www.rp-group.com/en>.

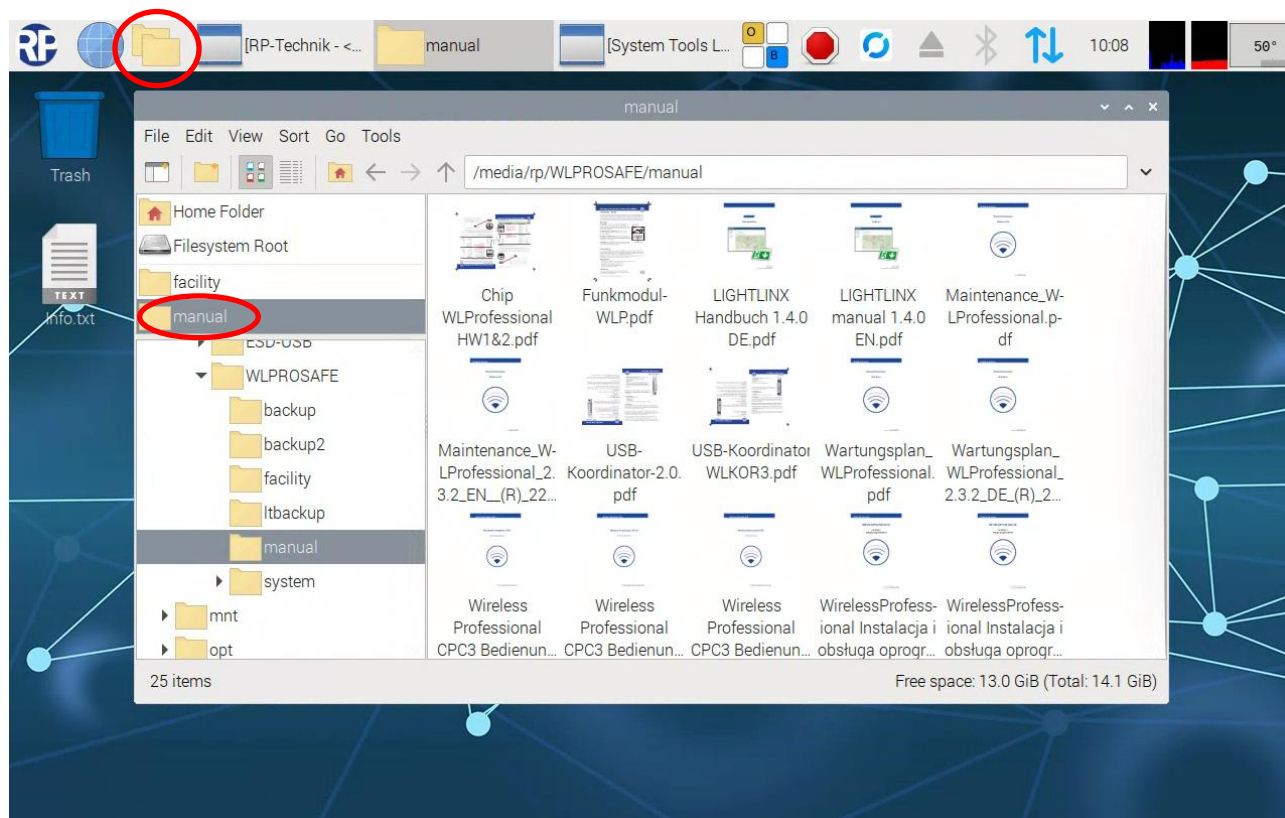


Figure 1 Location of the operating instructions

3 Technical data

Processor chipset	ARM Cortex-A76 Quad
Processor clock speed	2.4 GHz
Working memory	4GB SDRAM
LAN	Gigabit Ethernet
Power consumption	max. 17W, PF 0.52
Degree of protection	Protection class 1
Dimensions	H 217.02 mm x W 287.04 mm x D 67 mm incl. wall bracket
Type of installation	Wall mounting
Ambient temperature	15 °C to 30 °C
Weight	Max. 1.8 kg (with optional UPS unit)

4 Structure

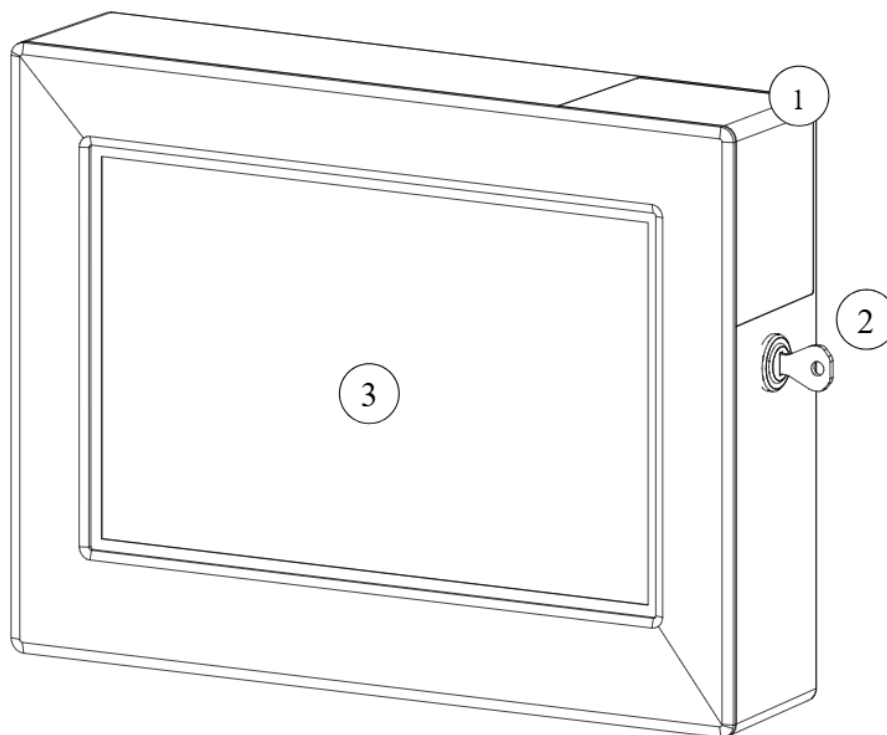


Figure 2 WLZent04 view from right

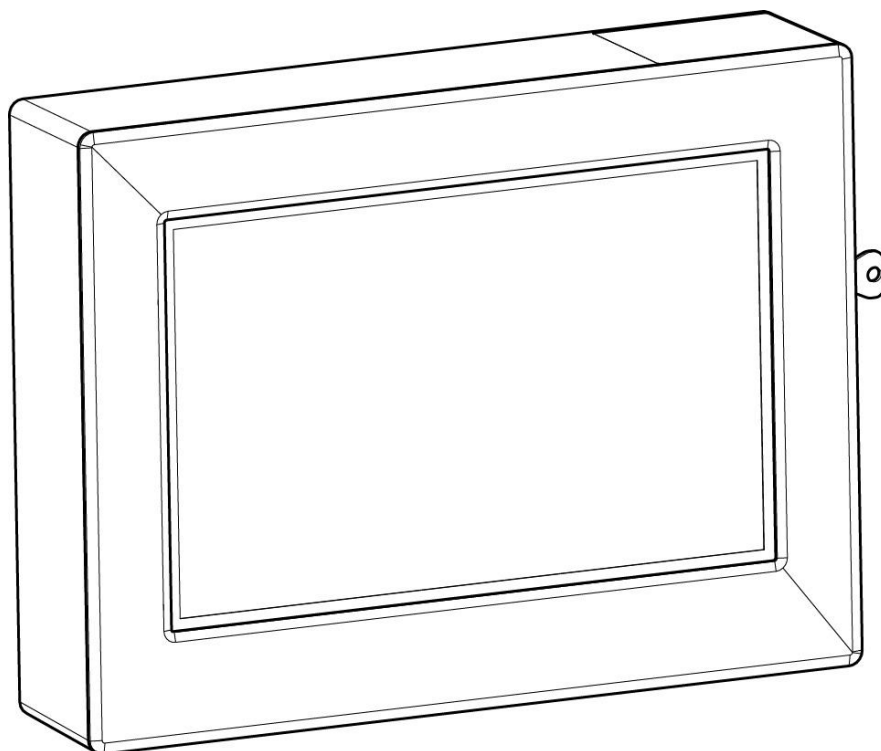


Figure 3 WLZent04 view from left

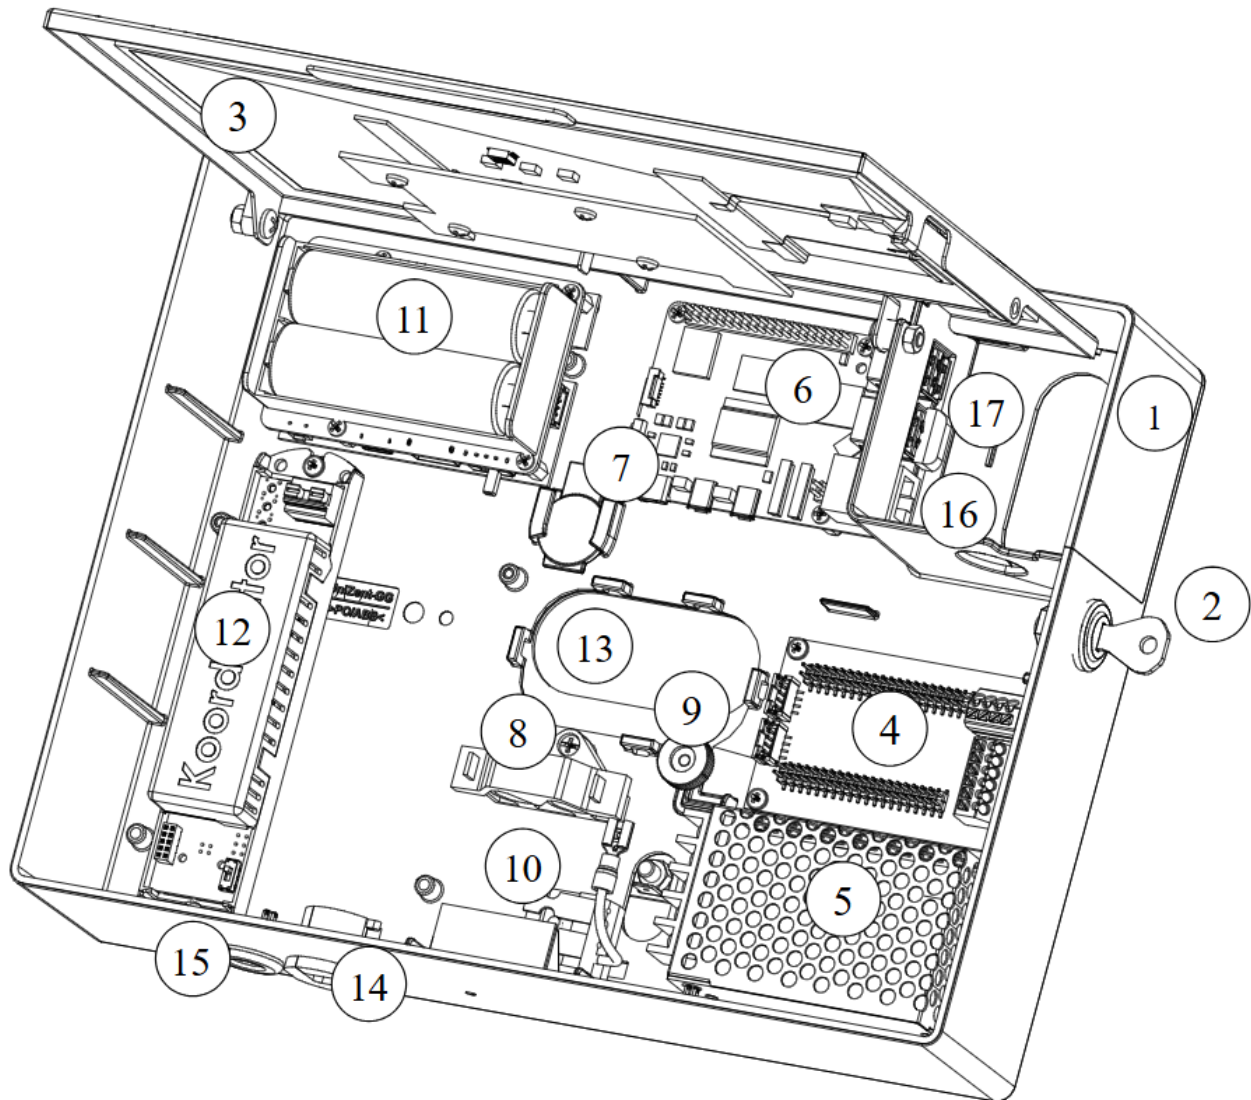


Figure 4 WLZent04, internal structure

1	Protective cover	10	Mains connection terminal
2	Housing lock	11	optional UPS unit
3	Touch display	12	Wireless coordinator
4	Distribution PCB	13	Rear cable entry
5	Power supply unit	14	Optional side cable entry (power supply)
6	Processor board with active cooling	15	Optional side cable entry (fault signal contact)
7	RTC battery	16	Network socket
8	Internal strain relief	17	USB port (3x free, 1x internal backup USB stick)
9	Knurled nut with locking bracket		





Important: The internal backup USB stick (17, see Figure 4 WLZent04, internal structure) may only be removed when the WLZent04 is powered down. The WLZent04 function is not available without a backup USB stick.

5 Assembly instructions

The WirelessProfessional WLZent04 is a device designed for wall mounting.

For ergonomic reasons, installation at a height of 1.40 m (± 0.20 m) is recommended (centre of screen).

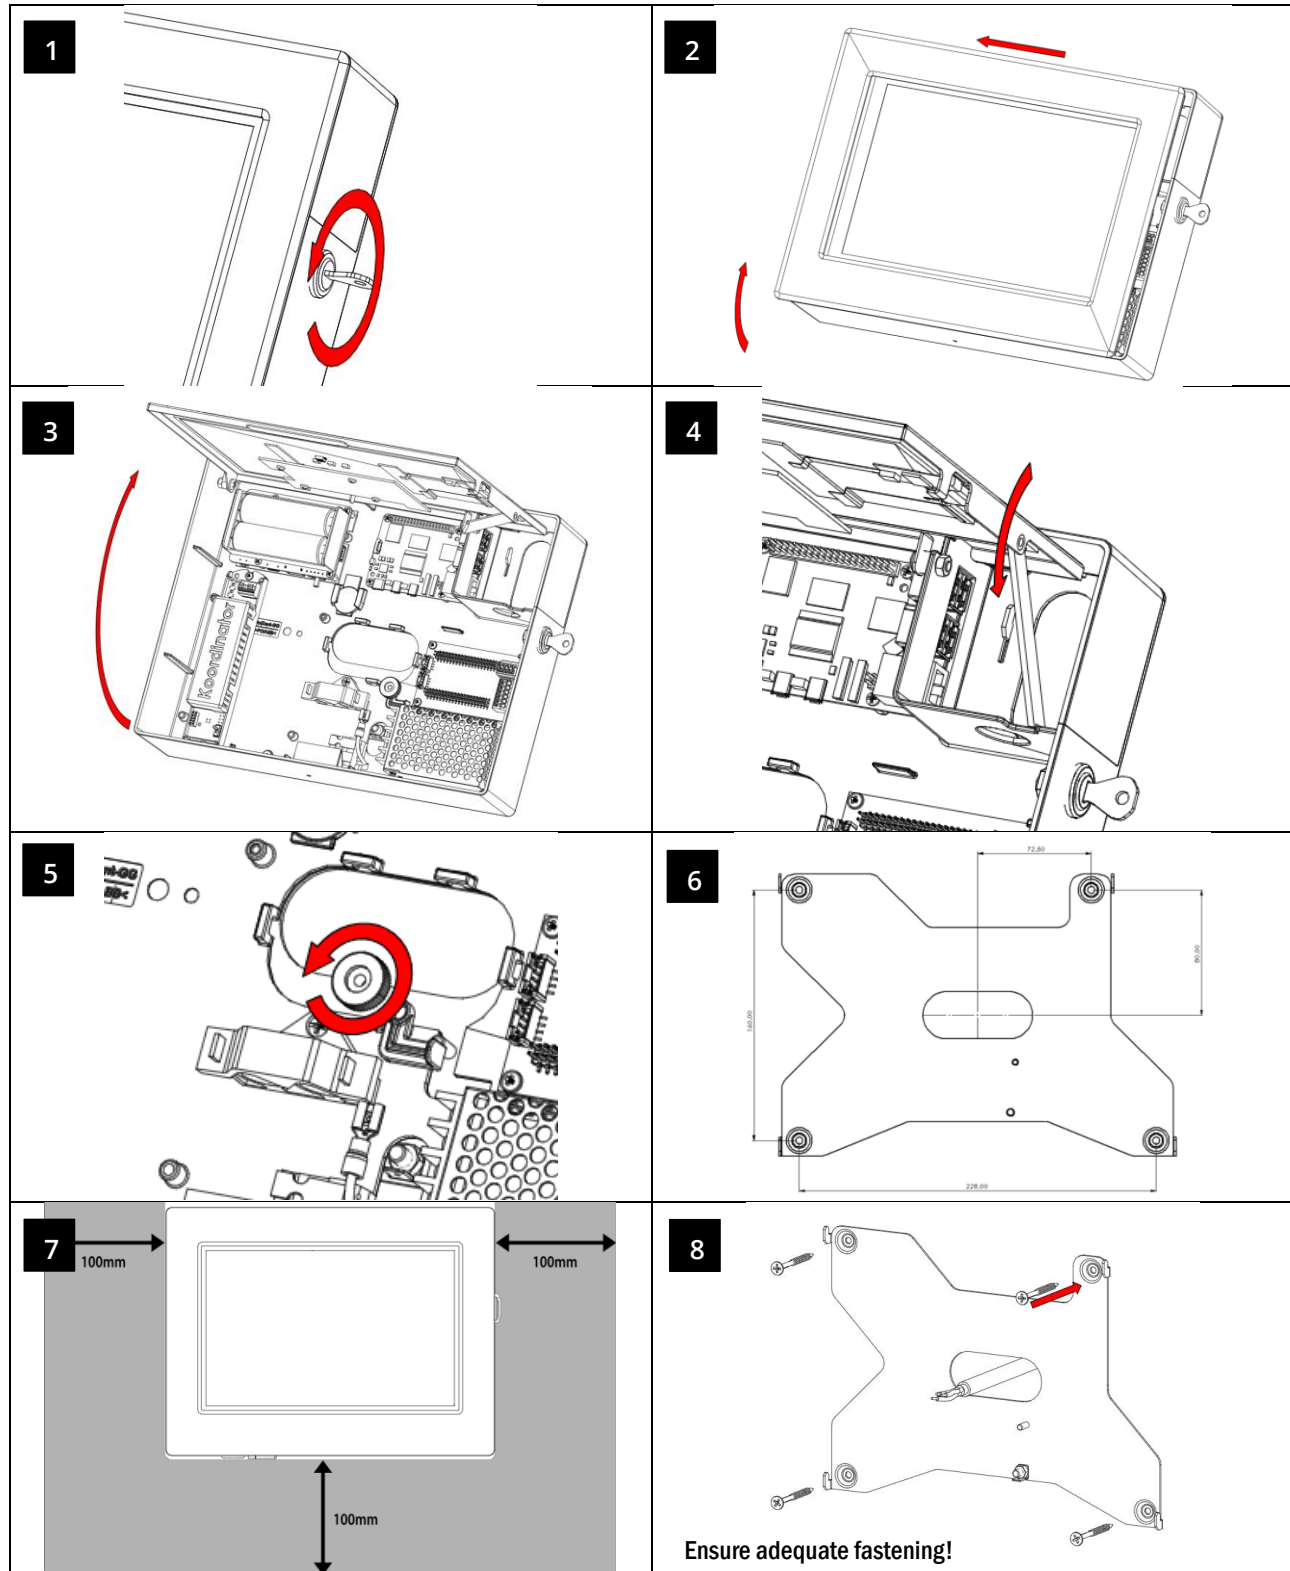

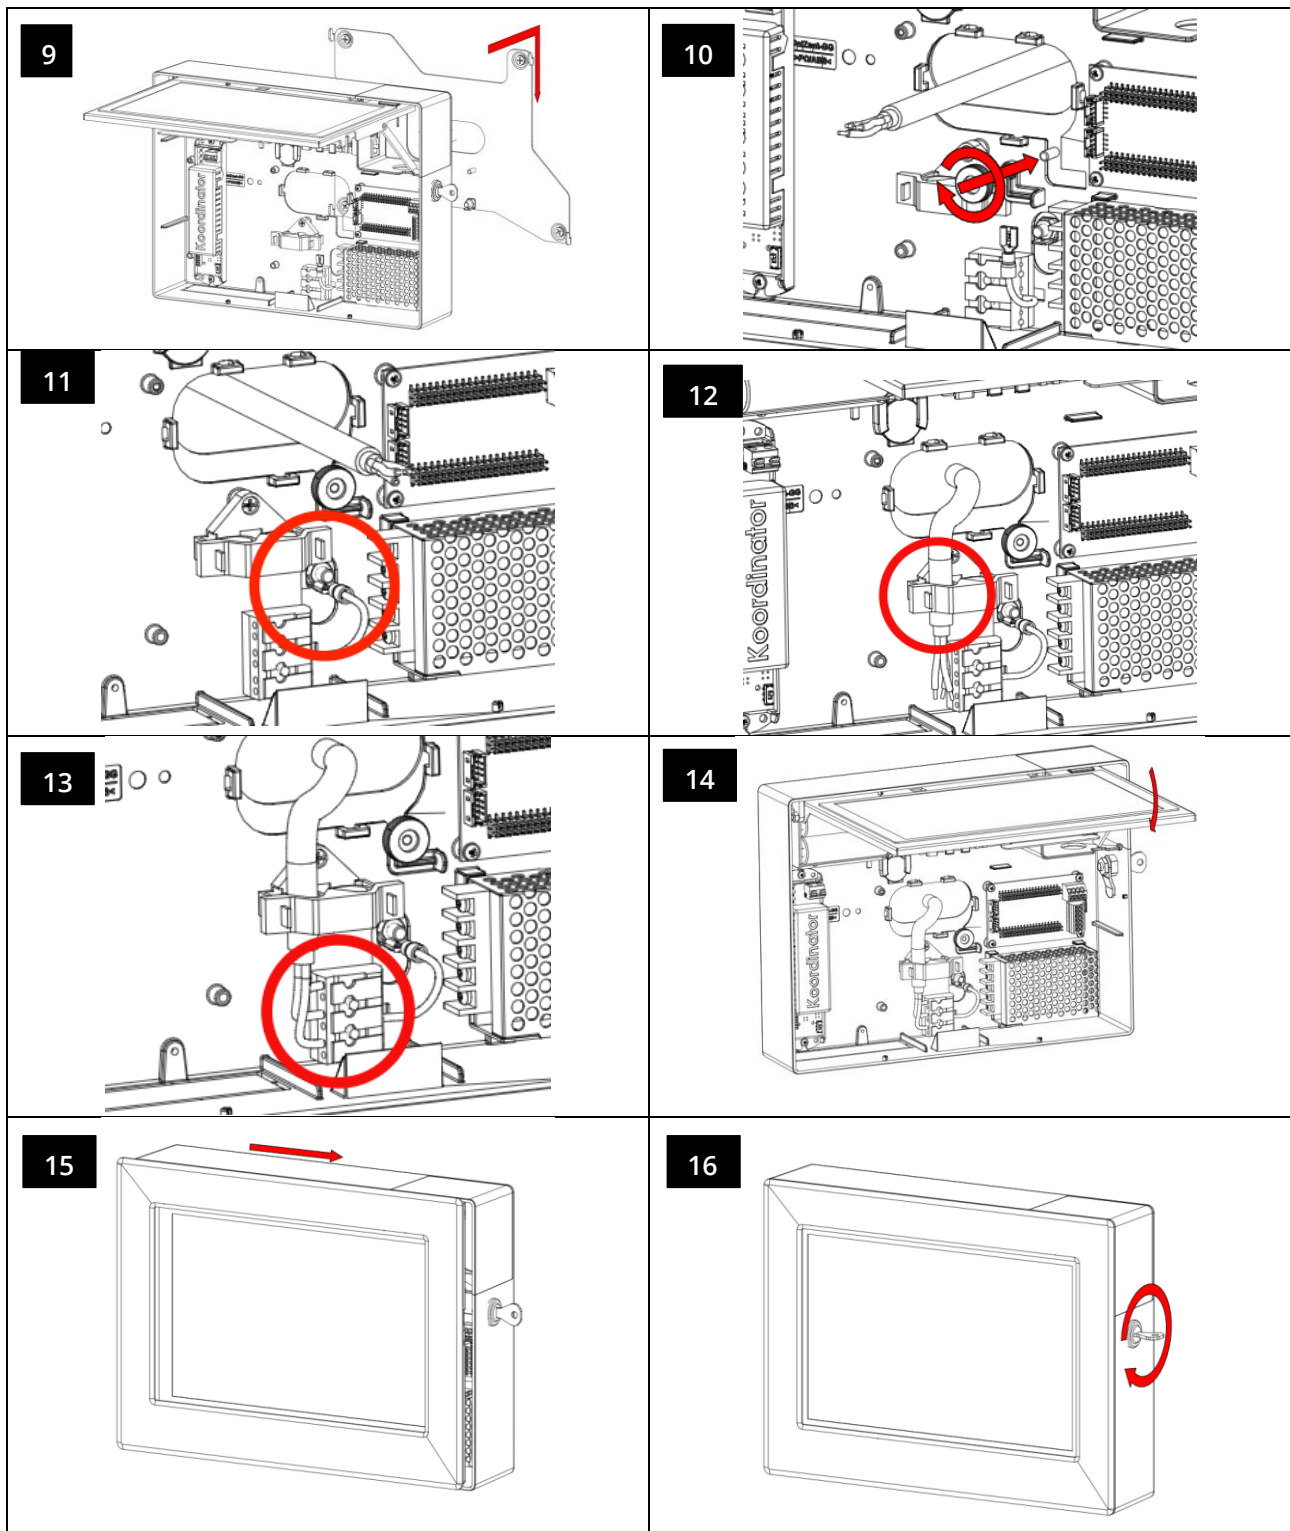

Once installation is complete, remove the protective film from the display.


For optional lateral power supply connection or for a fault signal contact, one hole must be drilled in the underside of the housing. To do this, place the marking template supplied and mark the centre point of the hole. The template is then removed and the marked centre point is drilled out with a drill.

The hole for the fault indicator contact is located on the left side of the marking template and requires a **15 mm** hole.

The hole for the power supply is located on the right-hand side of the marking template and requires a **22 mm** hole.



Note: The supplied cable entry with strain relief must be used.

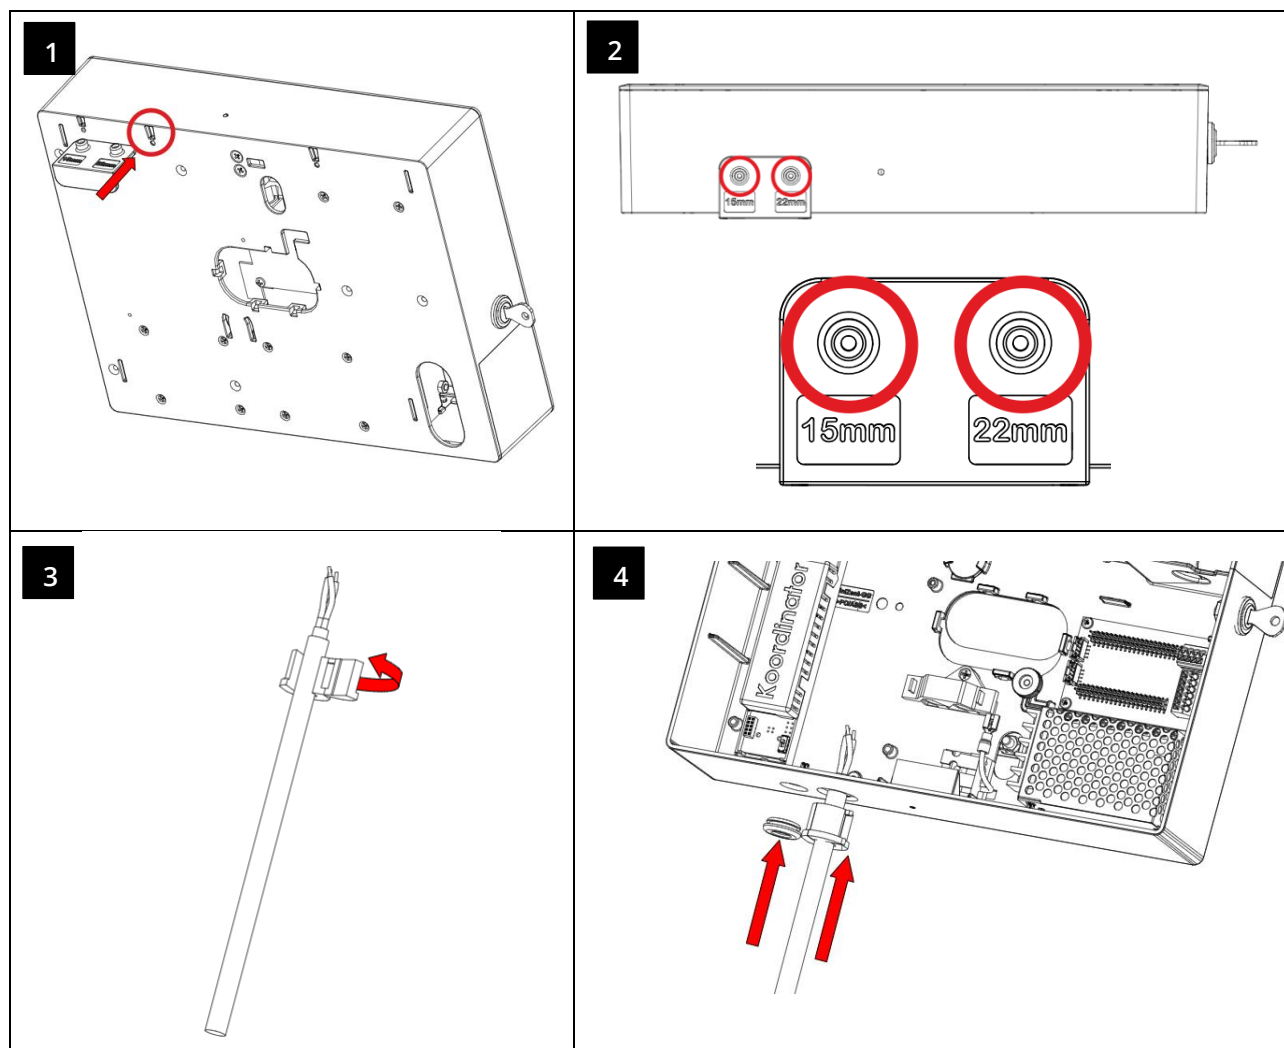

6 Commissioning

6.1 First switch-on

The WirelessProfessional WLZent04 can be connected directly to the sub-distribution board using a permanently installed 3-core connection cable or to a power socket using the mains connection cable supplied. To do this, feed the cable into the housing and through the existing strain relief (8, see Figure 4 WLZent04, internal structure) to the 3-pole terminal (10, see Figure 4 WLZent04, internal structure). After connecting the cable, close the strain relief.

As soon as power is supplied to the WLZent04, the WirelessProfessional WLZent04 boots up and starts the WirelessProfessional software automatically.

If the device has an integrated UPS unit (11, see Figure 4 WLZent04, internal structure), slide the toggle switch to the left to the “ON” position.

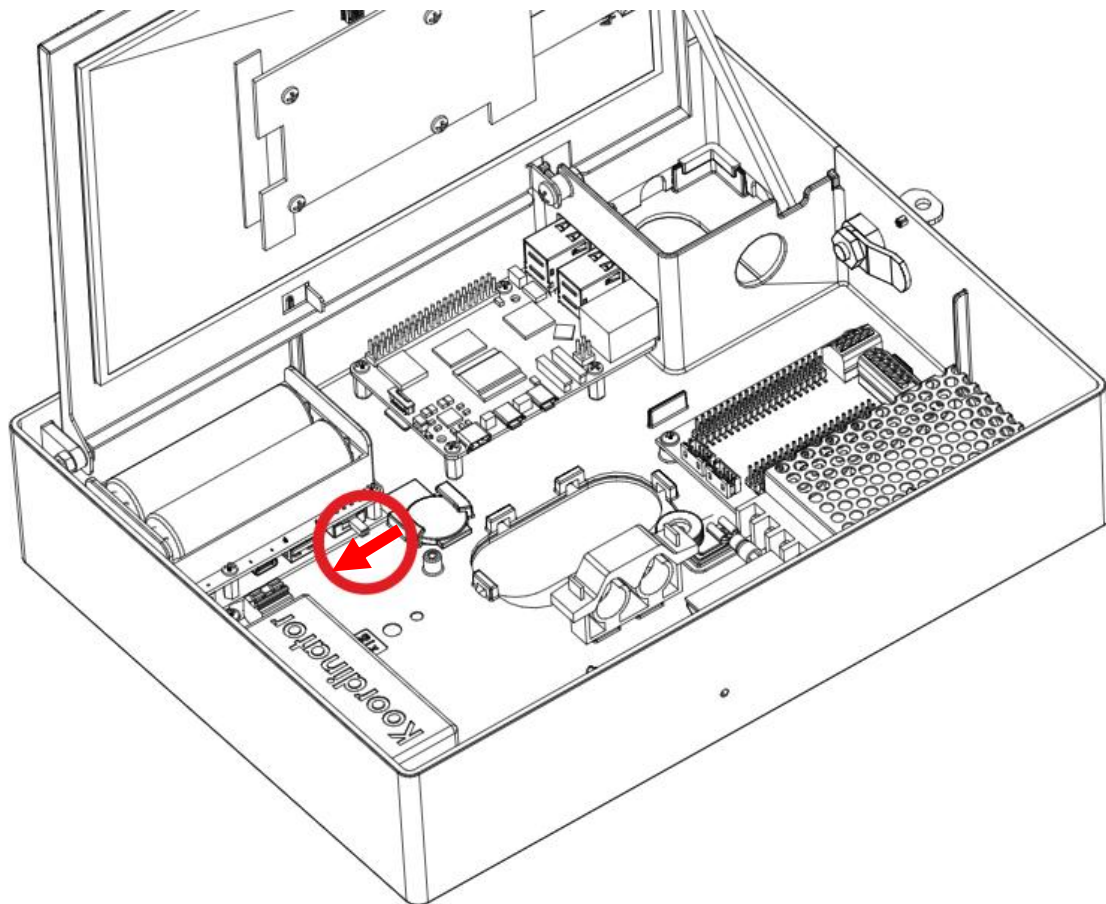


Figure 5 Position of the slide switch on the UPS unit

The device is now ready for operation, and the WirelessProfessional software interface is displayed in maximised window view on the touch display.

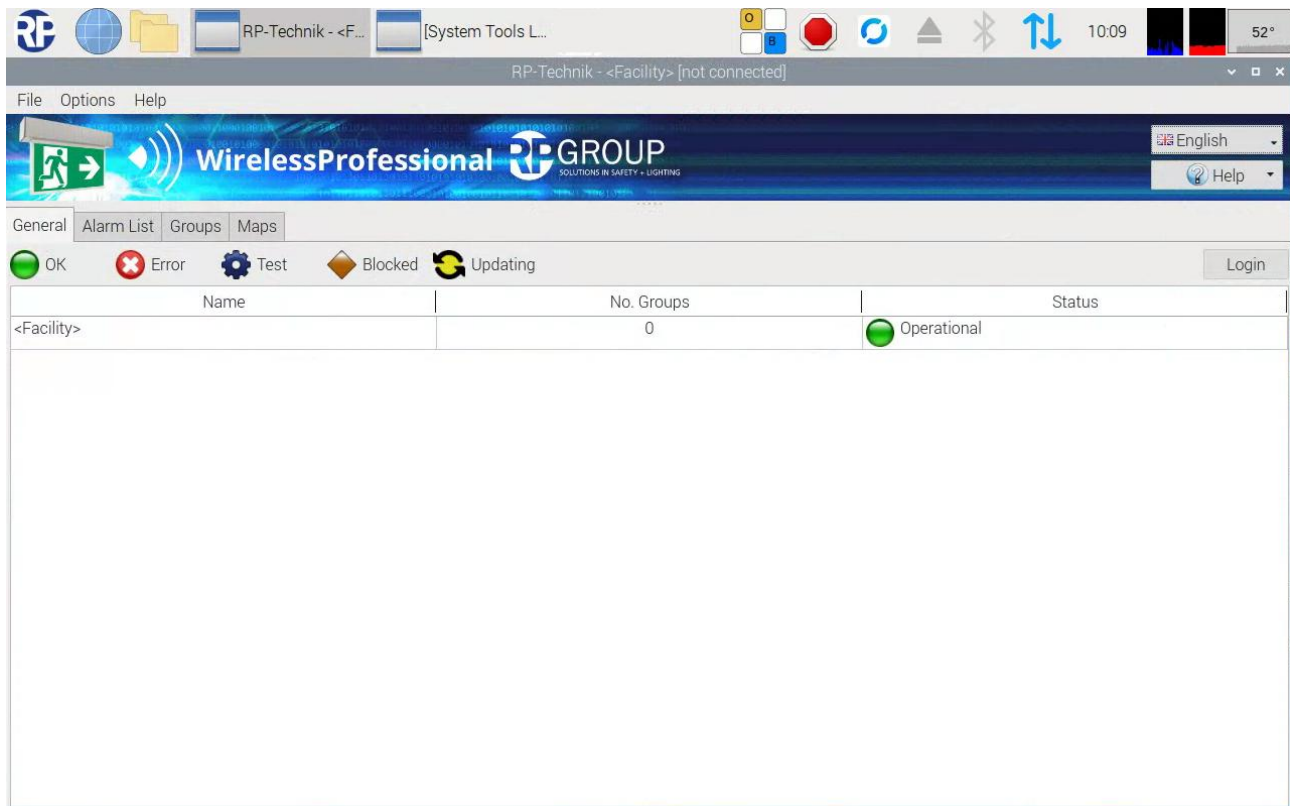


Figure 6 WirelessProfessional Software

The WirelessProfessional software must be commissioned in accordance with the software manual.

The software manual is available at </media/rp/WLPROSAFE/manual> (see Figure 1 Location of the operating instructions).



Note: An externally connected keyboard is recommended for commissioning the WirelessProfessional software.



Important: After commissioning, it is recommended to perform a manual backup to an external storage medium (see chapter 17.2 Manual backup).

6.2 System behaviour in the event of a power failure

6.2.1 Without integrated UPS unit

This version of the WirelessProfessional WLZent04 does not have a battery that maintains operation in the event of a power failure. The WirelessProfessional WLZent04 will therefore be switched off. The monitoring function, control options and automatic checks will then be unavailable for the duration of the power failure.

6.2.2 With integrated UPS unit (optional accessory)

This version of the WirelessProfessional WLZent04 has an integrated battery, which allows it to continue operating for a limited time in the event of a power failure. The WLZent04 shuts down automatically when the battery capacity is exhausted.



Note: The UPS unit can supply the WLZent04 with power for up to 60 minutes in the event of a power failure.

6.3 System behaviour when the mains power returns

When the network is restored, the WirelessProfessional WLZent04 boots up and the WirelessProfessional software starts automatically. It is not necessary to start the WirelessProfessional WLZent04 manually.

6.4 Restart

If it is necessary to restart the WirelessProfessional WLZent04, this can be triggered either via software or hardware.

6.4.1 Software restart

The operating system of the WirelessProfessional WLZent04 can be restarted via the graphical user interface. To restart the system, select 'Reboot' from the System Tool Launcher (see chapter 12 System Tool Launcher).

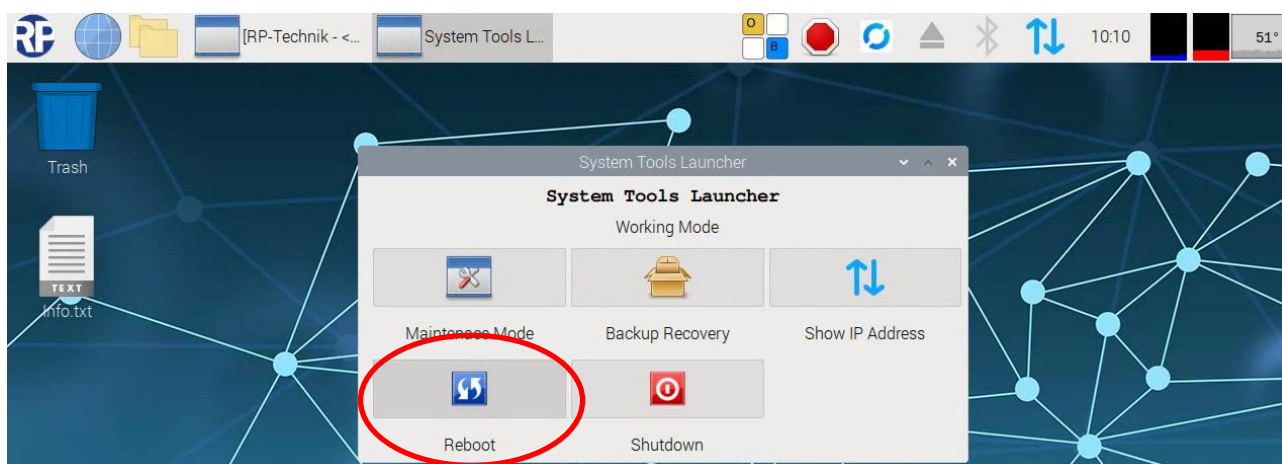


Figure 7 System Tools Launcher -> Reboot

If the start menu is not displayed, the WirelessProfessional software is running in full-screen mode. Use the Alt + Enter key combination or the help menu in the top right-hand corner to switch between full-screen mode and window mode in the WirelessProfessional software.



Important: A password is required to exit full-screen mode. The installer password for the WirelessProfessional software must be entered.

6.4.2 Hardware restart

If a restart via the operating system is not possible, a hard reset is also an option. The hard reset is performed by pressing and holding the reset button until the green LED next to the reset button changes to red (see Figure 8 and Figure 9 below). Release the reset button and press it again briefly. The LED should change from red back to green. The reset button is not accessible when the housing is closed. The housing must be opened in order to press the reset button.

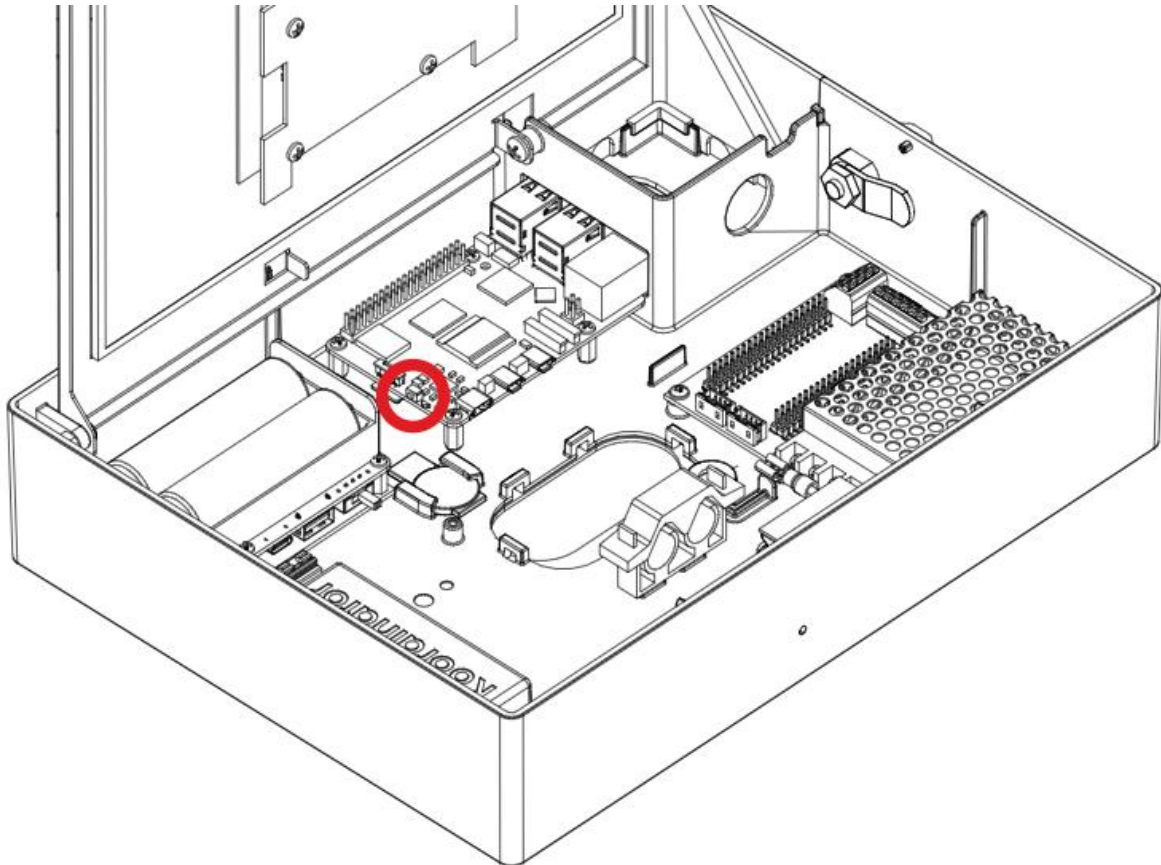


Figure 8 Position of the Hard-Reset button

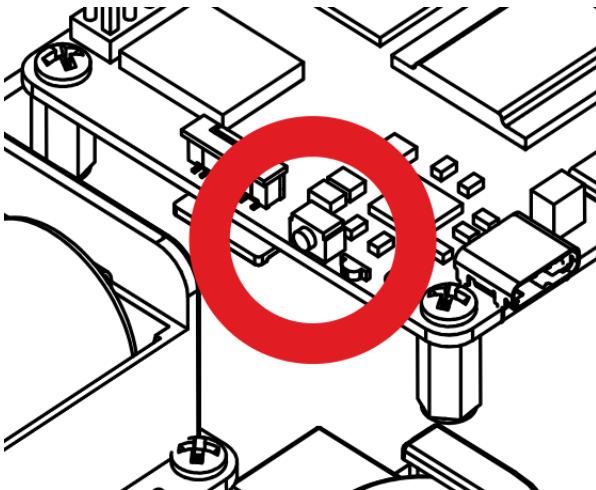


Figure 9 Hard-Reset button

6.5 Shutdown

To prevent data loss when switching off the WirelessProfessional WLZent04, the operating system must be shut down properly. To shut down the computer, select 'Shutdown' from the System Tool Launcher (see chapter 12 System Tool Launcher). This closes the WirelessProfessional software and transfers the latest data to the internal backup USB stick.

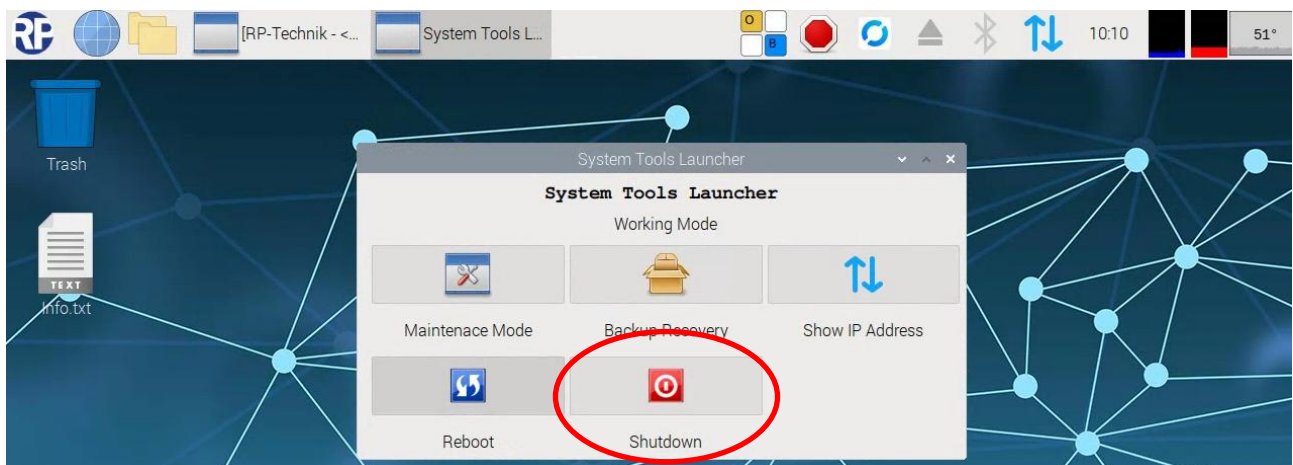


Figure 10 System Tools Launcher -> Shutdown

If the device has an integrated UPS unit (11, see Figure 4 WLZent04, internal structure), open the WLZent04 housing and move the slide switch to the "OFF" position on the right.

The WirelessProfessional WLZent04 can be disconnected from the power supply 5 seconds after the red LED on the WLZent04 processor board (6, see Figure 4 WLZent04, internal structure) has appeared. The processor board can only be seen when the WLZent04 housing is open.

6.6 Logout

The Start menu item Start menu-> Log off provides another option for shutting down or restarting WLZent04.



Figure 11 Start menu -> Logout

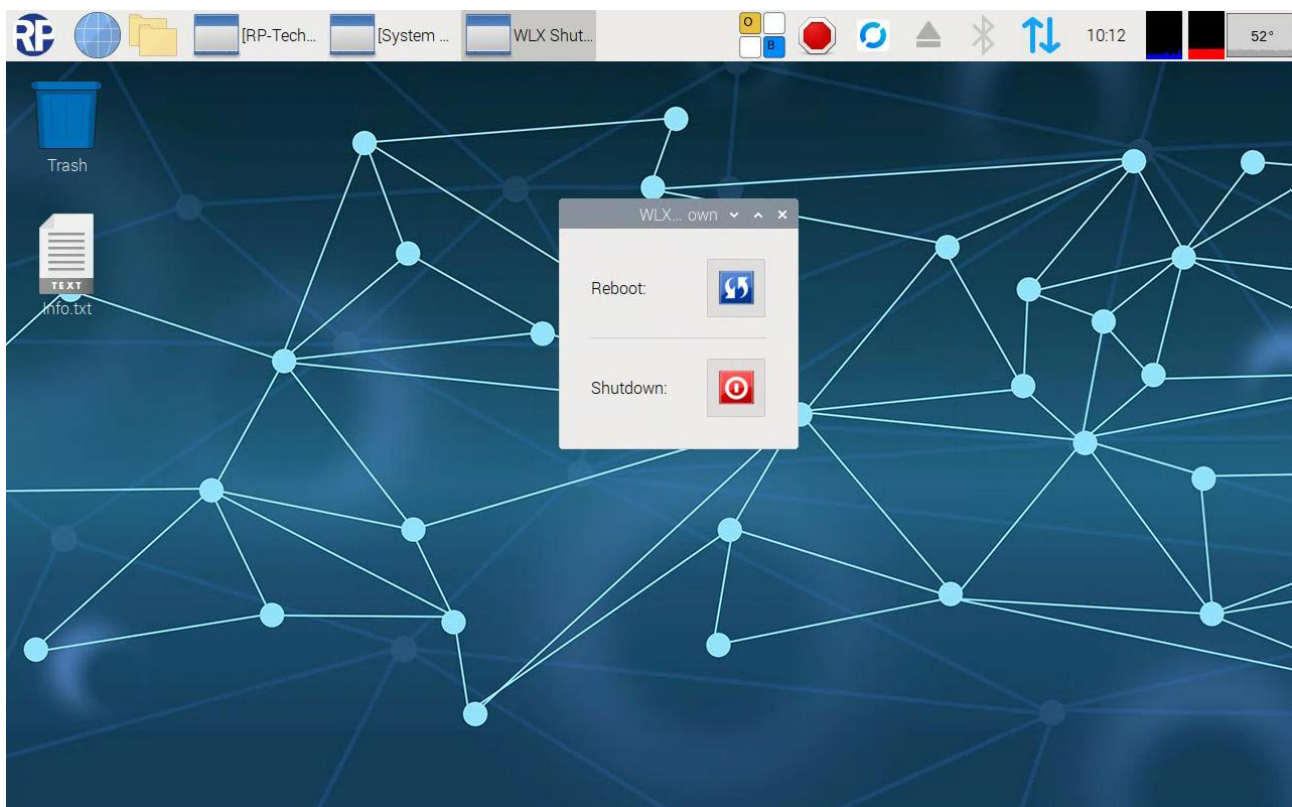



Figure 12 WLX Shutdown

7 Operation

The WirelessProfessional WLZent04 has a touch display and can be operated with your finger or a suitable stylus. An on-screen keyboard is available for text input. Operation via a mouse or keyboard connected via USB is also possible.

7.1 Touch operation

Tapping the touch display corresponds to a left click with a conventional mouse. Desktop icons are simply tapped to launch the programs behind them. No double-clicking is necessary in the operating system.

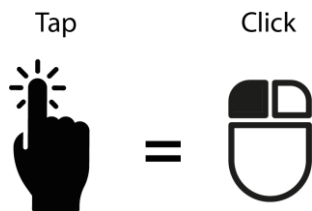

Dragging your finger from one point to another will mark an area. This is equivalent to the selection function on a conventional mouse.

To perform a right-click, tap the touch screen with 1 finger and hold for at least 2 seconds. If a context menu is available for the icon or area, it will open as soon as your finger is removed.



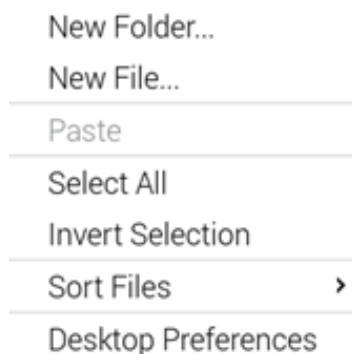


Figure 13 Context menu after right-clicking on the desktop

To use the drag and drop function, first tap on an object, then tap and drag it to move it.

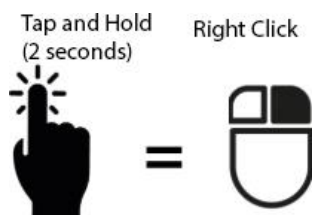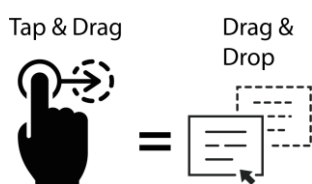

7.2 On-screen keyboard

The on-screen keyboard can be accessed via the icon in the taskbar. Tapping the icon opens a context menu in which you must select 'Show Onboard' to display the keyboard. The keyboard corresponds to the layout of the operating system's language settings and does not have a numeric keypad in the initial view.

If a window with an input field is opened in the WirelessProfessional software, e.g. for entering a password, or if you click in a text field, the on-screen keyboard opens automatically. When the window with the input field is closed again, the on-screen keyboard also closes automatically. Some maximised windows, such as the WirelessProfessional software or the web browser, are minimised when the on-screen keyboard is opened. Some windows are behind the keyboard and must be moved in order to see the input field.



Note: The on-screen keyboard does not open automatically in the Linux operating system when you tap or click on a text field, such as a password entry field.



Figure 14 On-screen keyboard

The '123' button can be used to switch the view, displaying function keys. Tapping the 'ABC' area again switches back to the previous view.

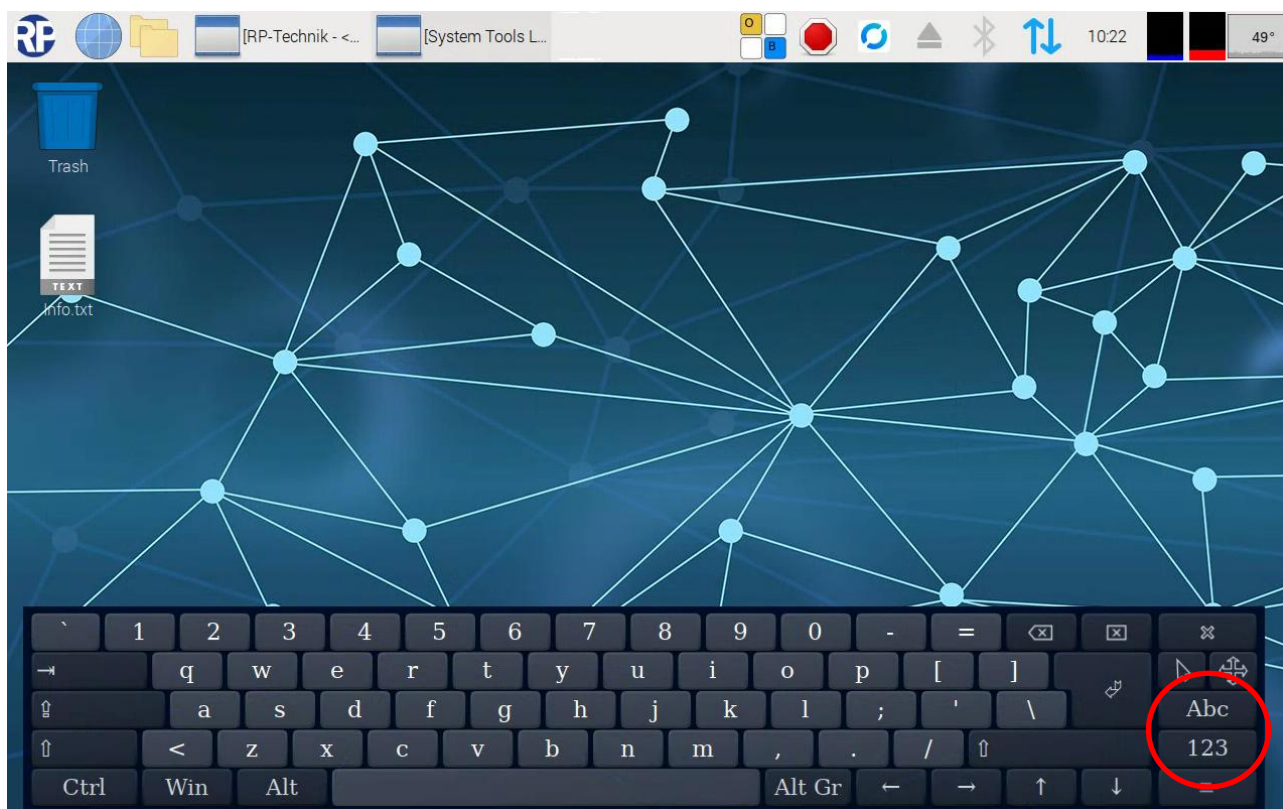


Figure 15 On-screen keyboard function keys



Note: An externally connected keyboard is recommended for commissioning the WirelessProfessional software.

The control cross button located above the 'Abc' button  is used to move the keyboard around on the screen. This may be necessary if text input fields are obscured by the keyboard. The button marked 'x'  above the control cross button closes the on-screen keyboard.

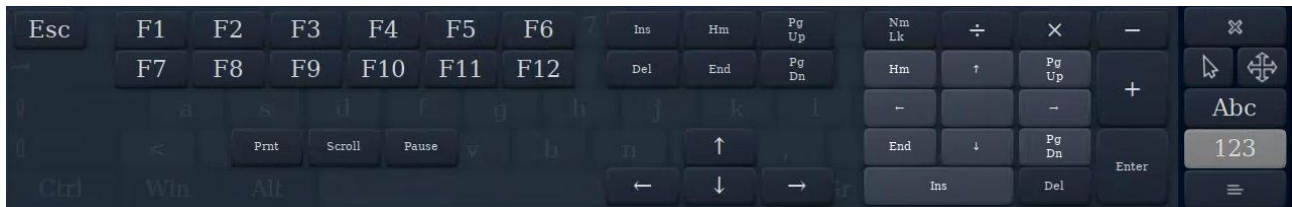


Figure 16 On-screen keyboard Function keys

The on-screen keyboard can also be closed using the icon in the taskbar. Tapping the icon opens a context menu in which you must select 'Hide Onboard' to close the keyboard.

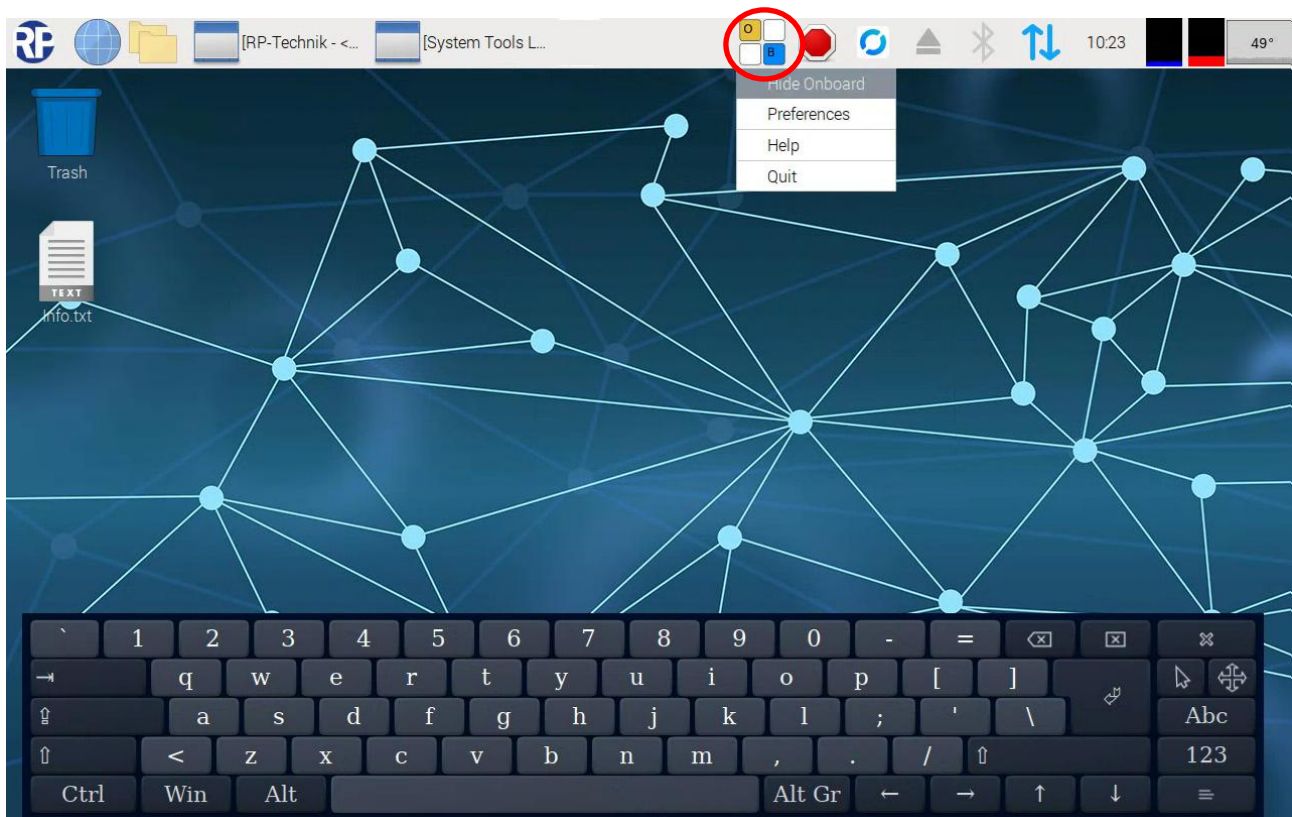


Figure 17 Close on-screen keyboard



Note: An externally connected keyboard is recommended for setting up the WirelessProfessional software.

7.3 Using a USB memory stick on the WLZent04

USB sticks, USB card readers or input devices formatted in FAT format can be used on the USB-port. Building plans can be transferred to WLZent04 in this way, or manual data backups can be performed.

Ejecting via software must be performed using a taskbar icon ().



Important: External USB sticks should always be ejected (deactivated) by the software first and only then removed, as otherwise data loss may occur.

7.3.1 Connecting a USB memory stick

Inserting an external USB stick opens the removable media window. Tapping or clicking the “OK” button opens the file explorer.

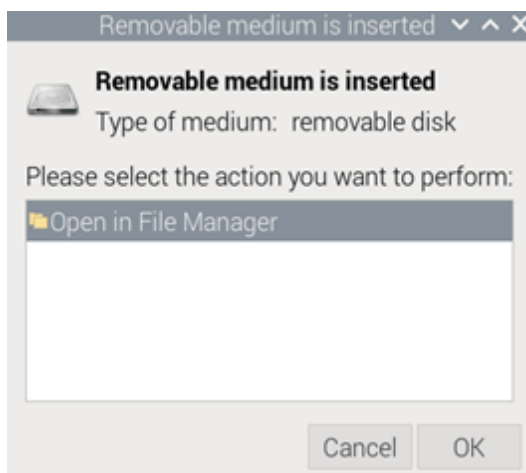


Figure 18 Confirming storage medium

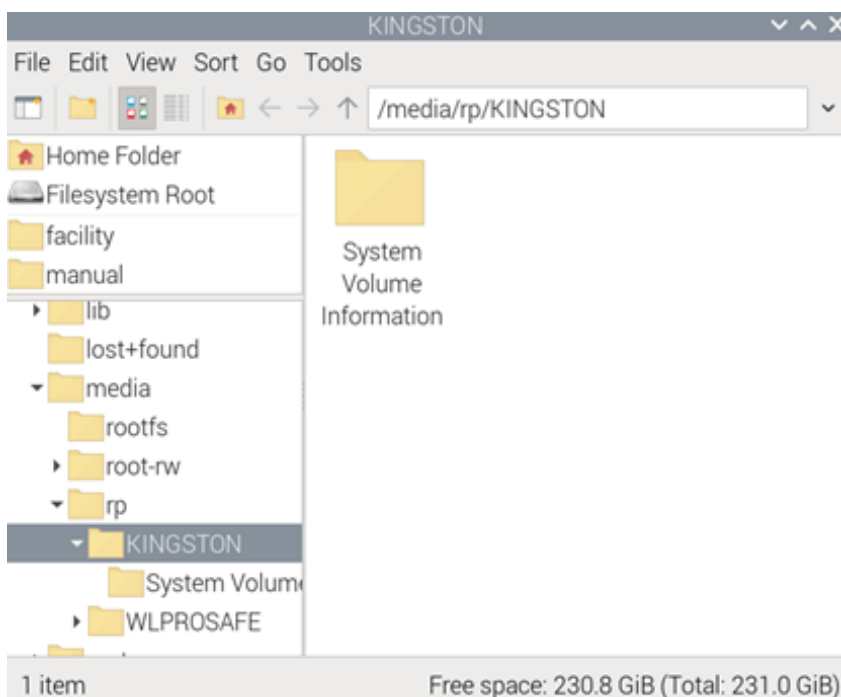


Figure 19 Storage medium File Explorer view

7.3.2 Storing building plans on WLZent04

The “Facility” folder in the WirelessProfessional WLZent04 storage system is intended for storing building plans. The “Facility” folder is located on the internal backup USB stick and can be accessed via `/media/rp/WLPROSAFE/facility`.

Building plans can be copied directly to WLZent04 from a connected USB storage device into the “Facility” folder. Storing building plans outside the designated storage location may impair the functionality of the WirelessProfessional WLZent04, as this unnecessarily occupies working memory. This can result in the WirelessProfessional software lacking the necessary working resources.

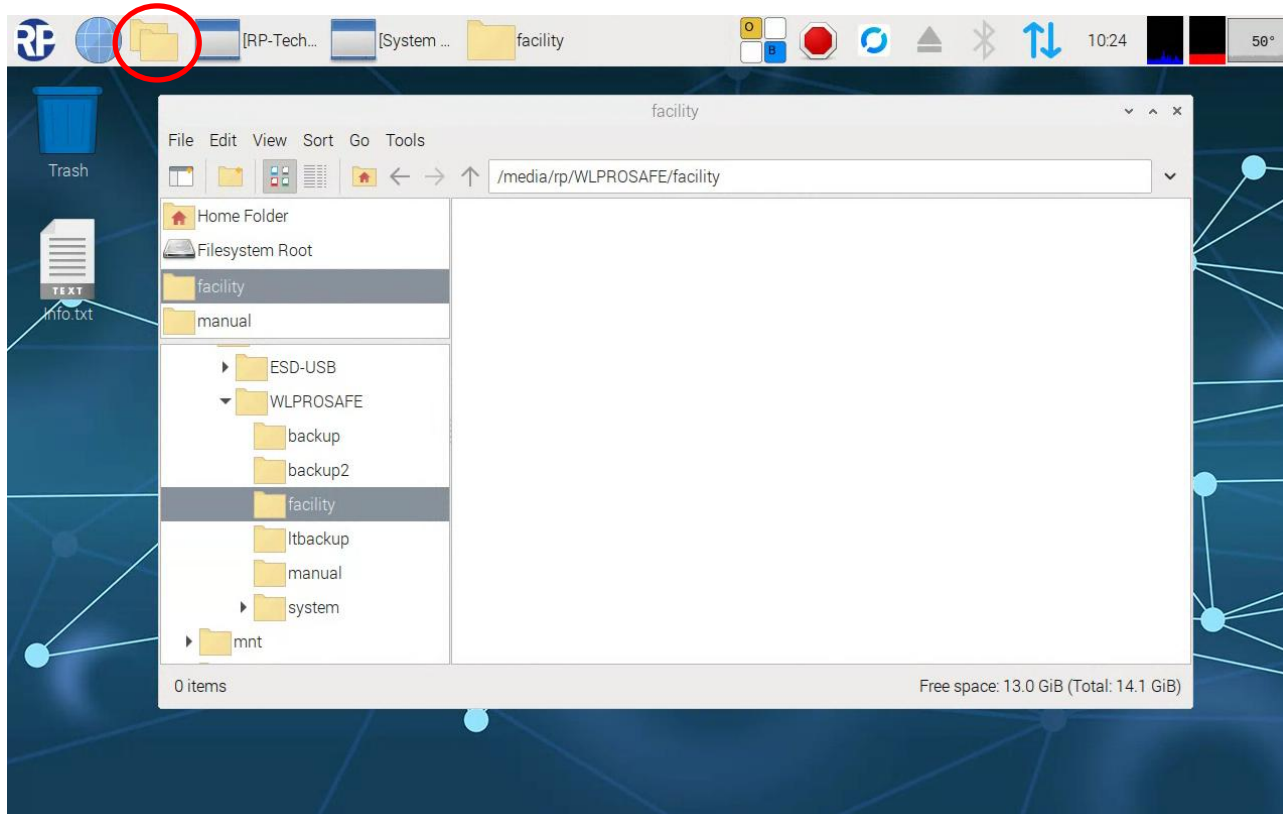


Figure 20 Storage location for building plans

7.3.3 Ejecting the USB stick via the taskbar icon

Clicking opens a context menu. To eject the external USB stick, click on the eject symbol .

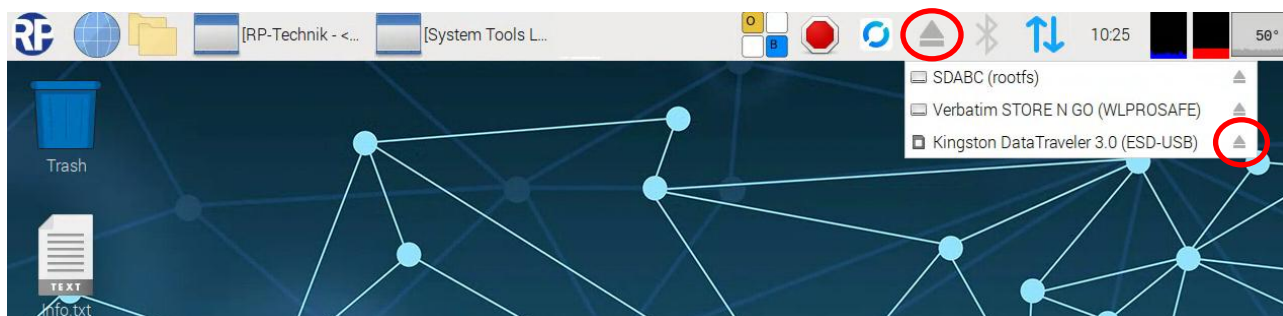


Figure 21 Ejecting storage medium

7.4 Meaning of the LED signals in the housing

There is a signal LED on the processor board with active cooling (6, (see Figure 4 WLZent04, internal structure).

Colour	State	Meaning
Green	On	The WLZent04 processor board is powered up and actively operating
Red	On	The WLZent04 processor board is powered up and has been shut down

There is a signal LED on the optional UPS unit (11, see Figure 4 WLZent04, internal structure).

Colour	State	Meaning
light blue	On	UPS is charging or discharging
light blue	Off	UPS is fully charged or deeply discharged

There are 3 signal LEDs on the coordinator (12, see Figure 4 WLZent04, internal structure).

Colour	State	Meaning
Green	Flashing	The WirelessProfessional software is not running
Green	On	The WirelessProfessional software has been launched and is communicating with the device
Blue	Flashing	Radio traffic display

8 Tamper-proof operating system

The WirelessProfessional WLZent04 is equipped with an operating system that is set to read-only mode by default.



Important: This means that any changes made to the operating system will be lost after a restart.

In order to make permanent changes to the operating system, the operating system must first be set to read-write mode. (see chapter 9 MaintenanceMode)

To indicate which mode is currently being used by the operating system, different icons are displayed in the taskbar at the top of the screen.

Mode	Taskbar icon	Meaning
Read-Only		Changes to the operating system will be lost when restarting
Read-Write		Changes to the operating system are permanent



Note: Only one of the two icons is displayed at any given time.



Figure 22 Taskbar in Read-Only mode




Figure 23 Taskbar in Read-Write mode



Note: Switching between read-write and read-only modes ensures the operational and tamper-proof security of the system.

9 MaintenanceMode

In MaintenanceMode, permanent settings can be made to the operating system, such as permanently connecting to a Wi-Fi network.



Important: MaintenanceMode should only be used by trained personnel. Incorrect operation in maintenance mode may result in the WirelessProfessional WLZent04 becoming inoperable.

9.1 Starting MaintenanceMode

MaintenanceMode is launched via the System Tools Launcher (see chapter 12 System Tool Launcher).



Note: Before switching to MaintenanceMode, the data in the WirelessProfessional software must be saved by clicking the “Save system” button or by exiting the WirelessProfessional software.

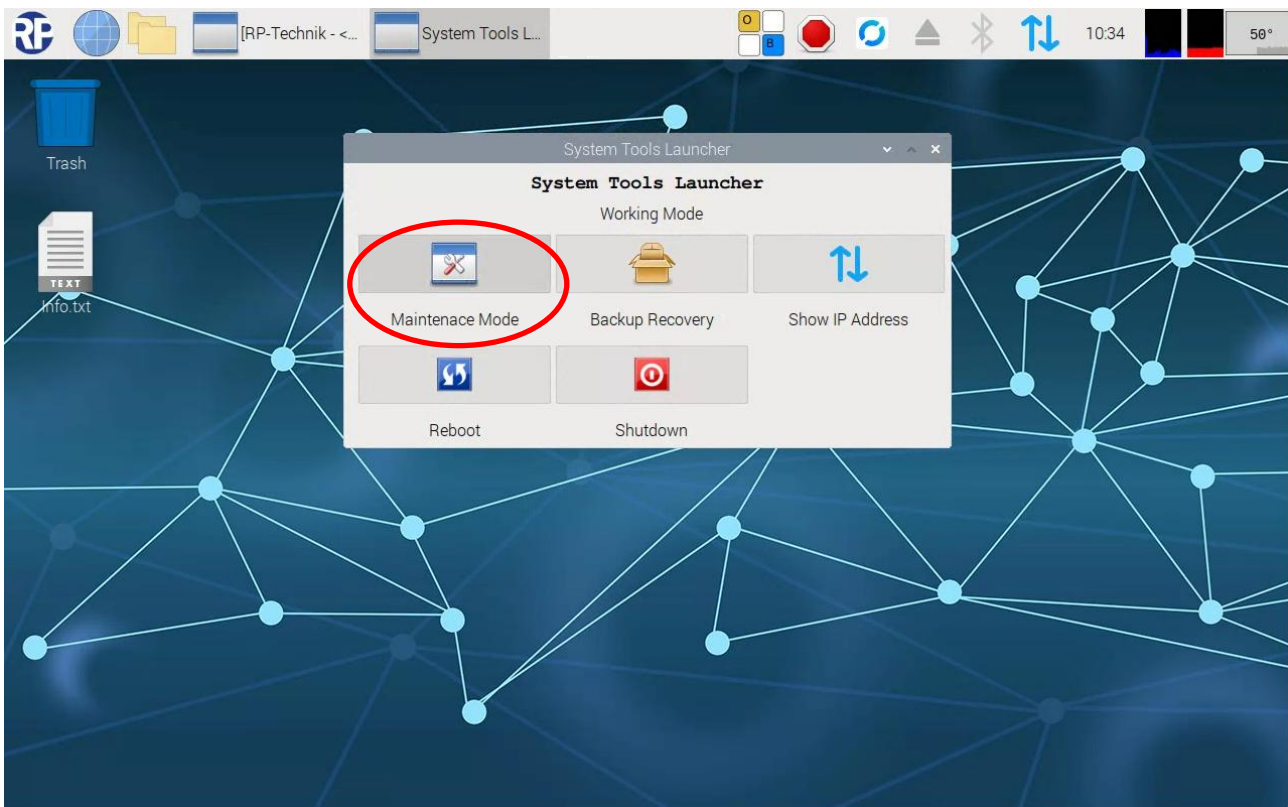


Figure 24 System Tools Launcher -> Maintenance Mode

After selecting the menu item, an “Info” window opens. By tapping or clicking on the “OK” button, the device switches to maintenance mode.

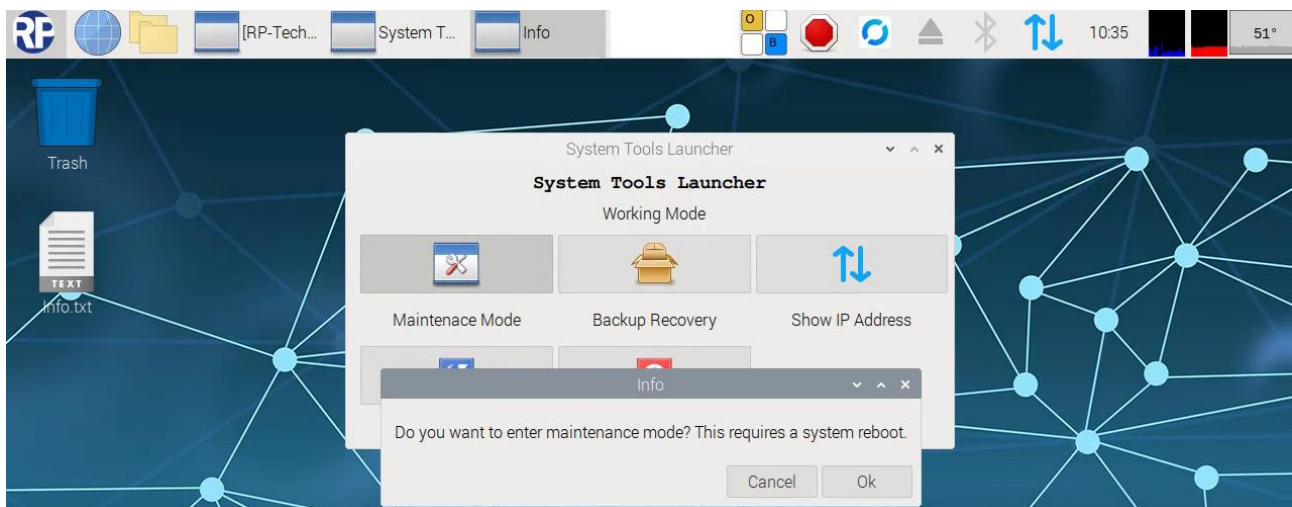


Figure 25 Confirming MaintenanceMode change

It takes approximately 15 seconds for the WLZent04 to begin restarting. The configuration is saved during this process. A remote connection may be lost in the process. Once the WLZent04 has restarted, the WLZent04 operating system is now in Read-Write mode. (see chapter 8 Tamper-proof operating system).



Figure 26 Desktop in MaintenanceMode



Note: The WirelessProfessional software does not start in MaintenanceMode.

9.2 Exiting MaintenanceMode

To exit, select 'Exit Maintenance Mode' via the System Tool Launcher (see chapter 12 System Tool Launcher). If a restart is performed as described in section 6.4 or a shutdown as described in section 6.5, the WirelessProfessional WLZent04 will restart in MaintenanceMode.

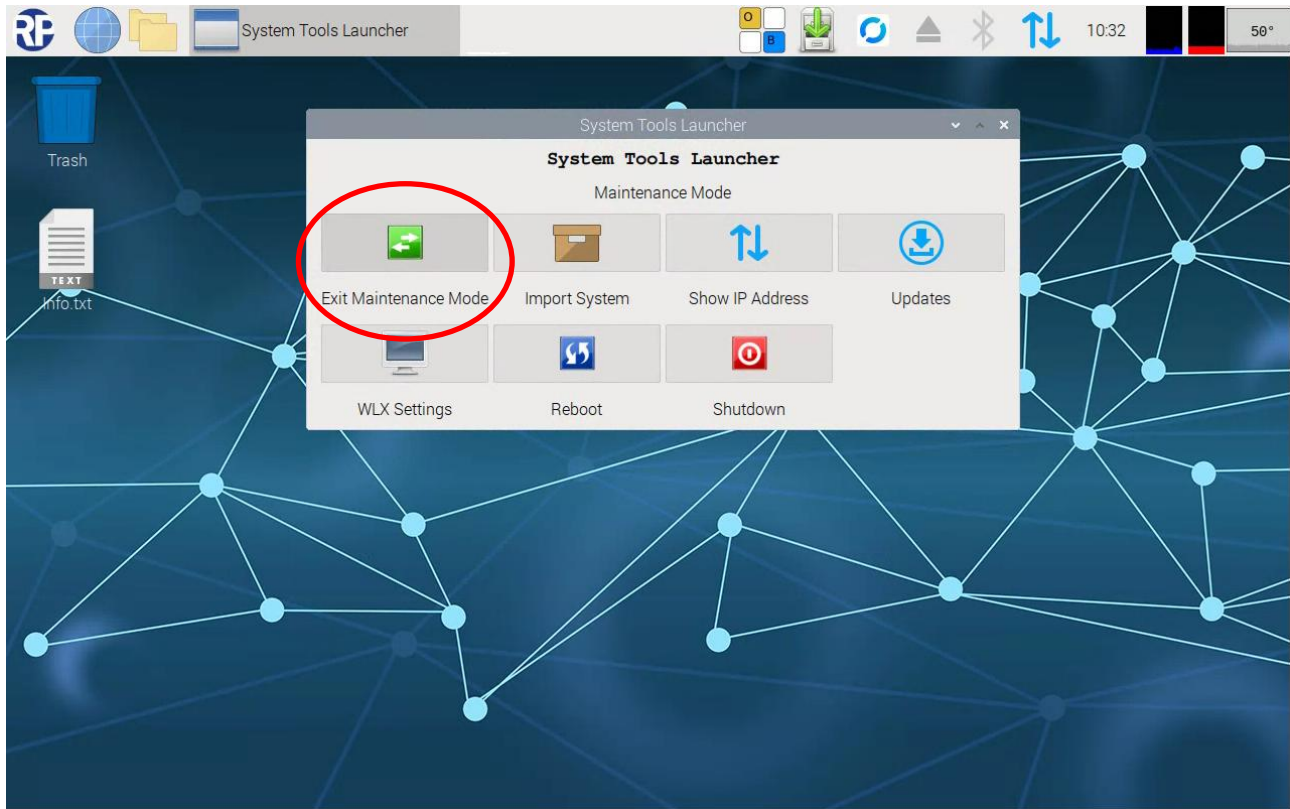


Figure 27 System Tools Launcher -> ExitMaintenanceMode

After clicking the button, it takes approximately 20 to 30 seconds for WLZent04 to restart. Afterwards, the WLZent04 is back in Read-Only mode and the WirelessProfessional software is restarted.

10 Setting the date and time

When delivered, the date and time are set to the time zone "Berlin, Paris, etc... (GMT+2)" if the delivery address is within Germany. If the delivery address for the device is outside Germany, the device will be set to the time zone of the country of delivery. The real-time clock with battery backup keeps the clock running even in the event of a power failure or if the WLZent04 is switched off.

Manual adjustment of the date and time is not provided for.



Note: If the time or date displayed by the WLZent04 differs from the actual time, the WLZent04 must be connected to the Internet. Once the Internet connection has been established, it takes approximately 1 minute for the WLZent04 to automatically retrieve the date and time from the time server on the Internet.



Note: An exhausted RTC battery can be recognised by the fact that, after restarting the WLZent04 in WirelessProfessional Logfile, a modification of the time is documented after starting the application. In this case, the RTC battery of the WLZent04 must be replaced. The steps for replacing the battery can be found in the maintenance schedule. This is stored as a PDF document in the folder `/media/rp/WLPROSAFE/manual/Wartungsplan_WLProfessional.pdf`.

After replacing the RTC battery in the WLZent04, the WLZent04 must be connected to the internet so that the internal clock can be reset correctly.

11 Adjusting backlighting

The brightness of the touch display backlight is the maximum brightness in the factory default setting. If necessary, the brightness of the backlight can be decreased.



Please note: It is not recommended to set the brightness to 0%, as the screen will then be completely dark and can no longer be operated. If the setting is made in MaintenanceMode, it will remain in place even after a hardware restart. Remote operation is still possible, see section 16 Remote access via RustDesk.

To adjust the backlight brightness, select *Start Menu->Accessories->Brightness*.

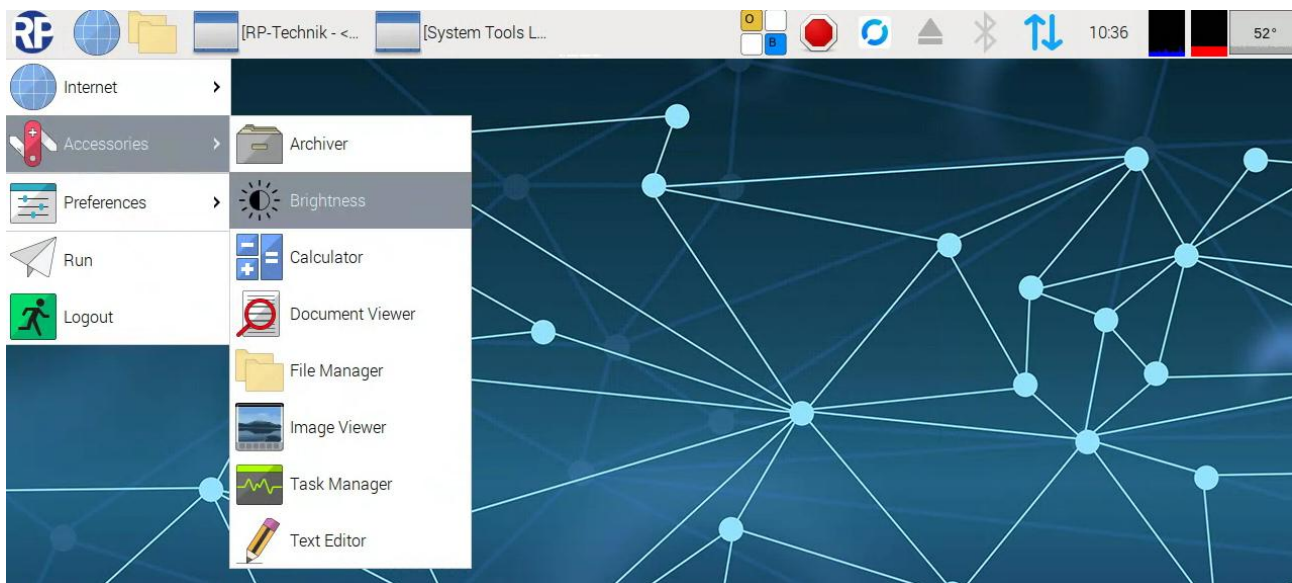


Figure 28 Start menu -> Accessories -> Screen brightness

The “brightness” window opens. The brightness can be adjusted using the slider. To do this, tap or click on the slider and hold it down so that the slider can be moved. The “brightness” window is closed using the ‘X’ in the top right-hand corner.

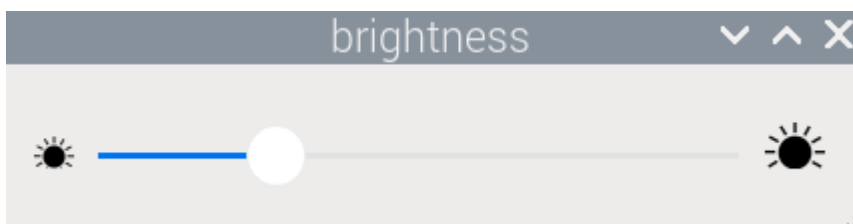


Figure 29 Screen “brightness”

12 System Tool Launcher

The System Tools Launcher is available in both Read-Only Mode and Maintenance Mode and can be accessed by tapping or clicking on it via the taskbar. It offers different functions depending on the mode.



Note: After booting up or restarting, the System Tools Launcher starts automatically. The start-up process takes about 1 minute. Only then will the System Tools Launcher appear (see chapter 12 System Tool Launcher).



Note: The System Tools Launcher can be minimised, but not closed.




Figure 30 System Tools Launcher in the taskbar

The following functions are available in Read-Only mode:

Maintenance Mode (see chapter 9.1 Starting MaintenanceMode)

Backup restoration (see chapter 17.4 Recovering long-term backup data)

IP address display (see chapter 15.3 Displaying connection information)

Restart (see chapter 6.4.1 Software restart)

Shutdown (see chapter 6.5 Shutdown)



Important: It is not possible to carry out several functions at the same time. If you tap or click on a function whilst another function is still active, that function will be carried out as soon as the previous one is closed.

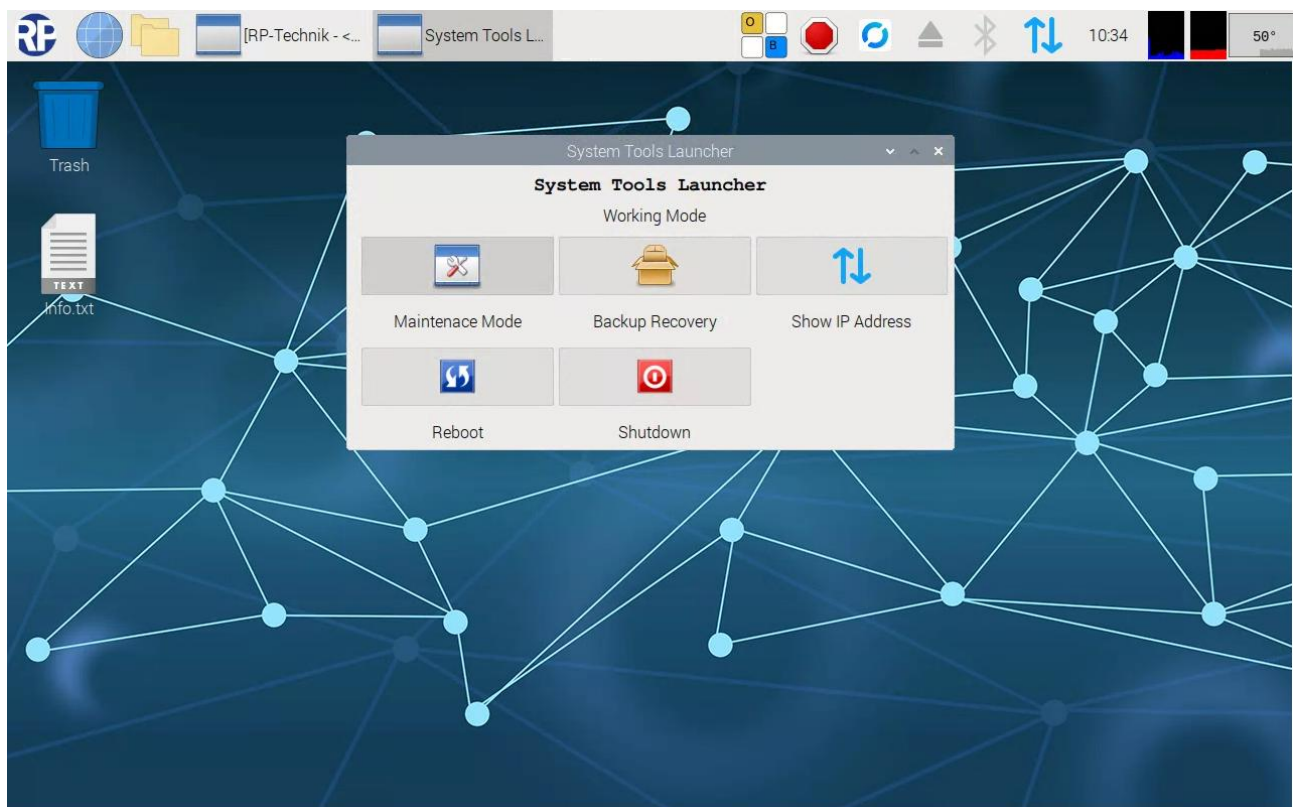


Figure 31 System Tools Launcher in read-only mode

The following functions are available in MaintenanceMode:

Exit MaintenanceMode (see chapter 9.2 Exiting MaintenanceMode)

Import system (see chapter 18 Transferring systems to WLZent04)

Display IP address (see chapter 15.3 Displaying connection information)

Updates (see chapter 21 Updates to the operating system and WirelessProfessional software)

WLX Settings Tool (see chapter 13 WLX Settings Tool)

Restart (see chapter 6.4.1 Software restart)

Shut down (see chapter 6.5 Shutdown)



Important: It is not possible to carry out several functions at the same time. If you tap or click on a function whilst another function is still active, that function will be carried out as soon as the previous one is closed.

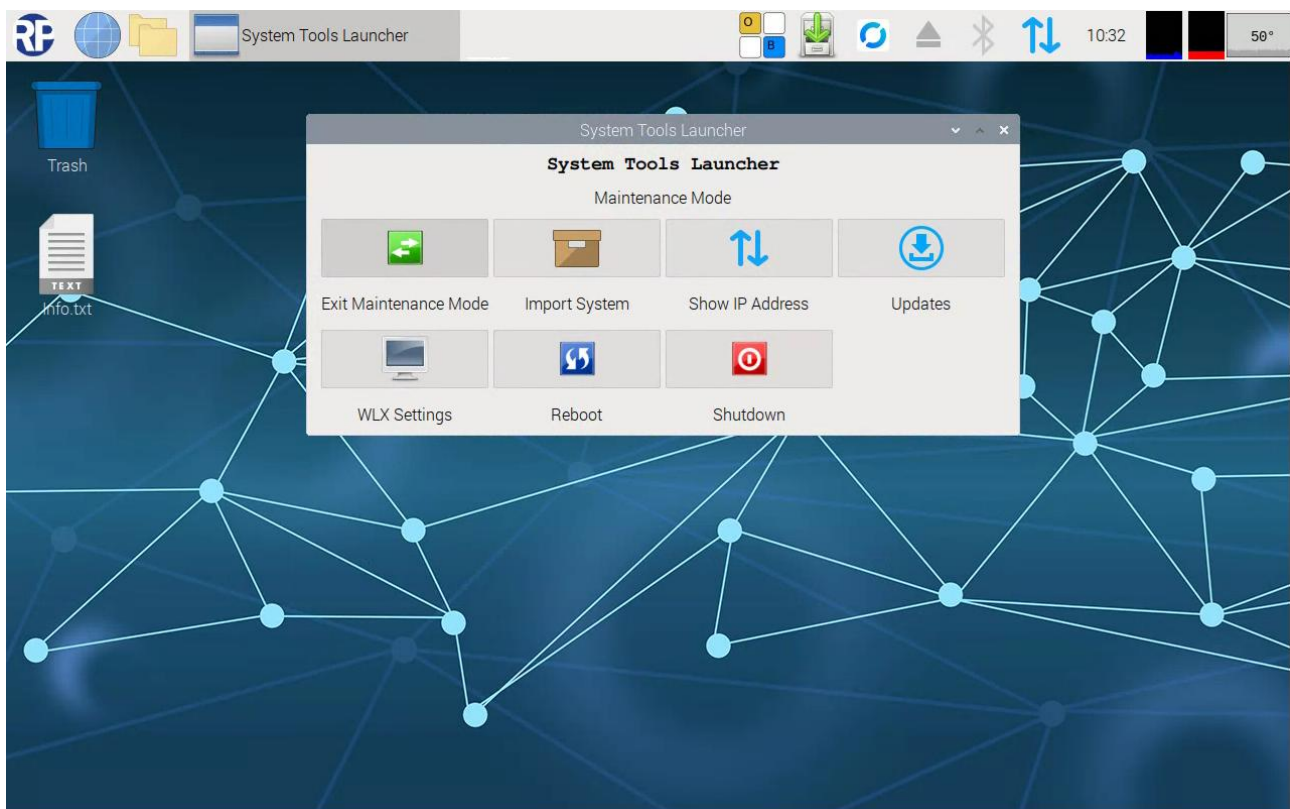


Figure 32 System Tools Launcher in MaintenanceMode

13 WLX Settings Tool

The WLX Settings Tool allows settings to be adjusted for some components. It is only available in Maintenance Mode and can be accessed via the System Tools Launcher (see chapter 12 System Tool Launcher).

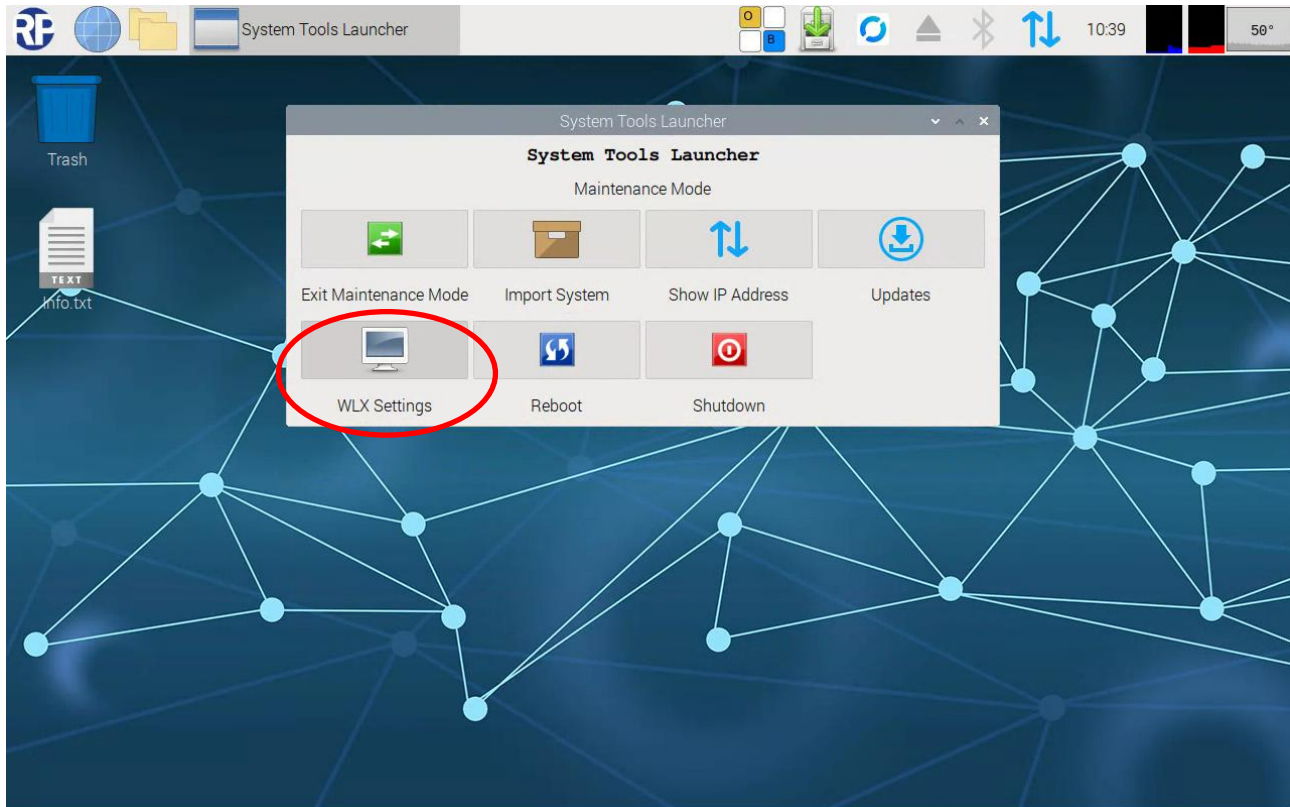


Figure 33 System Tools Launcher -> WLX settings

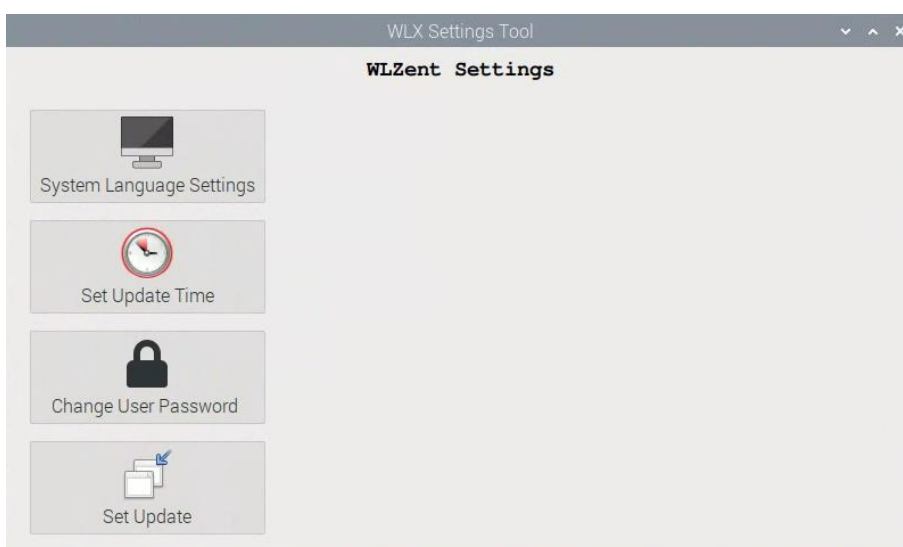


Figure 34 WLX Settings Tool

13.1 System Language Settings

This menu item allows you to switch the language of the Linux operating system between German and English.



Figure 35 WLX Settings Tool: Language setting

The language can be changed using the “Change” button. The currently selected language is displayed above the “OK” button. This is set for the OS when the “OK” button is pressed. The WLX Settings Tool can be closed by clicking on the “X” in the top right-hand corner. The selected language will be adopted for the OS as soon as a restart is performed.

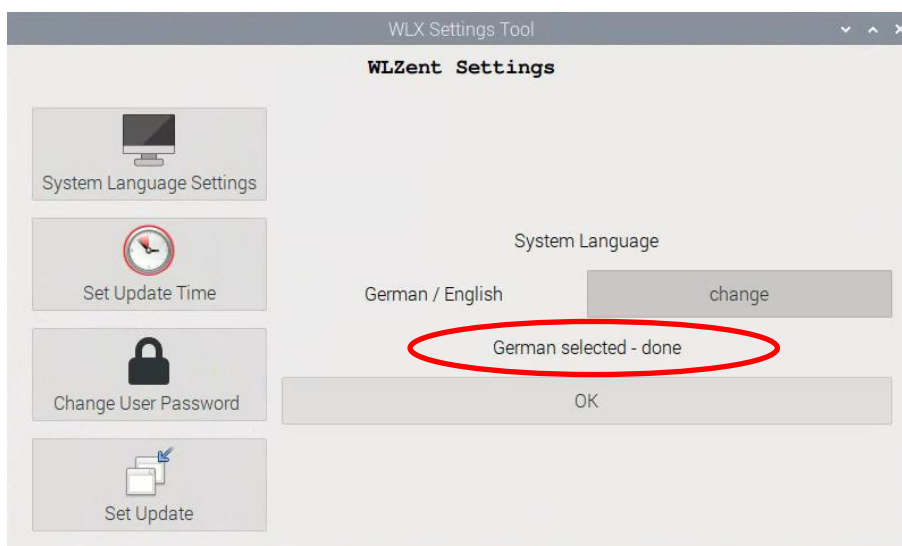


Figure 36 WLX Settings Tool: Language setting applied

13.2 Set Update Time

This menu item can be used to set the date and time at which updates are checked for.

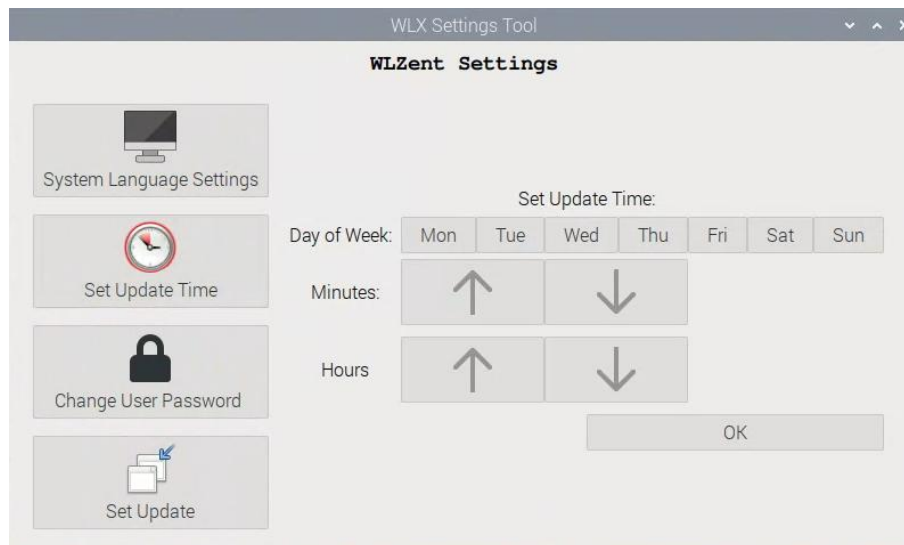


Figure 37 WLX Settings Tool: Setting for checking for updates

“Day of Week” determines the day on which updates are checked for. Use the arrow keys to select 00, 15, 30 or 45 for “Minutes”. For “Hours”, it can be set from 0 to 23. The set time is applied to the OS when the “OK” button is pressed. The WLX Settings Tool can be closed by clicking on the “X” in the top right-hand corner.

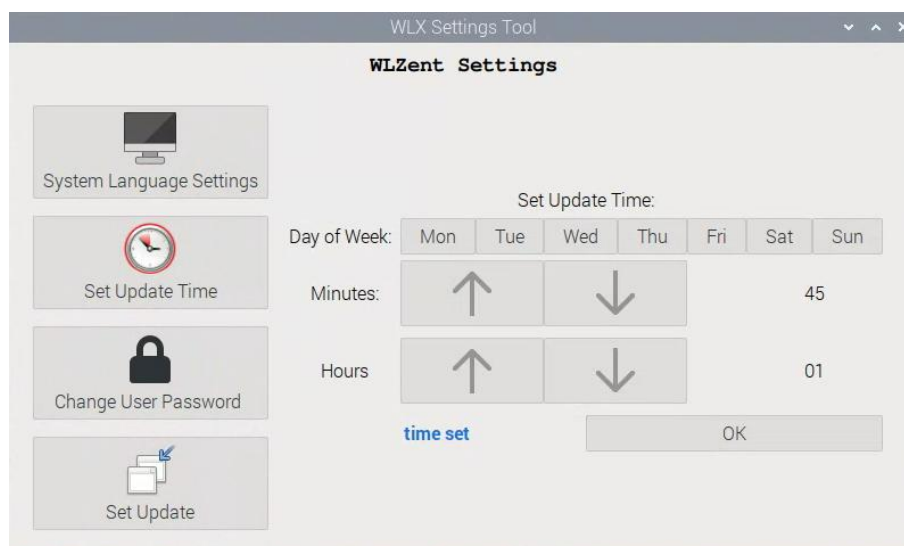


Figure 38 WLX Settings Tool: Setting for checking for updates applied



Note: The automatic download and installation of software updates require an active internet connection for the WLZENT04.

13.3 Change User Password

This menu item can be used to change the user password for WLZent04.

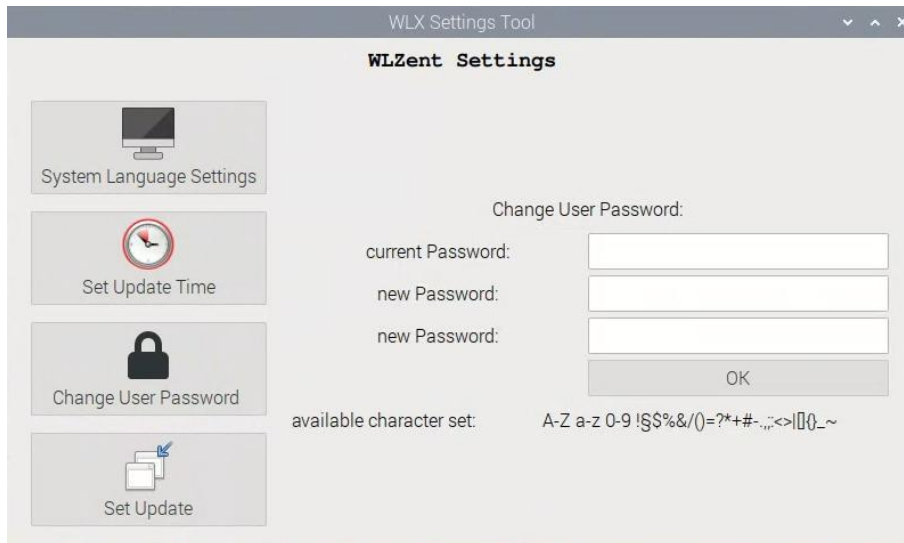


Figure 39 WLX Settings Tool: Changing user password

Enter the current password for WLZent04 in the “current Password:” text field. Enter the new password in the two text fields labelled “New password:”. The entry is accepted by clicking the “OK” button. After successful transfer, “successfully done” will be displayed in the ‘WLX Settings Tool’ window. The WLX Settings Tool can be closed by clicking on the “X” in the top right-hand corner.



Note: The password must be at least 8 characters long.

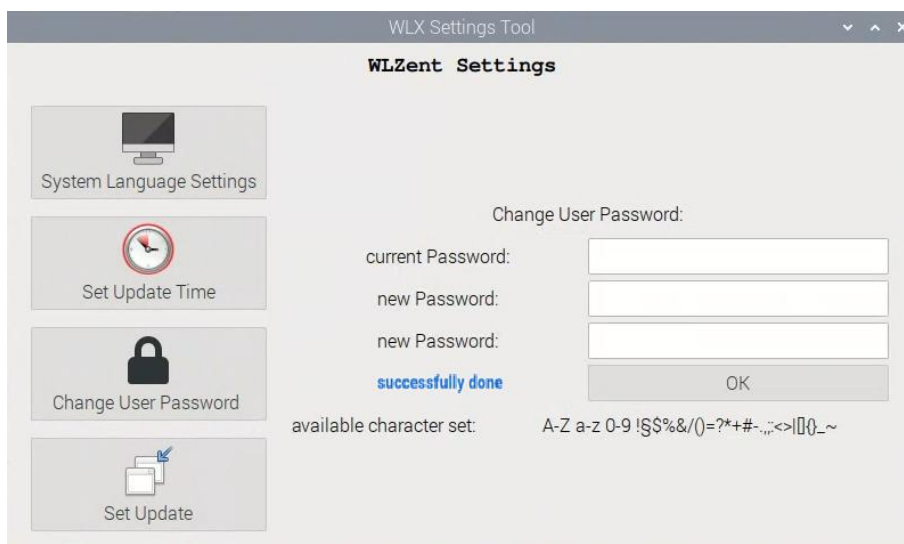


Figure 40 WLX Settings Tool: User password change completed



Important: Password changes must be documented in such a way that the password information cannot be lost.

13.4 Set Update

This menu item can be used to set whether and which updates are installed automatically. WL Pro Updates include updates for the WirelessProfessional software. OS updates include updates for the operating system.

By ticking the respective boxes, you can specify which updates are to be downloaded and installed automatically. Tap or click the “OK” button to apply the selection. Alternatively, the WLX Settings Tool can be closed by clicking the “X” in the top right-hand corner.

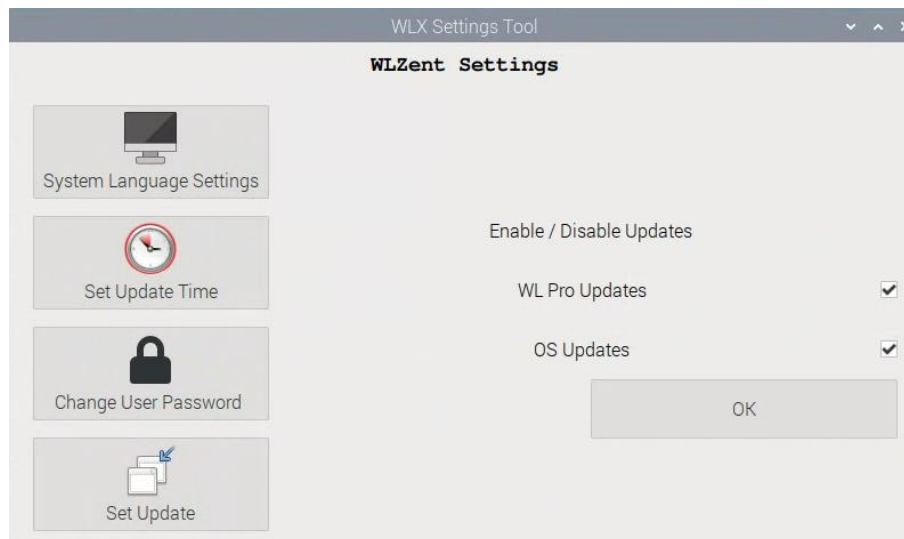


Figure 41 WLX Settings Tool: Set Update



Note: The automatic download and installation of software updates require an active internet connection for the WLZENT04.

14 Bluetooth

The WirelessProfessional WLZent04 has a Bluetooth interface that allows input devices such as keyboards to be connected wirelessly to the WLZent04. The Bluetooth interface is not activated in the delivery state.



Note: For a permanent connection, the operating system must first be set to Read-Write mode.
(see chapter 9 MaintenanceMode)

14.1 Turning on Bluetooth

To turn on the Bluetooth interface, tap the Bluetooth icon in the taskbar. A small context menu will then appear, in which you should tap on “Turn On Bluetooth”.

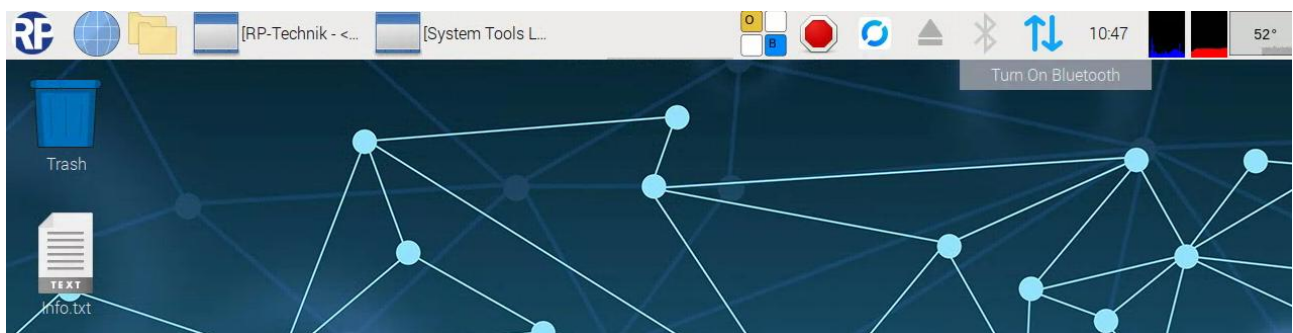


Figure 42 Enabling the Bluetooth taskbar

When the Bluetooth interface is activated, the blue Bluetooth icon is displayed on the taskbar.




Figure 43 Bluetooth taskbar enabled

14.2 Disabling Bluetooth

To disable the Bluetooth interface, tap the Bluetooth icon in the taskbar. Then tap on “Turn Off Bluetooth” in the context menu that appears.

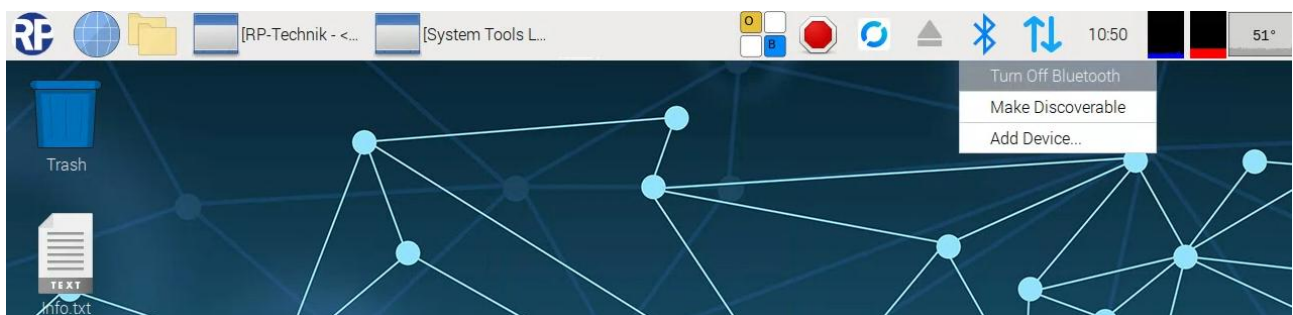


Figure 44 Disabling the Bluetooth taskbar

If the Bluetooth interface is disabled, the Bluetooth symbol is displayed again as in Figure 42 Enabling the Bluetooth taskbar.

14.3 Pairing a device via Bluetooth

To pair a Bluetooth device with the WirelessProfessional WLZent04, tap the Bluetooth icon on the taskbar. Next, tap on "Add Device..." in the context menu.

The "Add New Device" window opens and displays all devices within range and in pairing mode.

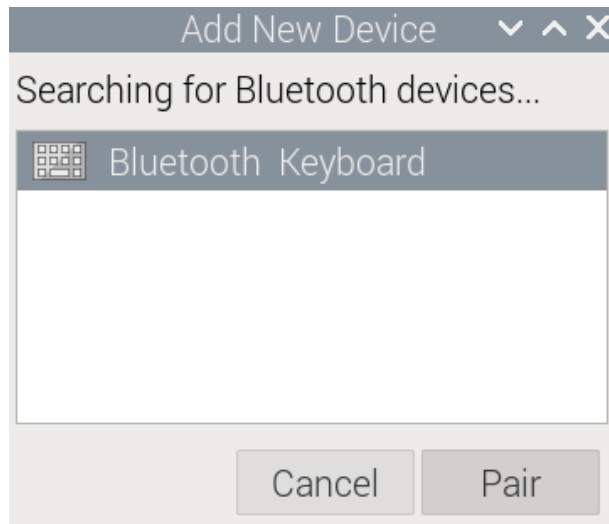


Figure 45 Bluetooth keyboard within range

In the following example, a Bluetooth keyboard is within range. Tap the desired device and then the "Pair" button to pair the device. You must type in the code displayed on the keyboard and then confirm it by pressing Enter on the keyboard.

Please enter code '190428' on 'Bluetooth Keyboard'




Figure 46 Verification Code

When the devices are successfully paired, this will be indicated.

Connection successful




Figure 47 Pairing successful

When you tap the Bluetooth icon in the taskbar, the paired device is listed in the context menu.

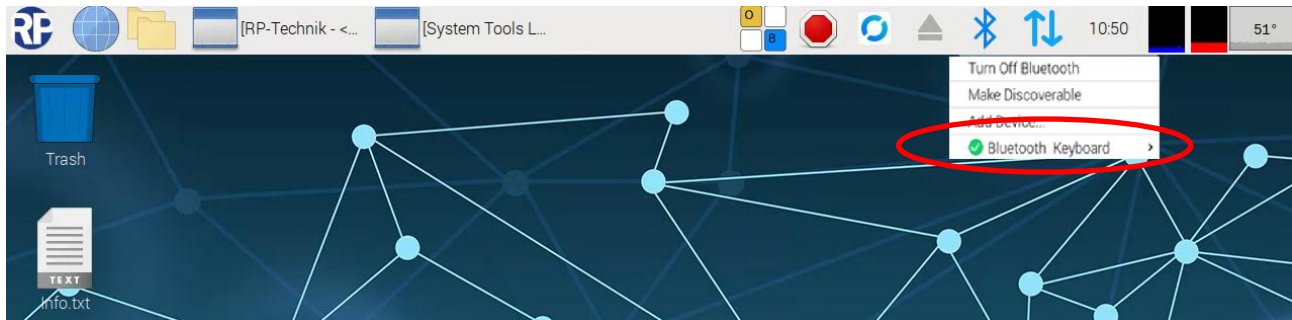


Figure 48 WLZent04 with paired Bluetooth device

14.4 Disconnecting a paired device

To disconnect a device paired with the WirelessProfessional WLZent04 via Bluetooth, tap the Bluetooth icon on the taskbar. Tap on the corresponding Bluetooth device in the context menu. Another context menu will then appear.

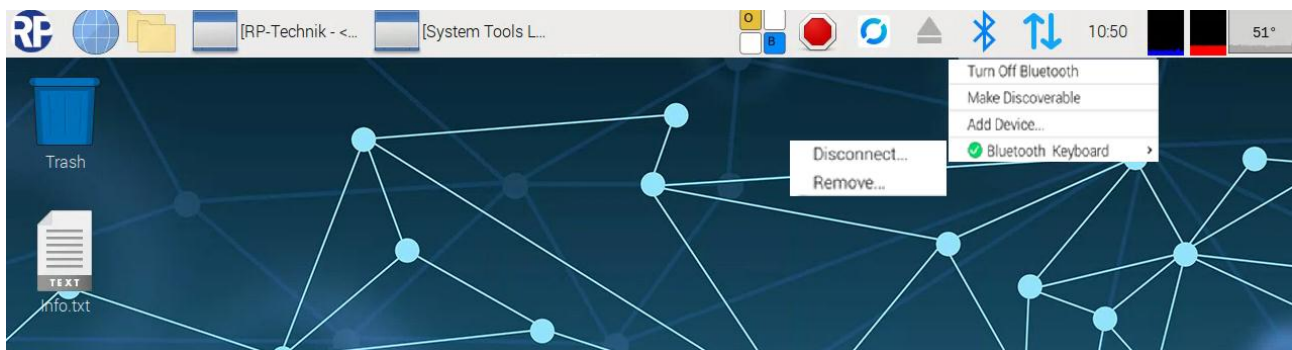


Figure 49 Disconnecting/removing Bluetooth device

The “Disconnect...” button disconnects the Bluetooth device from the WLZent04. However, the WLZent04 retains the connection information so that the device can be reconnected without entering pairing mode.

The “Remove...” button disconnects the Bluetooth device from the WLZent04 and deletes the connection data. If the device is to be reconnected, it must be paired again.

15 Network configuration

The WirelessProfessional WLZent04 has an externally accessible RJ-45 socket (LAN connection) (15, see Figure 4 WLZent04, internal structure) and a WLAN interface, which can be used to connect the WirelessProfessional WLZent04 to a network.



Note: If both the Ethernet socket and the WLAN interface are used, Internet access for the WLZent04 must be provided via the Ethernet socket.

15.1 Connecting to a cable network

The WirelessProfessional WLZent04 is set to DHCP in its factory default state. As soon as a cable from a network that has a DHCP server is plugged in, the WLZent04 automatically receives an IP address.



Important: Operation of the WLZent04 in a network without a central management component, such as a router, is not supported.

When a connection has been established, this is indicated in the taskbar by the “Up/down arrow” icon.




Figure 50 Taskbar with Ethernet connected

If there is no connection to a cable network, the “Up/down arrow” icon is displayed with a red cross.



Figure 51 Taskbar with Ethernet not connected



Note: If the WLZent04 is connected to a Wi-Fi network at the same time, the arrow symbol will not be displayed.

15.1.1 Static IP address

To assign a static IP address, right-click on the *network icon* -> *Advanced Options* -> *Edit Connections* to access the settings.



Important: If a static IP address is to be assigned permanently, the operating system must first switch to Read-Write mode. (see chapter 9 MaintenanceMode)

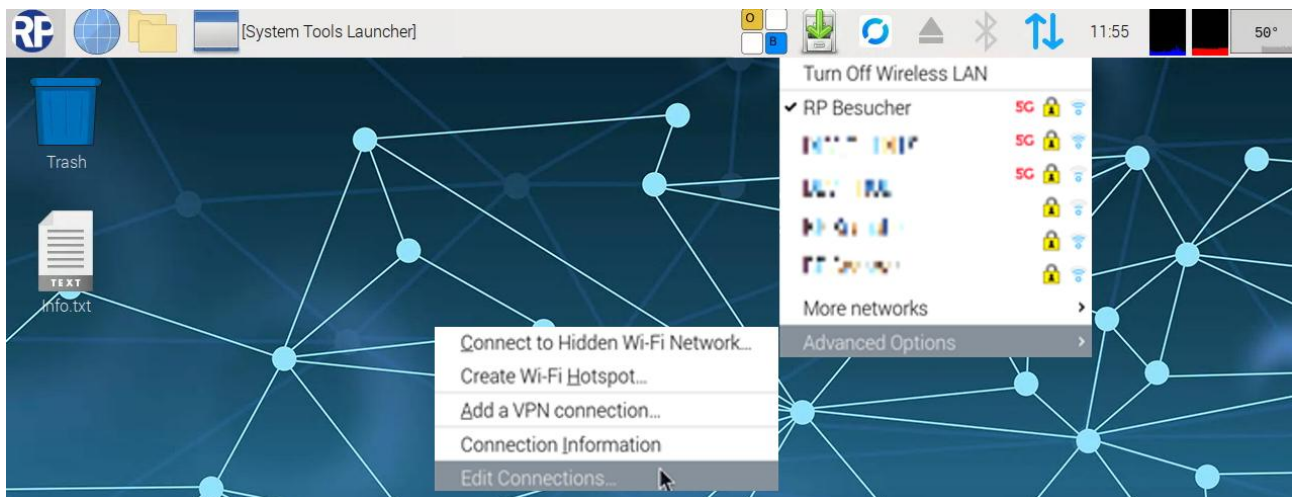


Figure 52 Editing connections

This will open the “Network Connections” window. The “Wired connection” is selected by clicking on it, and the settings can then be opened using the button with the gear icon.

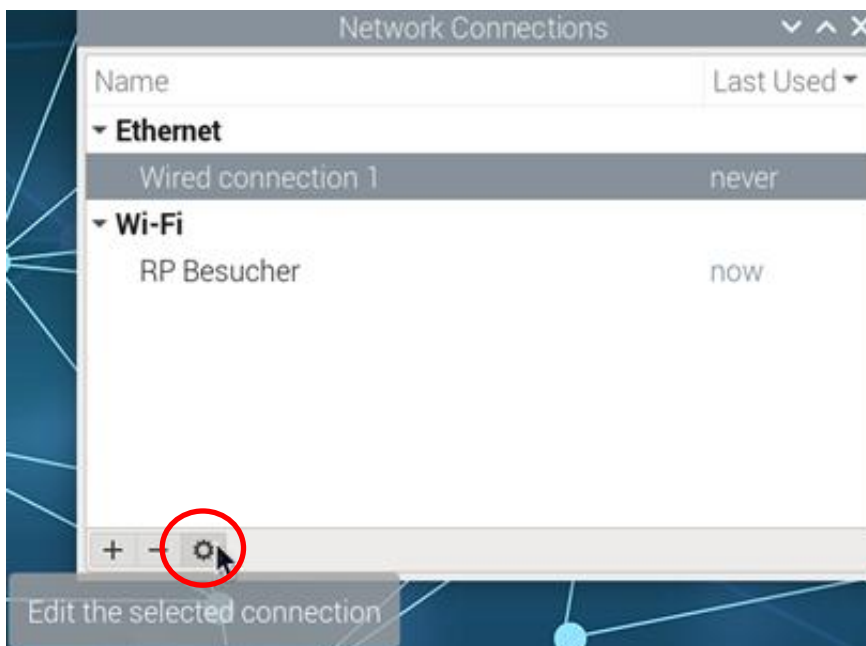


Figure 53 Editing selected connection



Note: Setting a static IP address for the WLAN interface is identical to setting one for the LAN interface; the only difference is that “Wireless network” must be selected as the interface instead of “Ethernet”.

Select the desired tab (in this example, IPv4 settings) for which a static IP is to be set. Tap the “Method” drop-down box and select “Manual”.

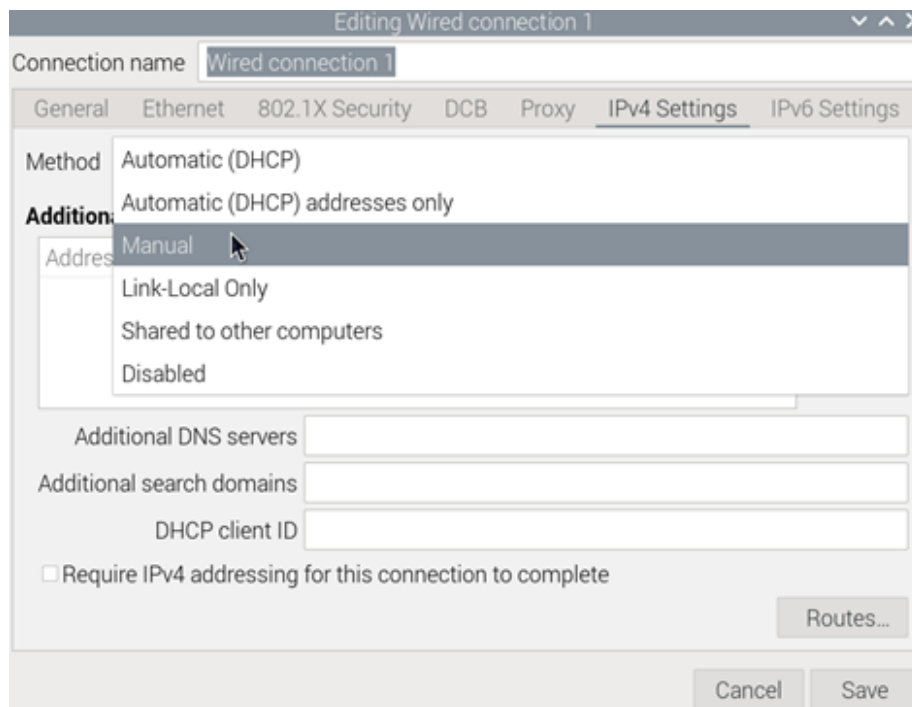


Figure 54 Network settings for wired connection

After selecting the method, tap on “Add.”

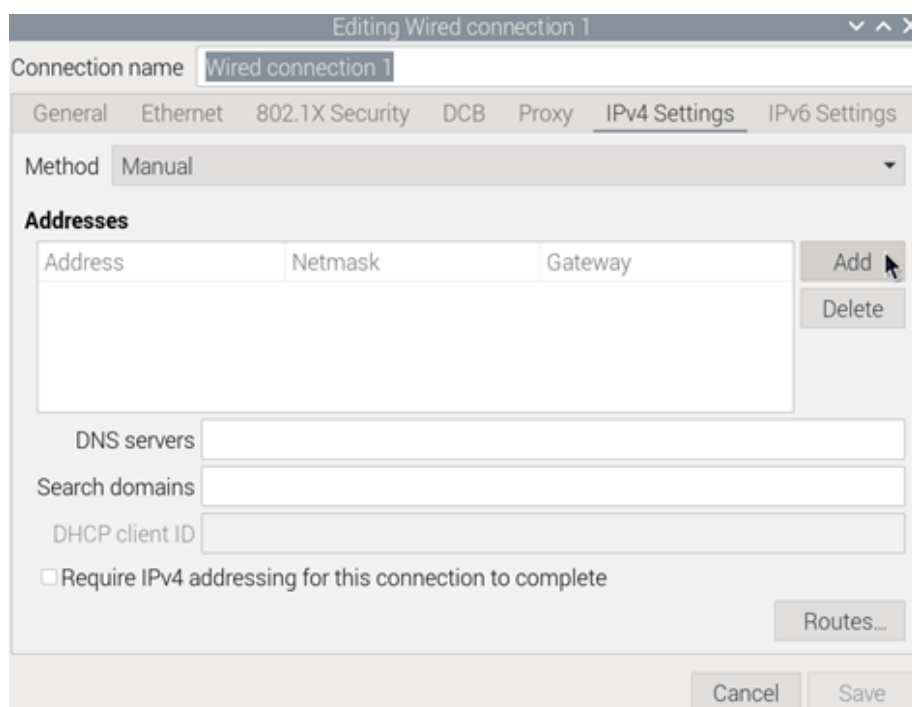


Figure 55 Adding a static IP address

The on-screen keyboard opens automatically. Once the relevant fields have been filled in, the settings are applied by clicking the “Save” button at the bottom right. Afterwards, the window can be closed using the “X” in the top right-hand corner.

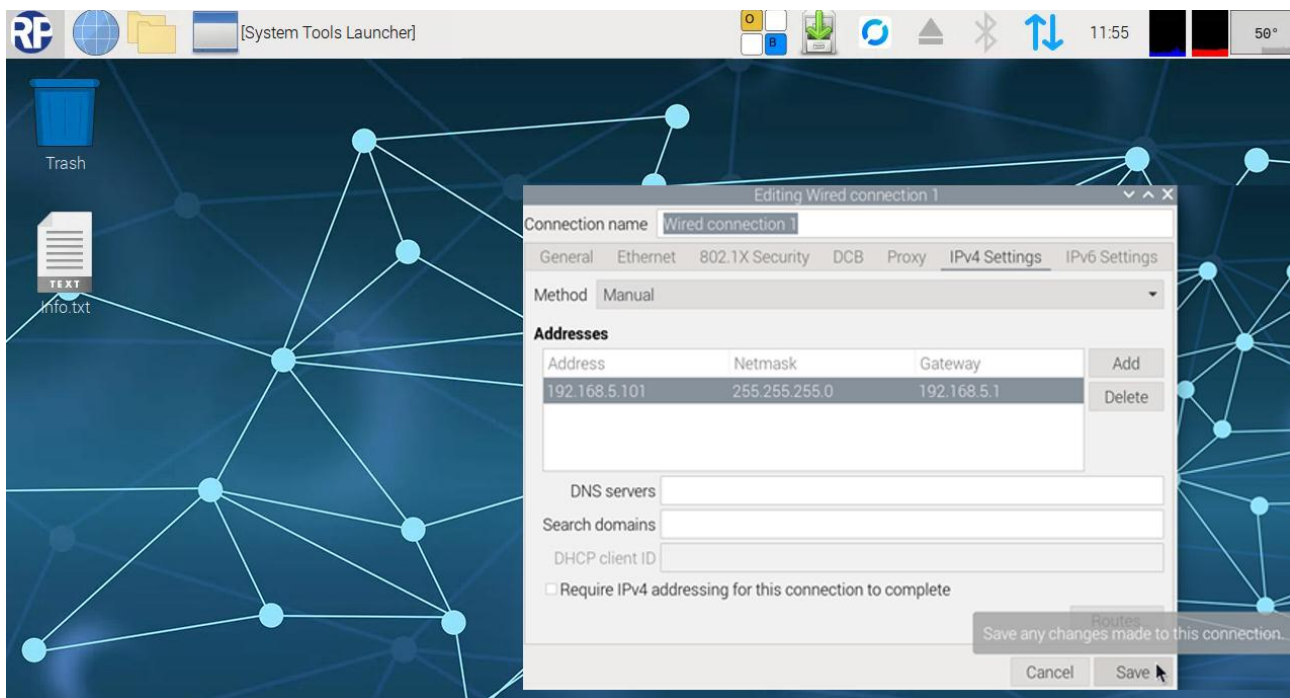


Figure 56 Entering static IP address

Field name	Meaning
Address	Desired static IP address
Network mask	Desired subnet mask
Gateway	IP address of the router/gateway



Important: Please contact your network administrator for the parameters to be set.



Note: It may happen that the static IP address is only accepted by the network adapter after disconnecting and reconnecting the network cable.



Note: If the settings were made in Maintenance Mode, exit this mode now.

15.2 Connecting to a wireless network

The WLAN interface is activated when the WirelessProfessional WLZent04 is delivered. Wireless networks within range are displayed when you tap the arrow icon in the taskbar.



Important: If the connection data is to be stored permanently, the operating system must first switch to Read-Write mode. (see chapter 9 MaintenanceMode)

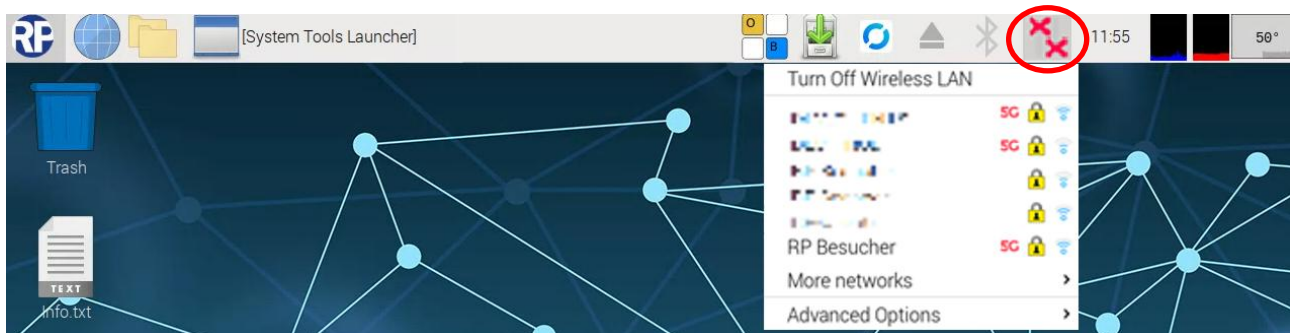


Figure 57 Available Wi-Fi networks

Tap the wireless network to which the WLZent04 is to connect. If it is an encrypted network, a window with the name of the selected wireless network in the title will open. The network key for the wireless network must be entered and confirmed by tapping “Connect”.

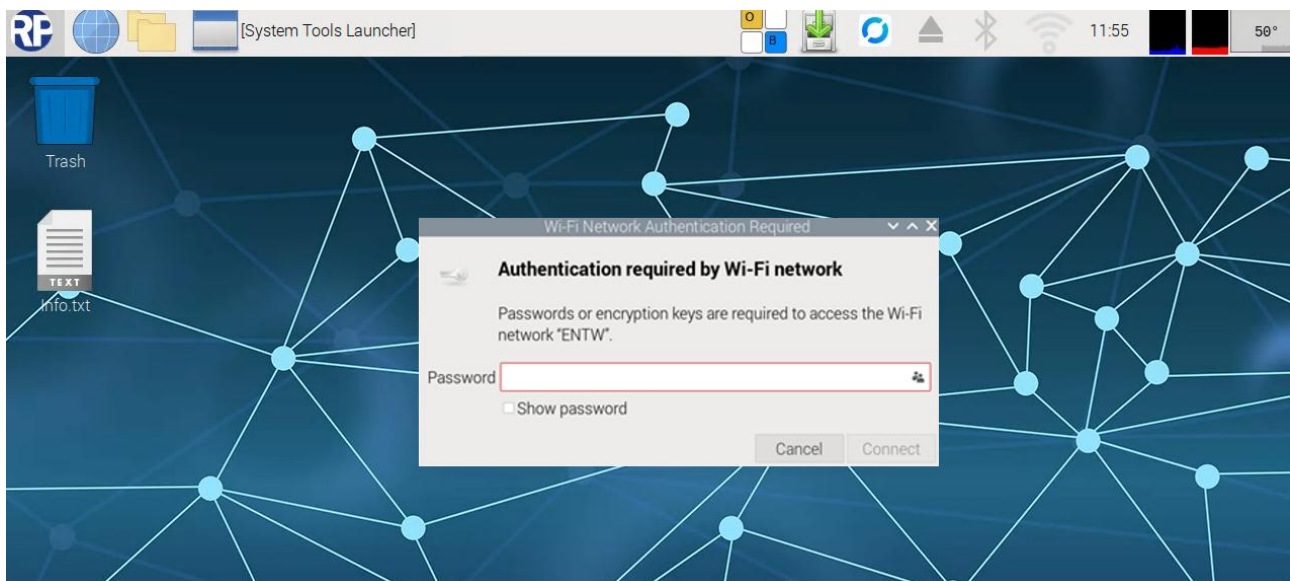


Figure 58 Entering the Wi-Fi key

Once the connection has been successfully established, the arrow icon disappears from the taskbar and is replaced by the Wi-Fi symbol. There is also a tick to the left of the connected wireless network. The WirelessProfessional WLZent04 is now connected to the wireless network.



Note: If the settings were made in Maintenance Mode, exit this mode now. After restarting, the WirelessProfessional WLZent04 will automatically connect to the wireless network.

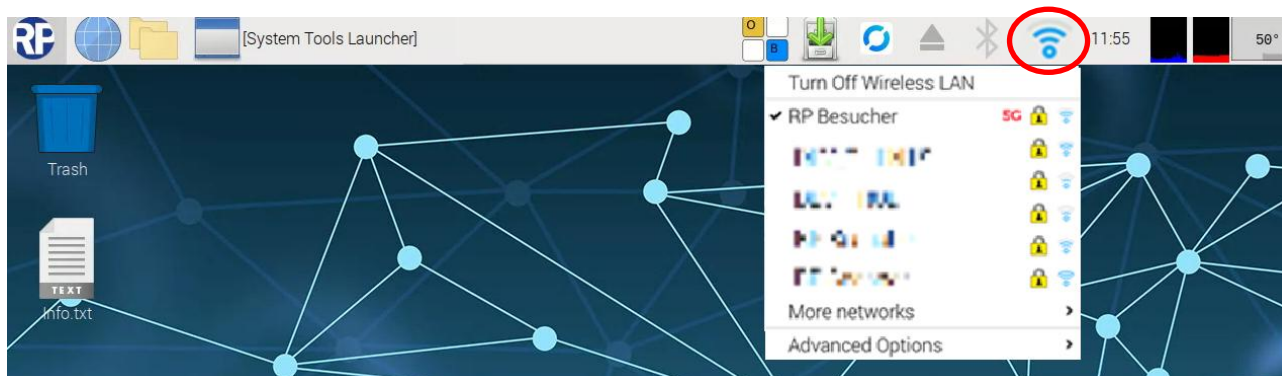


Figure 59 WLZent04 with connected WLAN

15.3 Displaying connection information

To find out the IP address assigned by the DHCP server, open the 'IP Addresses' option via the System Tools Launcher (see chapter 12 System Tool Launcher).

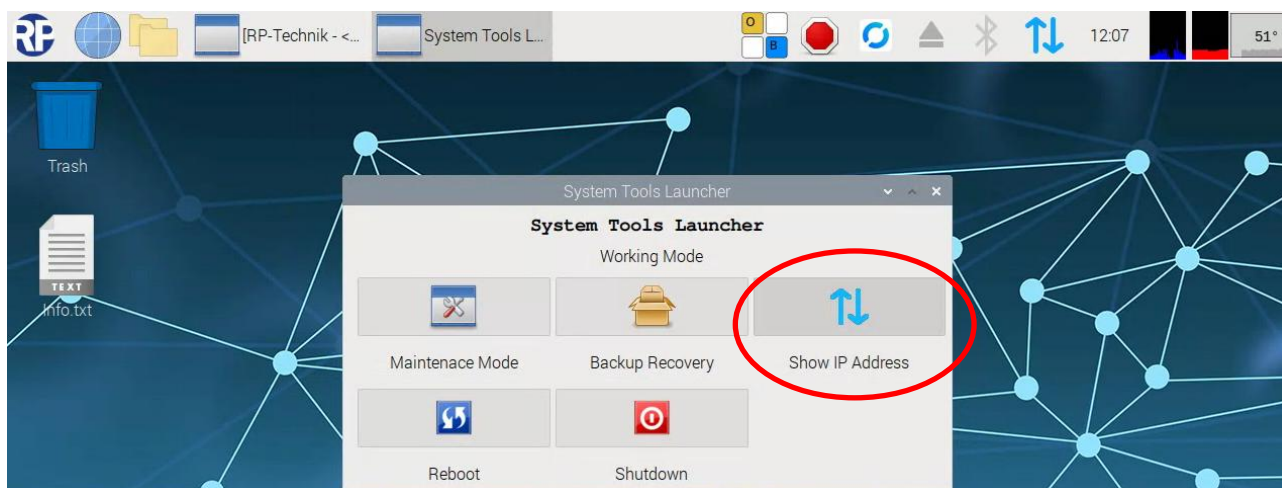


Figure 60 System Tools Launcher -> IP addresses display

IP-Viewer			
IP-Viewer			
	wlan0		eth0
IP-Address:	192.168.30.233	IP-Address:	--
Netmask:	255.255.254.0	Netmask:	--
Gateway:	192.168.30.1	Gateway:	--
MAC-Address:	2C:CF:67:79:FB:E7	MAC-Address:	2C:CF:67:79:FB:E6
IPv6-Address	fe80::cd68:f181:e45b:9942	IPv6-Address	--

Figure 61 IP address display

16 Remote access via RustDesk

RustDesk remote access software is installed on the WirelessProfessional WLZent04.

A connection is possible both online via an internet connection (see 16.3) and offline (see 16.4) from a local LAN.

16.1 Establishing a connection

RustDesk must be started on the device (client) that is to be used to establish the connection to WLZent04.

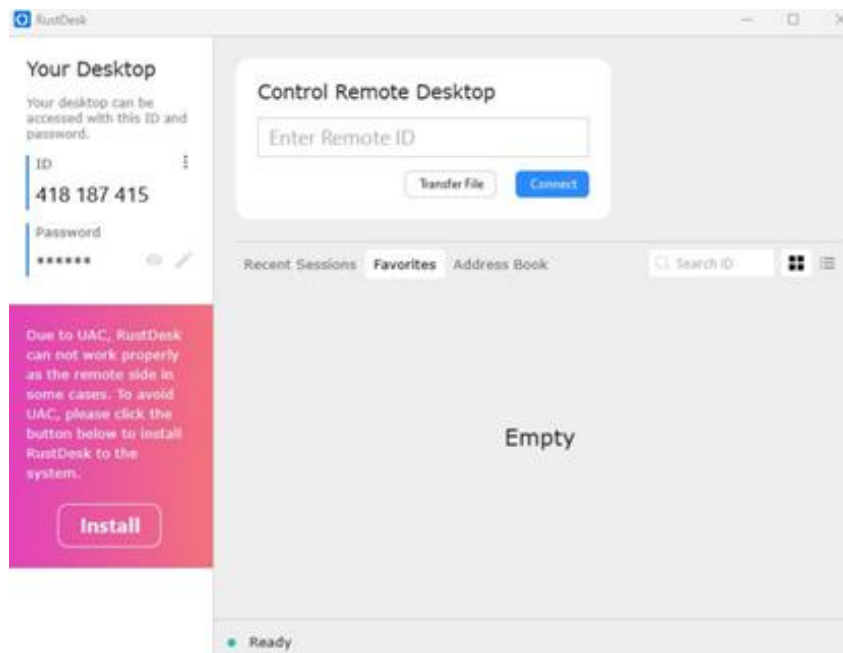


Figure 62 RustDesk interface on a client device



Important: The RustDesk ID for WLZent04 is unique for each device and is noted on the enclosed WLZent04 information sheet (see Figure 63 Information sheet) together with the password.

WL Infoblatt - Wichtige Informationen zu Ihrem WL-Gerät

Bitte beachten: Dieses Blatt enthält Passwörter und weitere wichtige Informationen, die Sie für die Inbetriebnahme Ihrer WLZENT04 und für die Wartung des Betriebssystems benötigen. Bewahren Sie diese Informationen daher bitte sorgfältig auf. Geänderte Passwörter sollten notiert und aufbewahrt werden, da diese im Falle von Verlust nicht zurückgesetzt werden können!

Wichtig: Für die **Wireless-Professional-Software** gelten weiterhin die Standard-Passwörter 1111 (Haustechniker) und 2222 (Installateur).

Hinweis zum Handbuch: Die Bedienungsanleitungen der WLZENT04 und der Wireless-Professional-Software sind auf dem Gerät unter **/media/rp/WLPROSAFE/manual** abgelegt. Sie erreichen sie durch Starten des Dateixplorers über das Icon in der Taskleiste (1) (siehe Abbildung unten). Im Dateixplorer ist eine Verknüpfung "manual" (2) vorhanden, die direkt den Ordner **/manual** öffnet. Alternativ können die Handbücher von der Internetseite des Herstellers als PDF heruntergeladen werden.

WL Info Sheet - Important information regarding your WL device


Please note: This sheet contains passwords and other important information which you will need during the commissioning of your WLZENT04 and for the maintenance of the operating system. Store this information therefore carefully. Changed passwords should be noted down and kept, as they cannot be reset in case of loss!

Important: For the **Wireless Professional software** itself, the standard passwords 1111 (Technician) and 2222 (Installer) remain valid.

Note regarding the user manuals: All user manuals for WLZENT04 and Wireless-Professional-Software are stored in the folder **/media/rp/WLPROSAFE/manual** on the device. To access them, launch the File Explorer using the icon in the taskbar (1) (see screenshot below). In the file explorer, you will find a shortcut "manual" (2) which directly navigates to the **/manual** folder. You can also download the manuals from the manufacturer's website.

(1) Dateixplorer / File Explorer

(2) Verknüpfung / shortcut "manual"

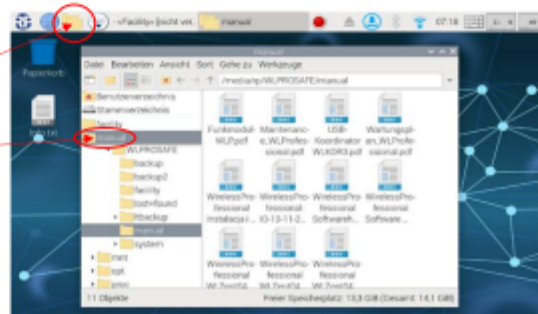

Auftragsnr./Order no.: 1234567890

```
Product Type:      WLZent4
Host name:         WLZent4-bcebd9
Local User:        rp
- Password:        fskVCe4n

RustDesk
- ID:              1755497597
- Password:        3FeVtVfL
- Server ID:       connect.rp-group.com
- Server Key:      1v8tdJeQjEendFHSCsoDNCYxjbfDQqz+cfbwiw0Um8=

Local RustDesk Server
- Server ID:       WLZent4-bcebd9 (*)
                  oder IP-Adresse dieses Geräts / or IP address of this device
- Server Key:      fs6e3IFuThPcoqETy4BCaERQHwppqP9ND+3OH9vYOMpk=

MAC Addresses
- MAC Wi-Fi:       d8:3a:dd:bc:eb:da
- MAC LAN:         d8:3a:dd:bc:eb:d9

Cloud activation code: 8B3NRF

(*) Erfordert DNS-fähigen lokalen Router zur Namensauflösung. /
    Requires local DNS-capable router for hostname resolution.
```

Figure 63 Information sheet

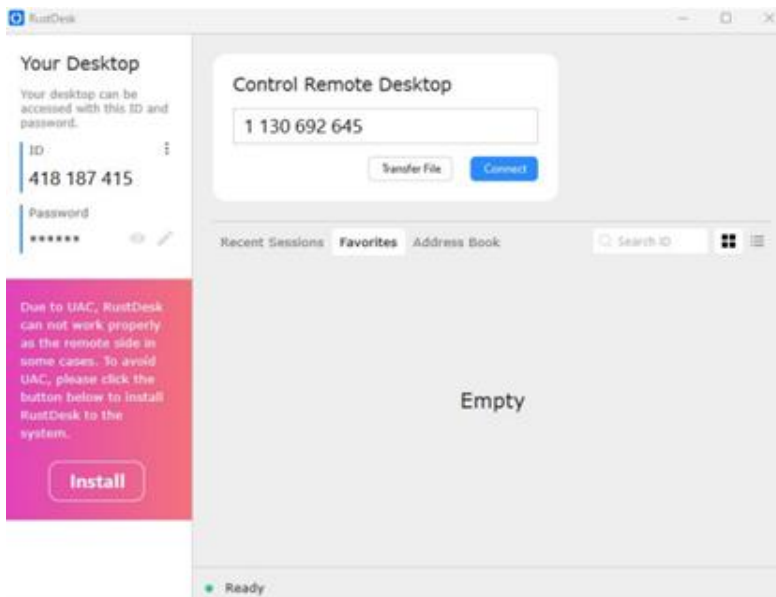


Figure 64 RustDesk with connection data

After entering the ID, click on the “Connect” button. The connection to WLZent04 is then established. A prompt for the password will appear

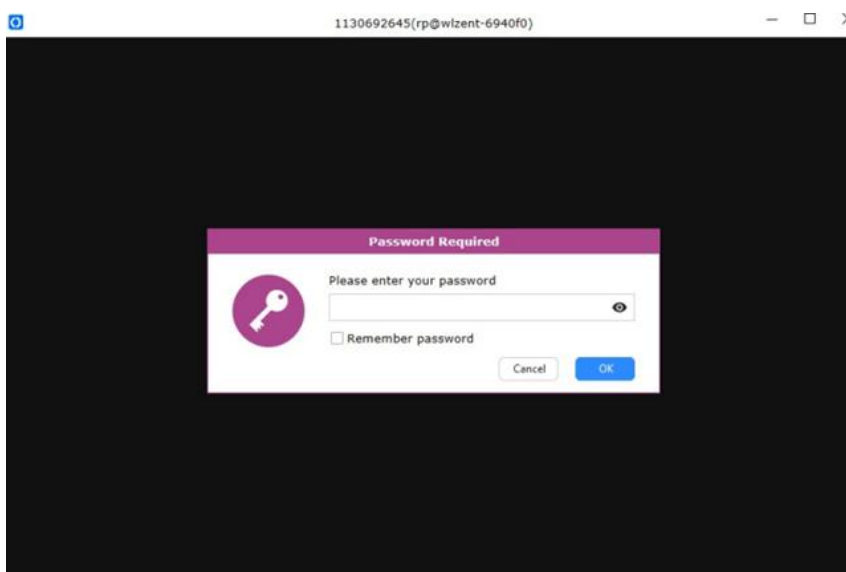


Figure 65 RustDesk password entry

After entering the password, the WLZent04 display appears.



Figure 66 RustDesk Remote Connection

16.2 Terminating a connection

To terminate the remote connection, close the RustDesk window.



Figure 67 Disconnecting RustDesk Remote

RustDesk remembers the most recently used connections so that the ID does not have to be re-entered the next time you log in.

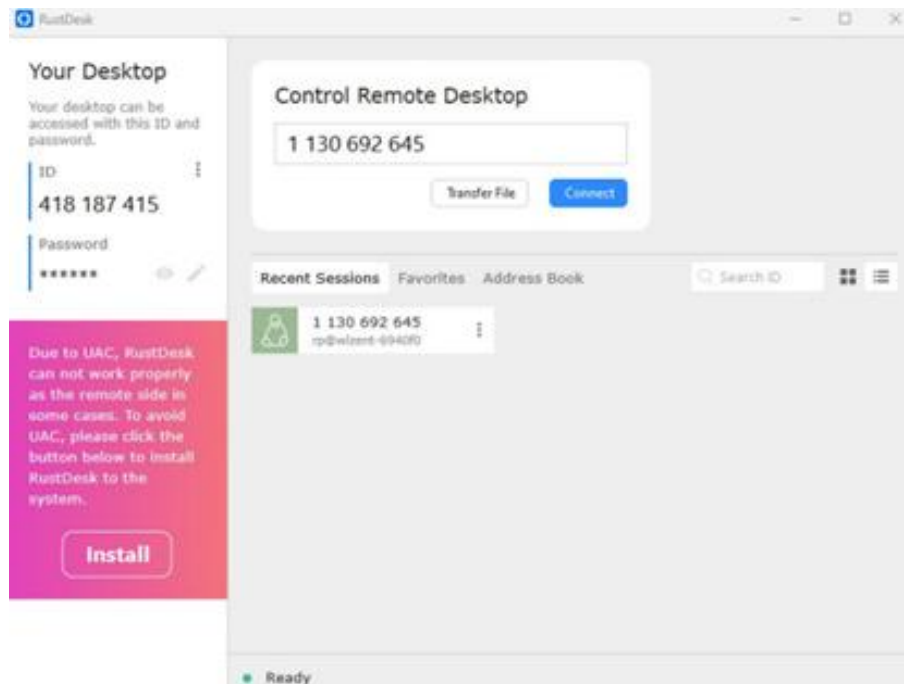


Figure 68 RustDesk interface with recently used connections

16.3 Online connection

The WLZent04 is preset to use a private RustDesk ID server located in Europe when delivered. This enables a connection from the Internet. It is therefore necessary to adjust the ID server on the client device that is to be used to establish the connection to WLZent04.



Note: The access data for the ID server can be found on the enclosed WLZent04 information sheet (see Figure 63 Information sheet).

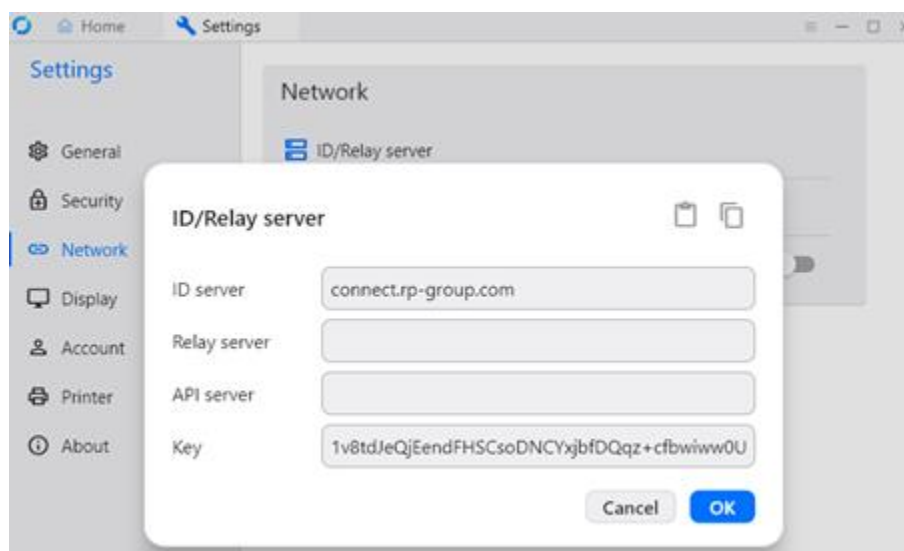


Figure 69 Rustdesk ID/Relay server setting for a client device

16.4 Offline connection

The WLZent04 has an integrated RustDesk ID server. This allows you to establish a RustDesk connection from the local LAN without an internet connection.



Important: To do this, the WLZent04 must be integrated into the network by the network administrator.



Important: The WLZent04, which is to serve as an ID server/connection server, must be assigned a fixed IP address by the DHCP service.

The WirelessProfessional WLZent04 cannot be accessed via the integrated RustDesk ID server in its factory default state. It is therefore necessary to adjust the ID server/connection server on WLZent04.



Note: The access data for the ID server/connection server can be found in the information sheet (see Figure 63 Information sheet).



Note: For a permanent connection, the operating system must first be set to Read-Write mode. (see chapter 9 MaintenanceMode)

Rustdesk is opened via Start Menu->Internet->RustDesk.



Figure 70 startmenü>Internet>RustDesk

The settings can be accessed via the three-dot menu next to the ID.

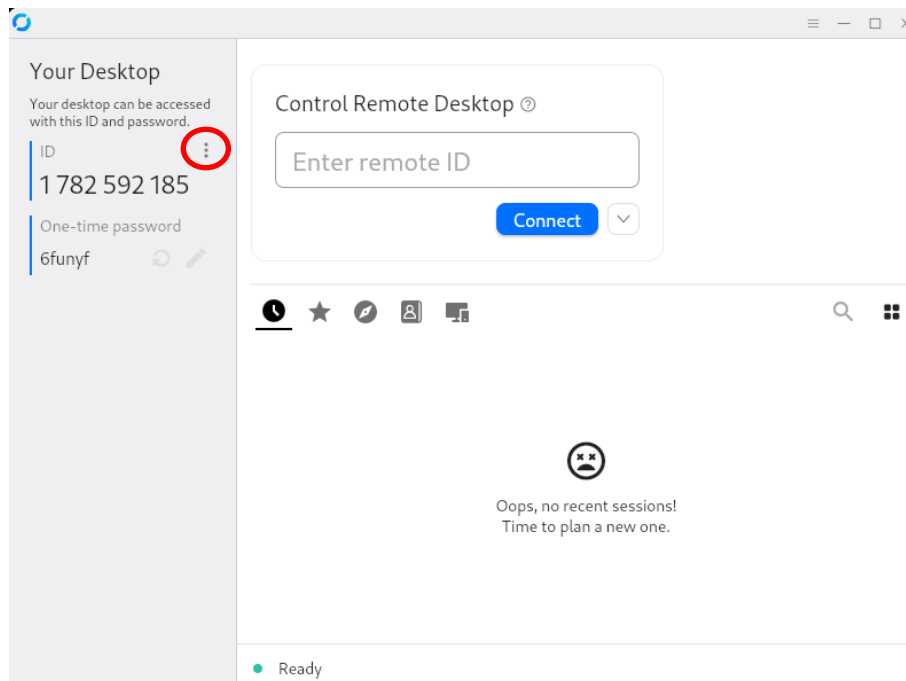


Figure 71 Open Rustdesk settings

Tap the “Unlock network settings” button. You will be prompted to enter the local user password. This can be found on the information sheet (see Figure 63 Information sheet).

After entering the password, tap the “Authenticate” button.

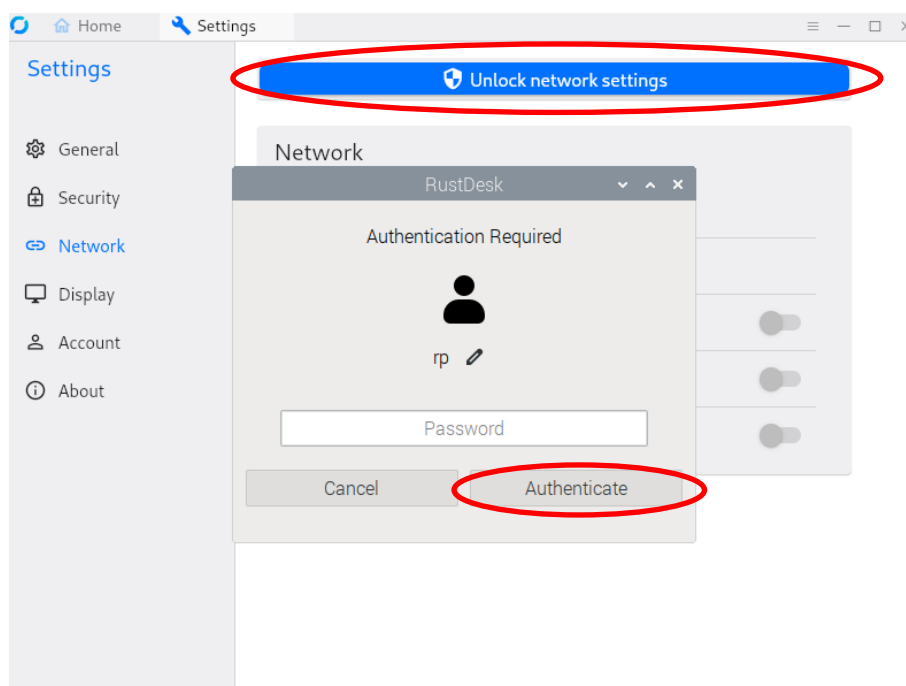


Figure 72 Unlock Rustdesk network settings

Tap on "ID/Relay Server."

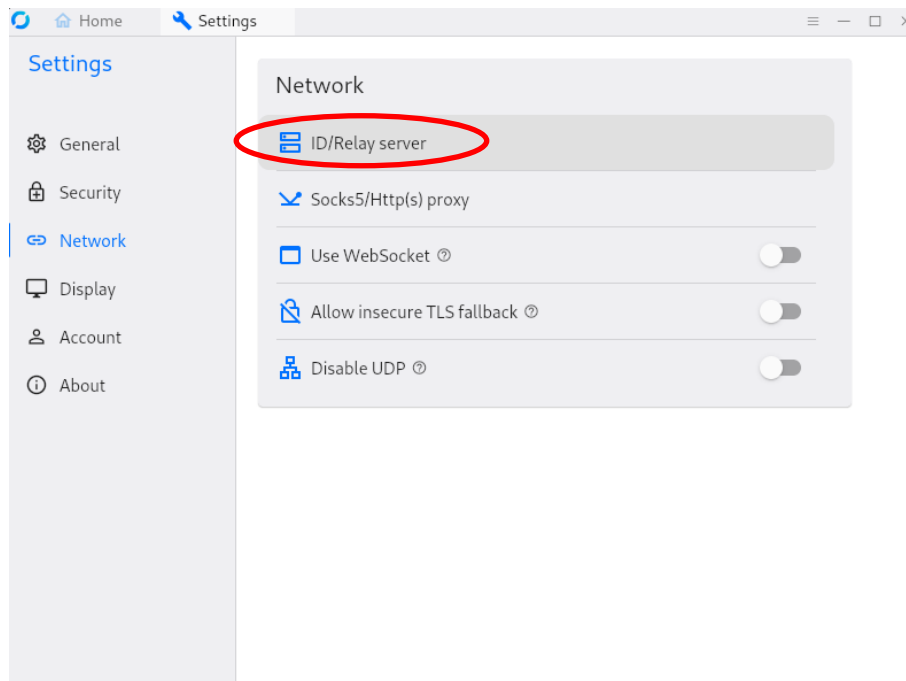


Figure 73 Rustdesk ID/Relay-Server

On WLZent04, which is to be used as an ID server/connection server, enter the IP address of WLZent04 as the RustDesk ID server. Copy the Own Rustdesk server public key from the 'info.txt' file on the desktop.

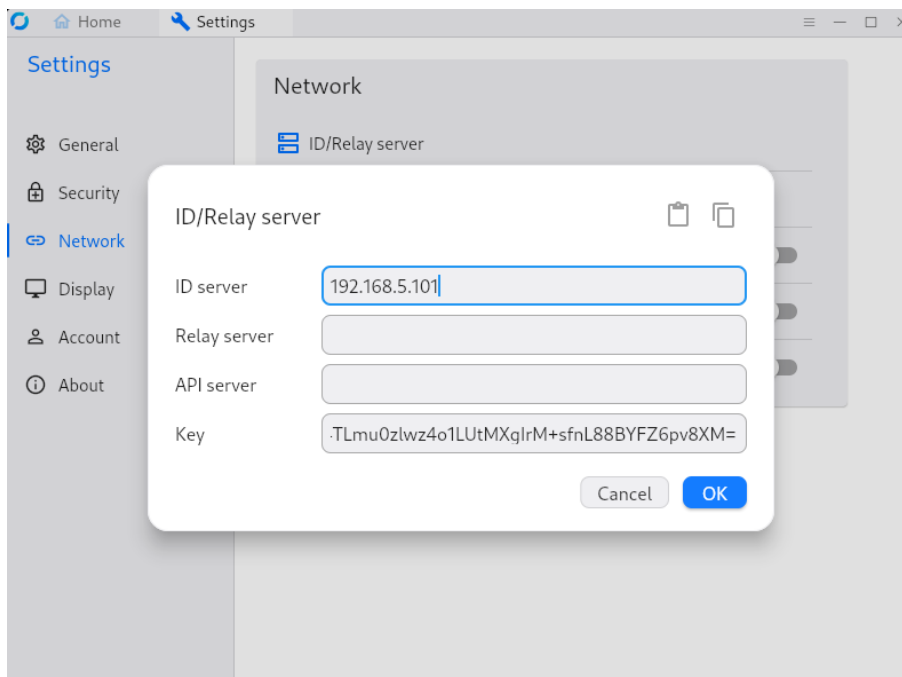


Figure 74 Rustdesk ID/Relay server setting on WLZENT04



Important: RustDesk can only use one ID server. If the connection data of the internal RustDesk ID server is entered, the device can no longer be accessed from the internet.

The IP address of the WLZENT04 must be entered for all client devices that are to use the WLZENT04 as an ID server/connection server.

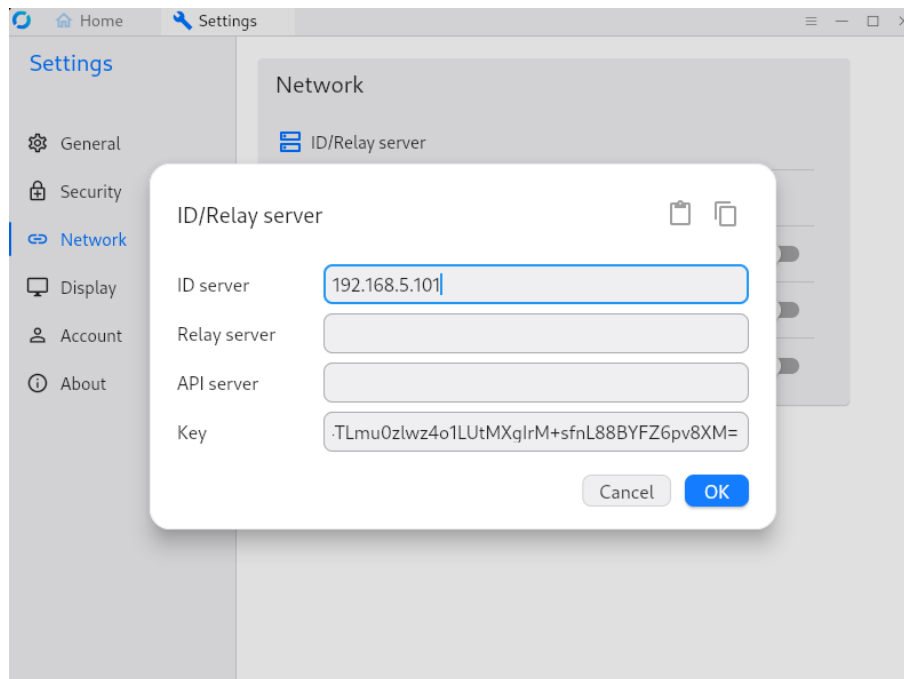


Figure 75 Rustdesk ID/Relay server setting for a client device

If a local DNS server is operated, the host name of WLZent04, which provides the ID server/connection server, can be used instead of the IP address.



Note: The host name is included on the information sheet (see Figure 63 Information sheet).



Figure 76 Rustdesk ID/Relay server Setting up a client device with DNS server with host name entered as ID server



Note: Both the WLZent04 and all devices that are to connect to the WLZent04 must connect to the WLZent04's internal RustDesk ID server.



Note: If there are several WLZent04 or devices with an integrated RustDesk ID server in the same network, the ID server of one of these devices must be used by all of them.

16.5 Changing the RustDesk connection password

The RustDesk connection password for WLZent04 cannot be changed.

16.6 RustDesk connections from WLZent04 to other devices

If a Desk Remote connection is established from WLZent04 to another device, the use of an external mouse is recommended. This is also necessary to exit RustDesk's full-screen mode if it has been activated.

17 Data backup

All files containing personal data are stored on WLZent04 in encrypted form only.

17.1 Automatic backup

The WirelessProfessional WLZent04 copies relevant data every 4 hours from the volatile main memory to the internal backup USB stick installed in the WLZent04. This ensures that an encrypted data backup is maintained.



Note: The internal backup USB stick and the device form a single unit. The internal backup USB stick cannot be exchanged or replaced with another USB stick. If the internal backup USB stick is lost, it must be reordered as a replacement part.



Important: The internal backup USB stick (17, see Figure 4 WLZent04, internal structure) may only be removed when the WLZent04 is powered down. The WLZent04 function is not available without a backup USB stick.

17.2 Manual backup

It is possible to manually copy the encrypted backup data from the WirelessProfessional from the internal backup USB stick to another external storage medium.

Before connecting such an external USB stick to the WLZent04, minimise the WirelessProfessional software so that the desktop is visible. Inserting an external USB stick opens the removable media window. Tapping or clicking the “OK” button opens the file explorer.

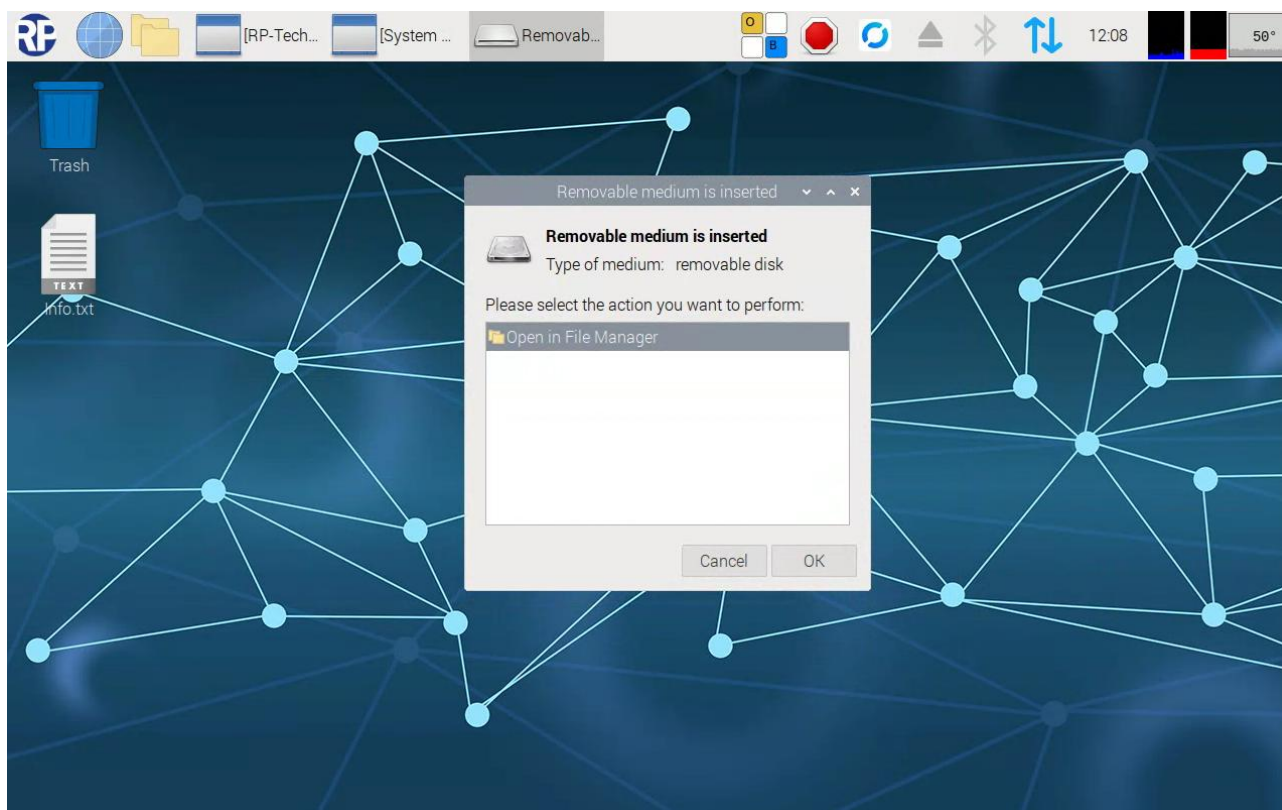


Figure 77 Confirming storage medium

The internal backup USB stick (WLPROSAFE) is located below the external USB stick (KINGSTON in the example shown below).

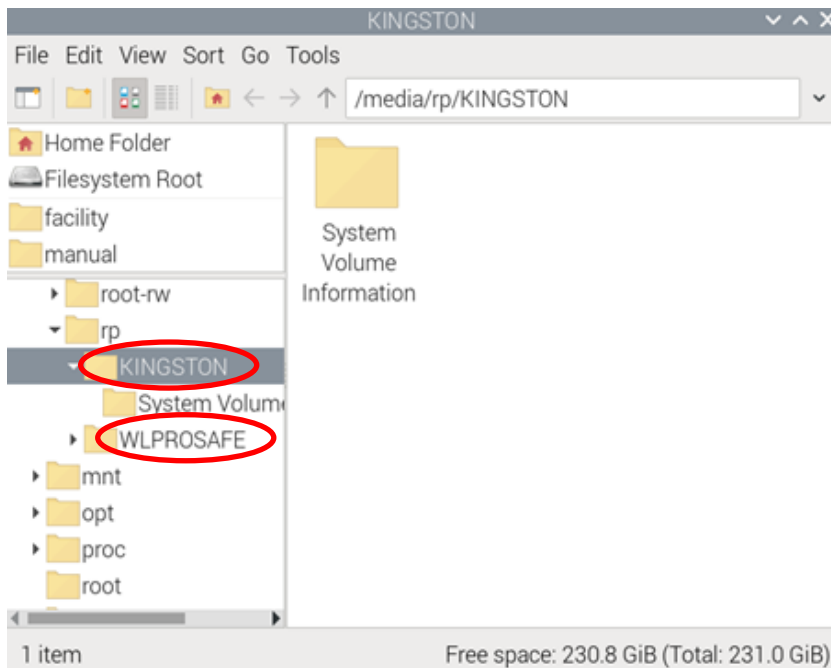


Figure 78 File explorer with internal and external USB stick

Select WLPROSAFE and mark the “backup” and “ltbackup” folders.

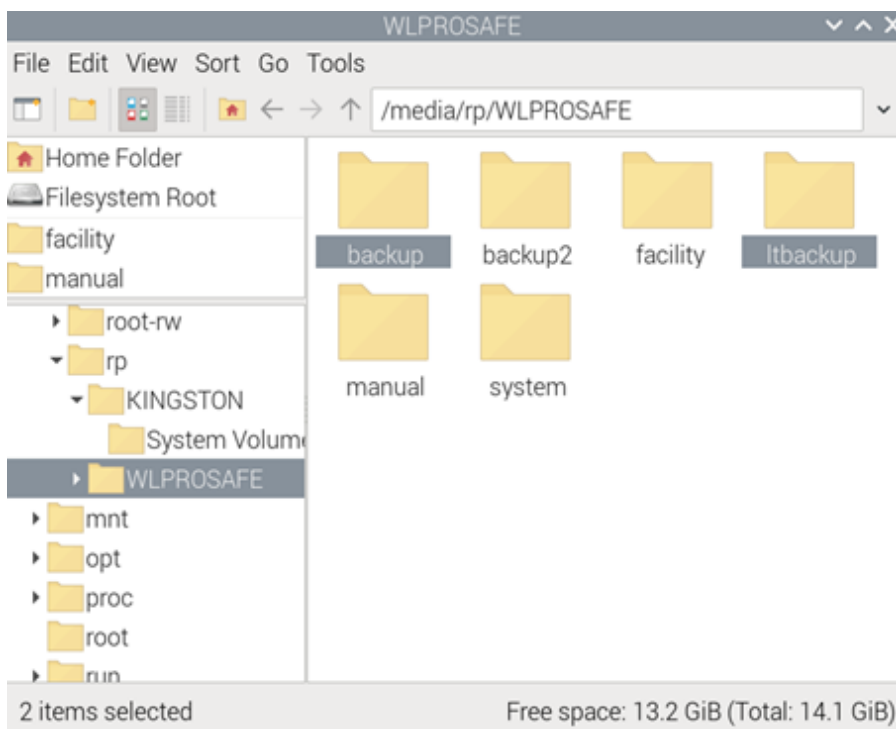


Figure 79 Selecting WLPROSAFE Backup files

The files are then copied via *Edit->Copy*.

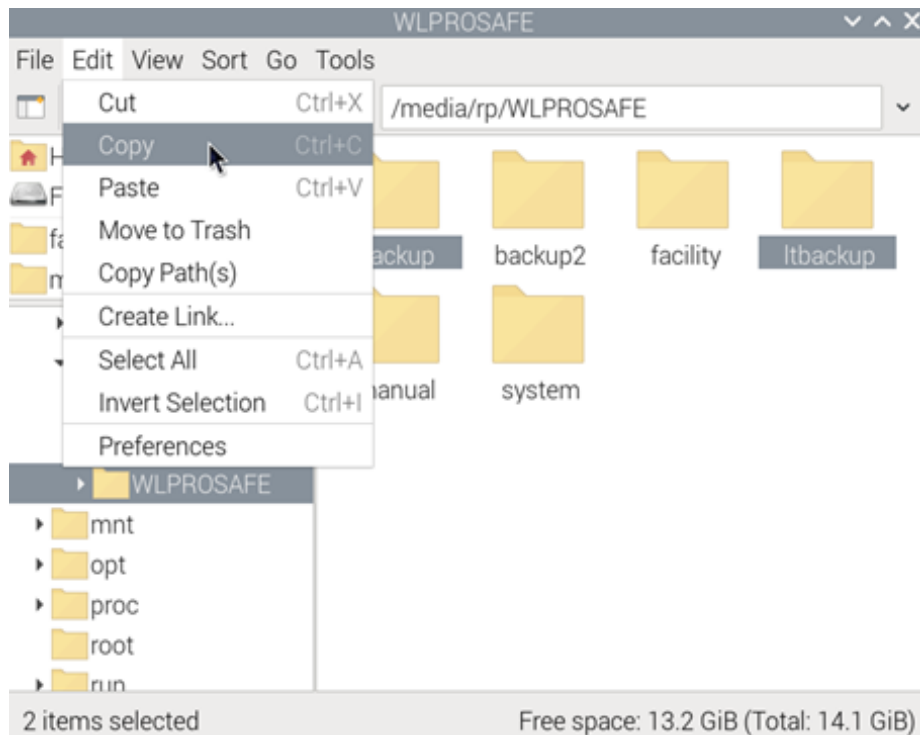


Figure 80 Copying WLPROSAFE Backup files

Now select KINGSTON. Then, using *Edit->Paste*, insert the previously copied files.

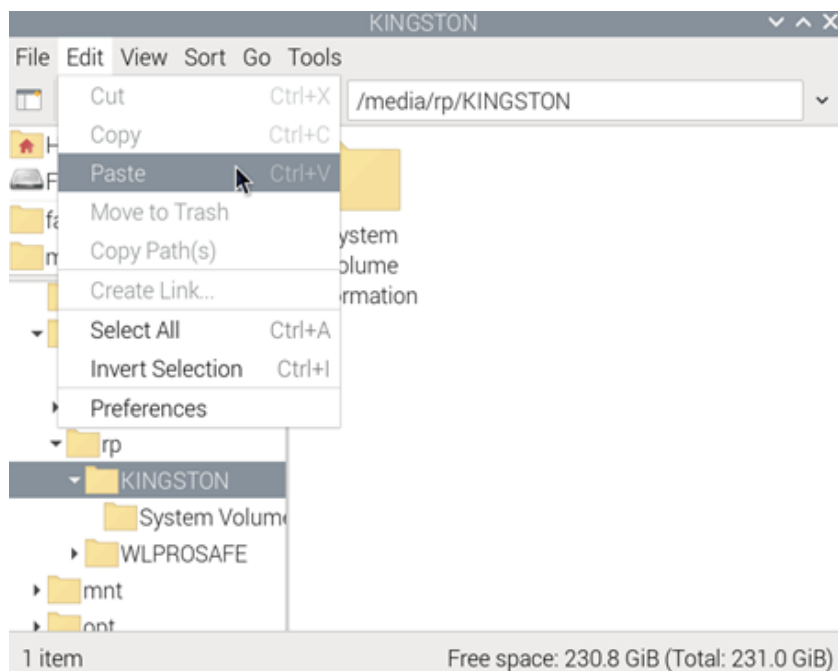


Figure 81 Inserting backup data on external USB stick

Then close the window by clicking on the "X" in the top right-hand corner and eject the external USB stick.

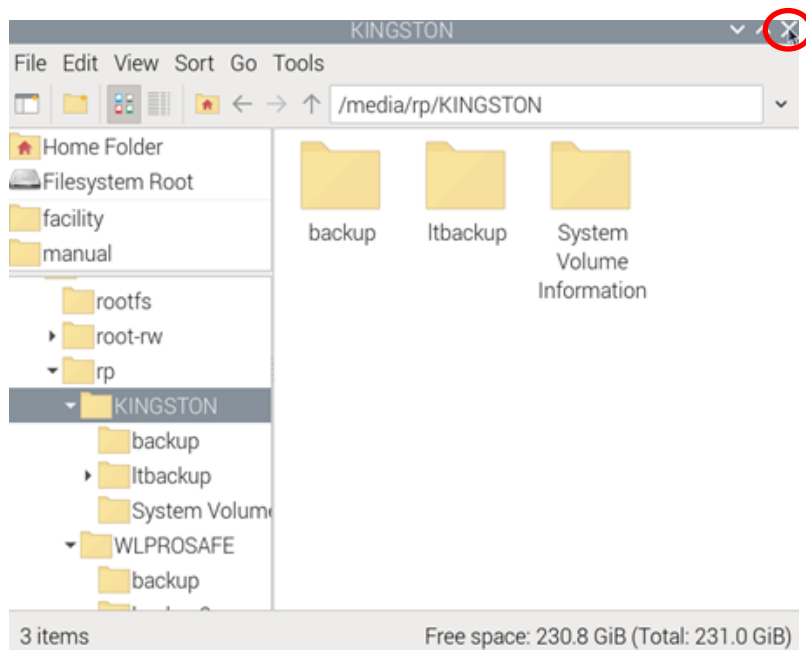


Figure 82 Closing File Explorer

To eject the external USB stick, click on the eject symbol  .

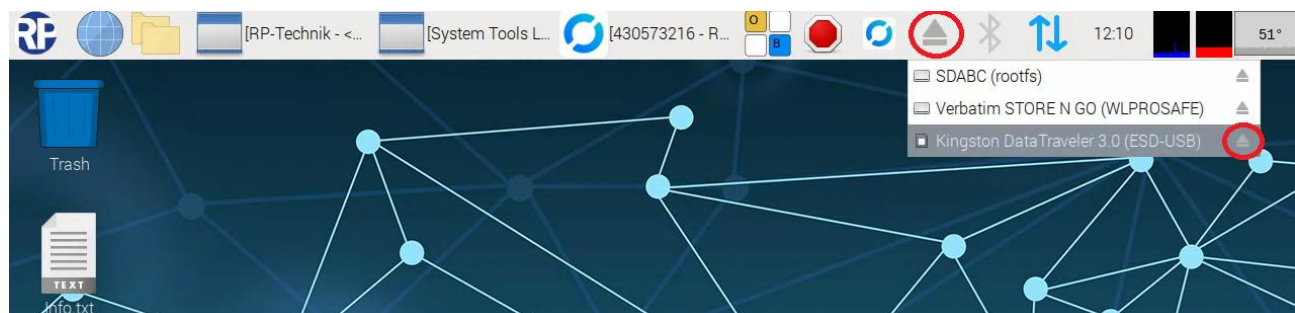


Figure 83 Ejecting storage medium

17.3 Long Term Backup

The WirelessProfessional WLZent04 regularly stores an encrypted backup copy of the user data and log files in a special folder on the internal backup USB stick.

These so-called “Long-term backups” are automatically created on the 1st and 15th day of each month. Folders for long-term backups are retained for a maximum of 24 backups, which corresponds to the past 12 months. After that, the oldest backup will be overwritten. The backups are named with the date of creation in the folder name.

The path on the internal backup USB stick where the data is stored is: **media/rp/WLPROSAFE/ltbackup**

These backups can be used in conjunction with the Backup Recovery Tool (see 17.4) to restore a previous state.

17.4 Recovering long-term backup data

Backups should only be recovered by a suitably qualified and authorised person. To recover a long-term backup created by WLZENT04, use the Backup Recovery Tool.



Note: The Backup Recovery Tool is only available in Read-Only mode.

To restore a backup, select ‘Backup Restoration’ from the System Tool Launcher (see chapter 12 System Tool Launcher).

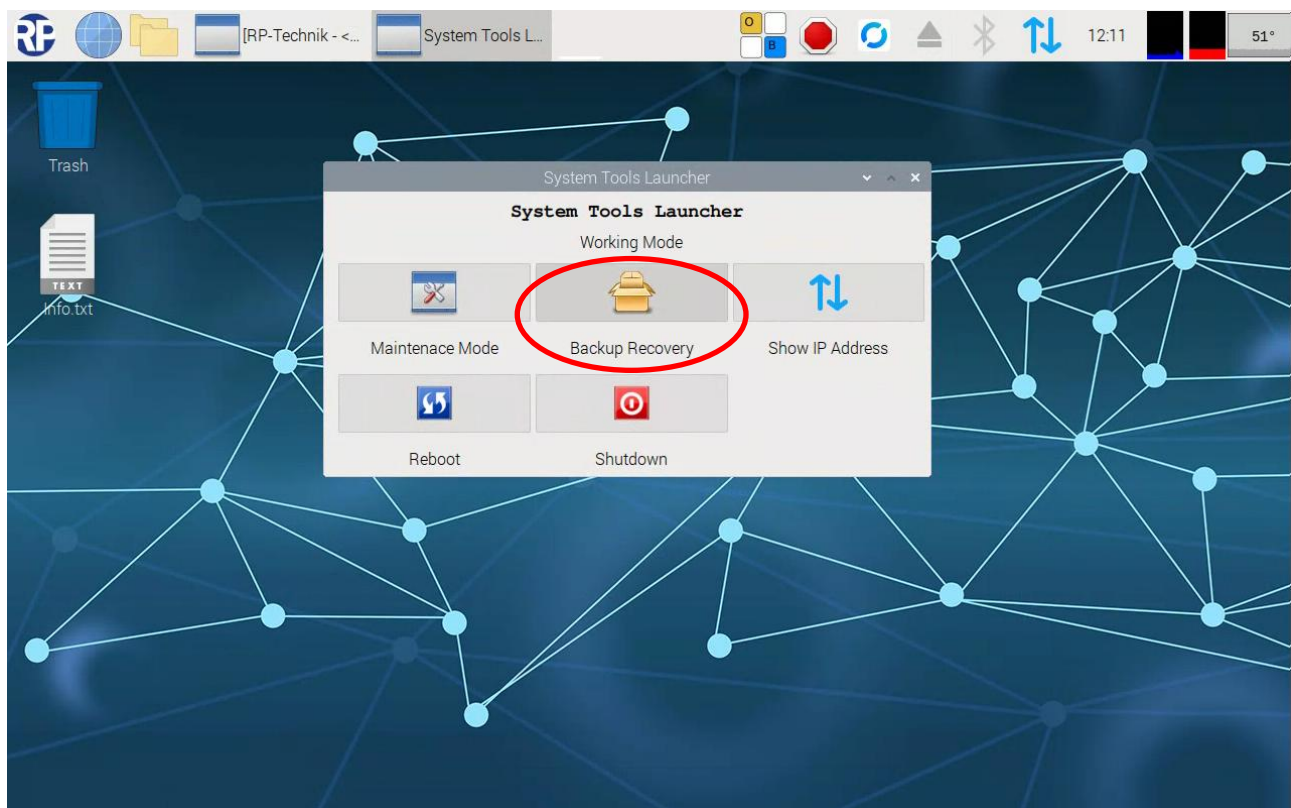


Figure 84 System Tools Launcher -> Backup and restore

The Backup Recovery Tool opens. This displays all available long-term backups. The sorting is based on the creation date of the backup, with the most recent backup displayed first at the top left.

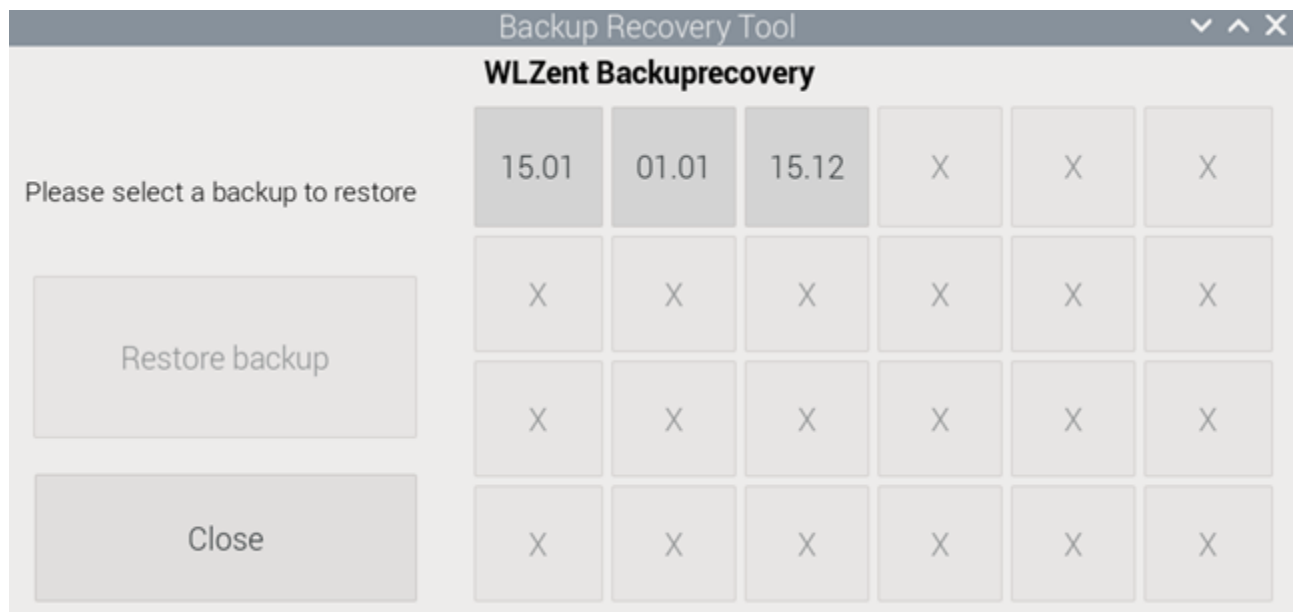


Figure 85 Backup Recovery Tool

Tap or click on the backup you want to import to select it. By subsequently tapping or clicking on the “Recover backup” button, the previously selected backup will be imported.

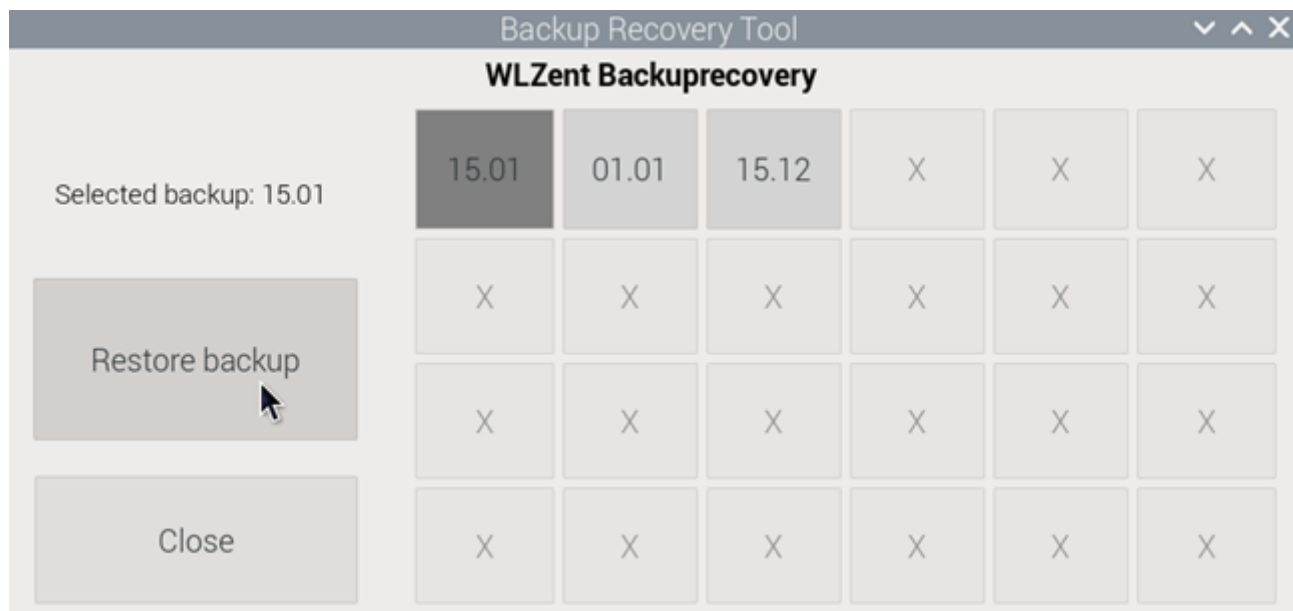


Figure 86 Selecting and recovering a backup with the Backup Recovery Tool

A notification window will appear, which must be confirmed by clicking the “OK” button.



Important: The WirelessProfessional software must be closed before confirmation.

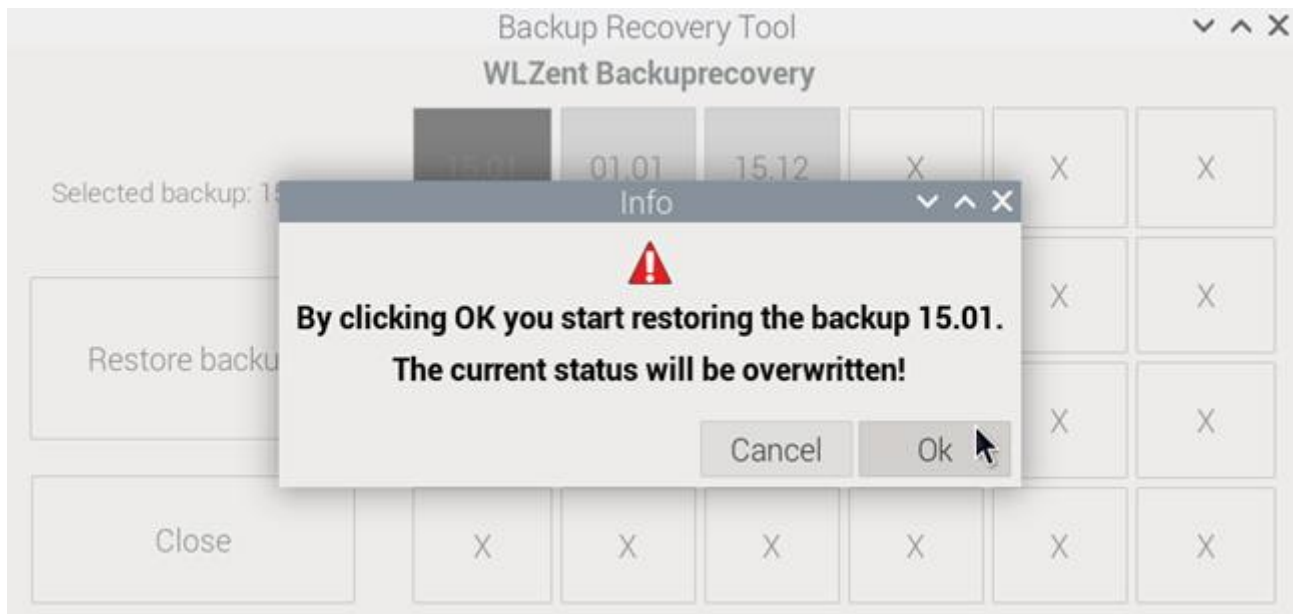


Figure 87 Recovering backup information window

The Backup Recovery Tool reappears with the confirmation “Backup has been successfully recovered”

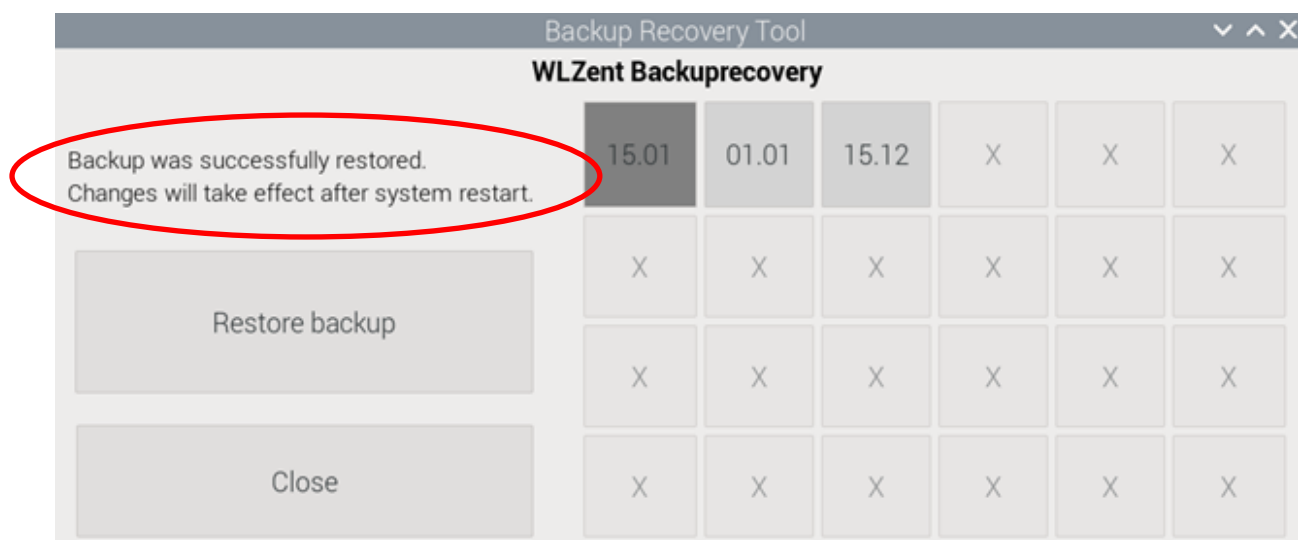


Figure 88 Backup successfully recovered

The WLZent04 must then be restarted. After WLZent04 has restarted, the WirelessProfessional software starts up with the data from the backup that has just been recovered.

18 Transferring systems to WLZent04

The transfer of source systems should only be carried out by a sufficiently qualified and authorised person. Only the WLZent04 import system may be used for importing. The backup of the source system must be correctly saved and named. Please refer to the instructions for manual backup in the relevant system manual.



Important: The backup previously saved by the source system must be named as follows:

WLTouch (Windows-System): "WirelessProfessional"

WLZent01 and WLZent02: "wireless"

CPC3, WLZent03 and WLZent04: "backup"



Note: The import system is only available in Read-Write mode. (see chapter 9 MaintenanceMode)

To import an old system, select 'Import system' from the System Tool Launcher (see chapter 12 System Tool Launcher).

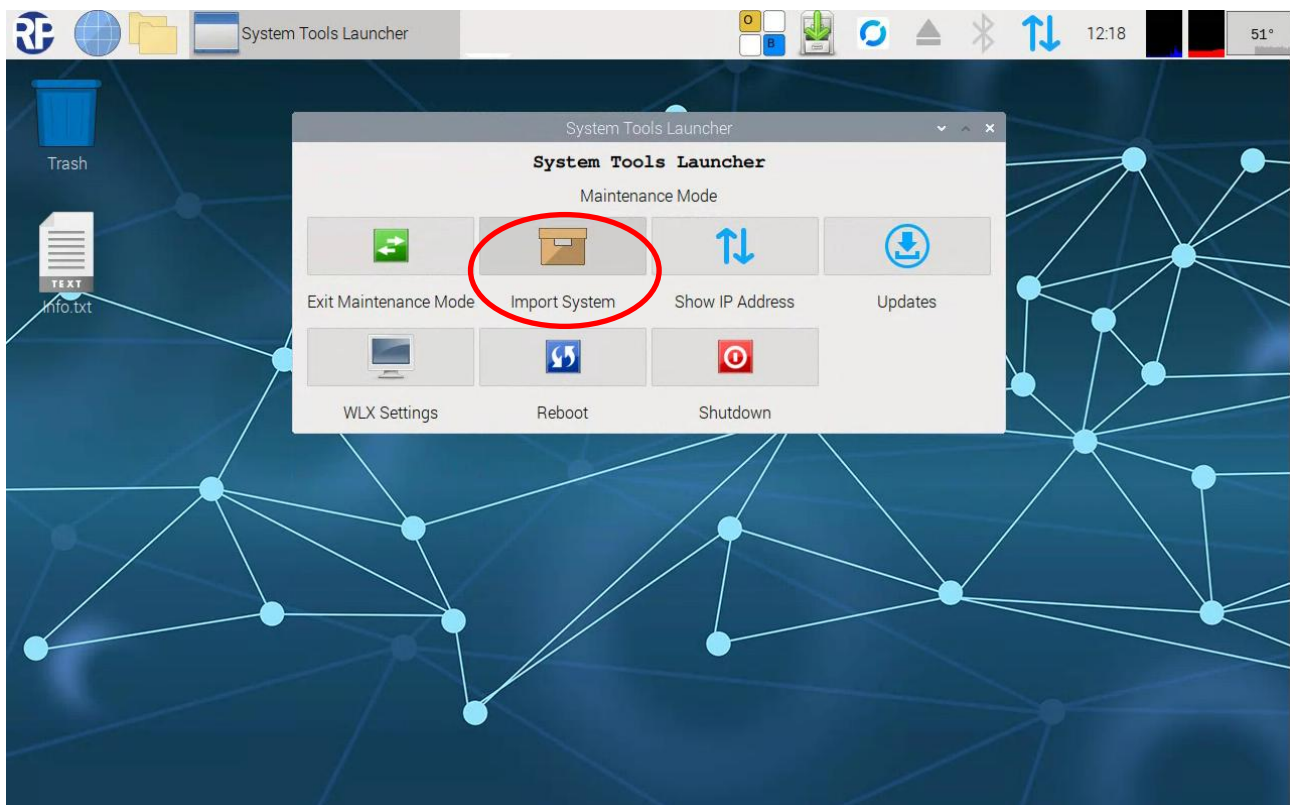


Figure 89 System Tools Launcher -> Import System

The WLZent04 Import Tool opens. This displays all available source systems that can be imported.



Figure 90 WLZent04 Import Tool

Tap or click to select the source system to be imported (here WLZENT03 as an example).

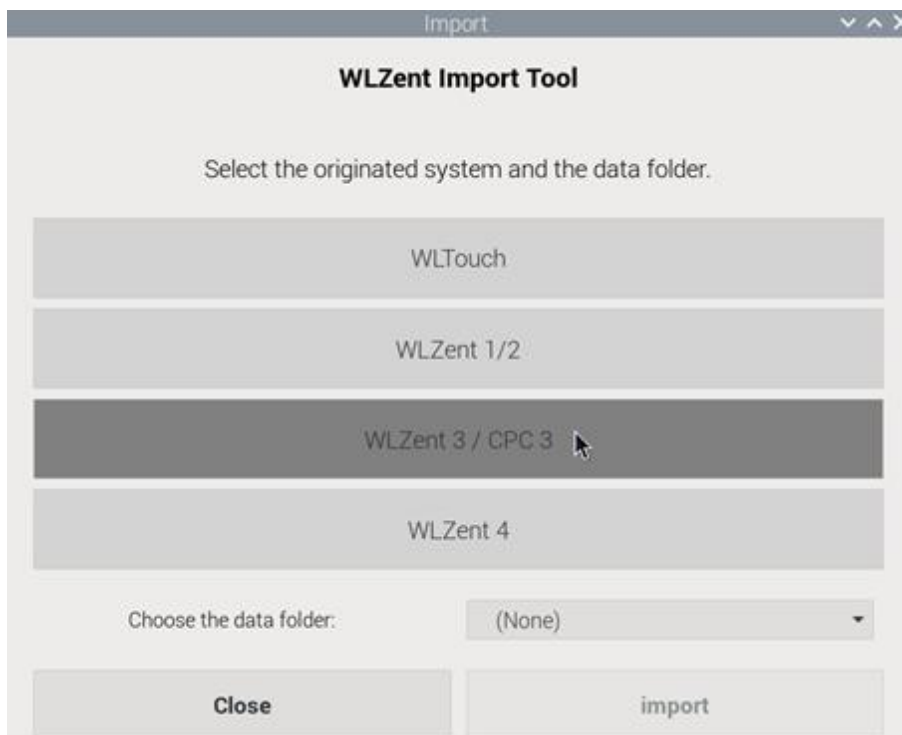


Figure 91 WLZent04 Import Tool: System selection

In this example, the system to be imported is located on an external USB stick (KINGSTON). Inserting the external USB stick opens the removable media window. Tapping or clicking the “OK” button opens the file explorer.

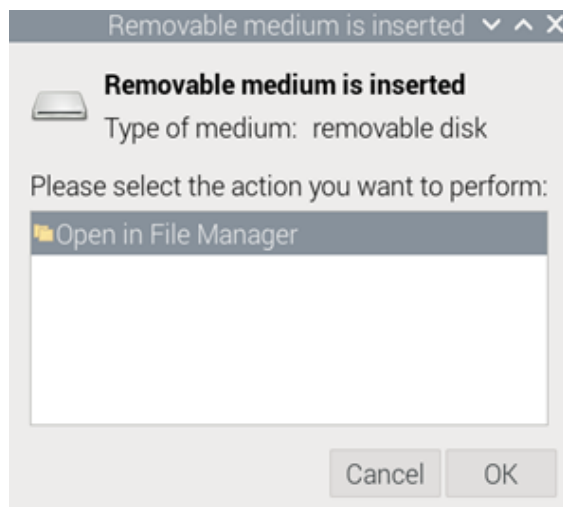


Figure 92 Confirming storage medium

The source system to be imported is dragged and dropped into the selection field.

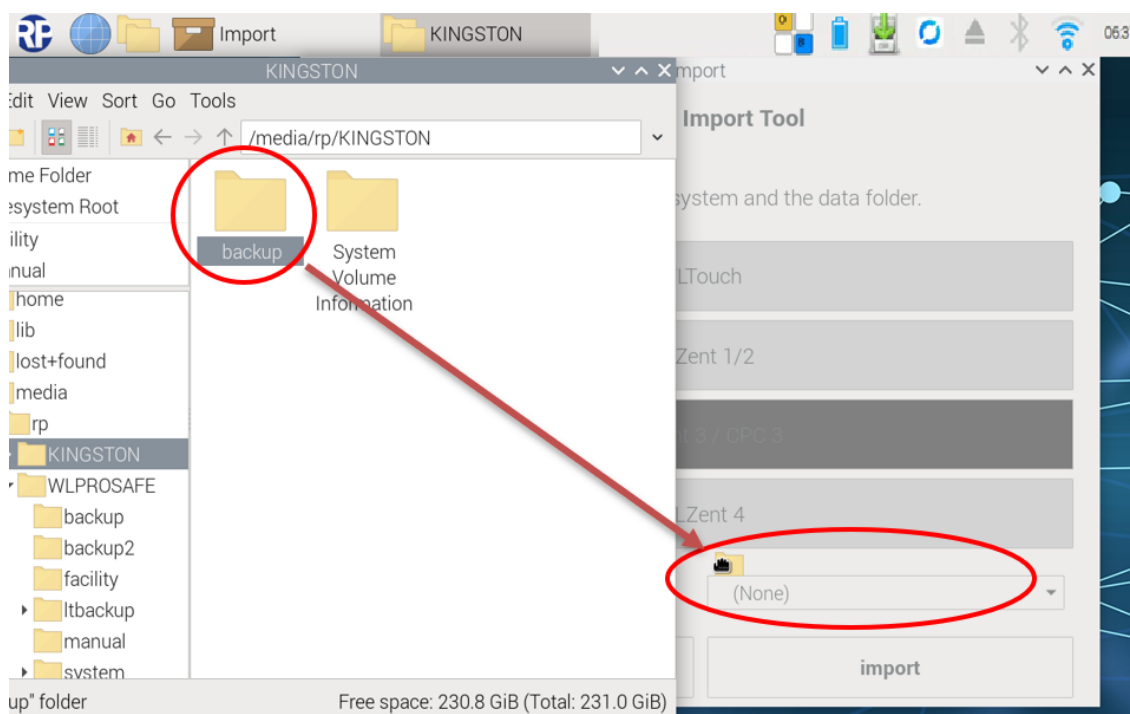


Figure 93 WLZent04 Import Tool: Selecting a source system using drag and drop

The selected folder is displayed. Now tap the “Import” button. A security prompt will open.

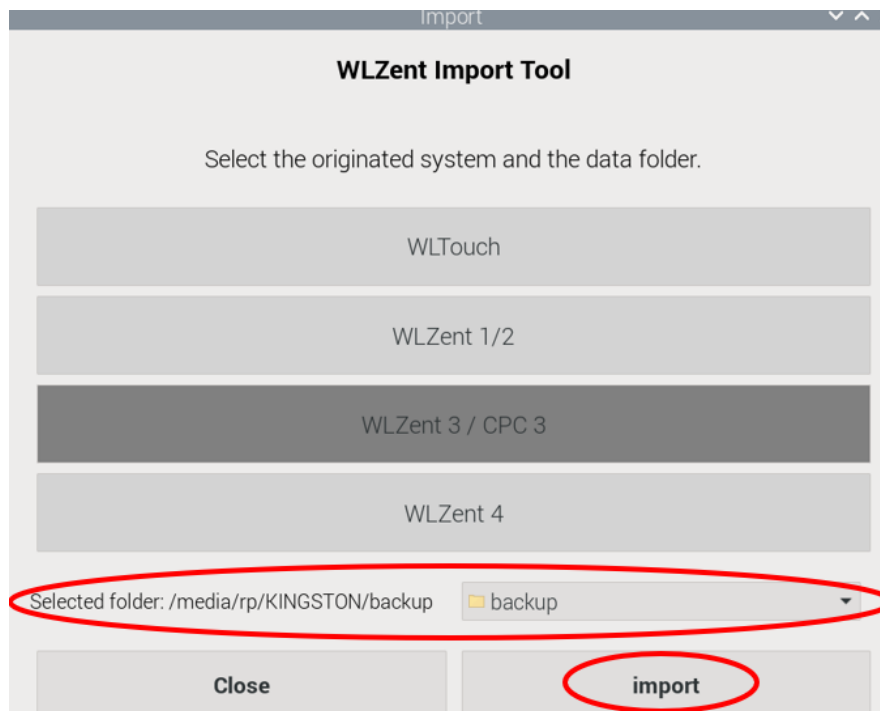


Figure 94 WLZent04 Import Tool: Importing selected file folder

Here, you must check whether the information is correct. Tap or click the “OK” button to start the import process.

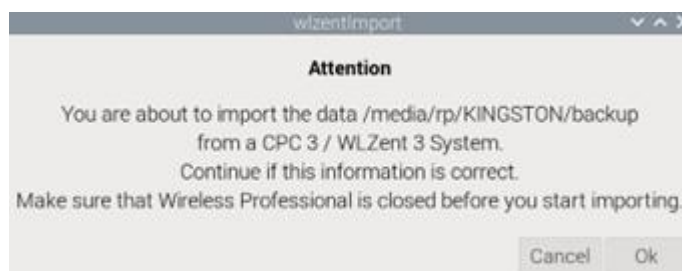


Figure 95 WLZent04 Import Tool: Import confirmation

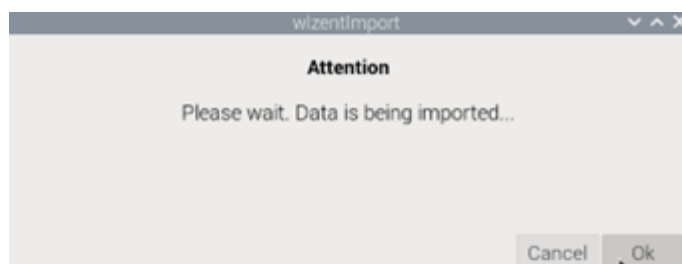


Figure 96 WLZent04 Import Tool: Data is being imported

If the import is successful, the message "Data imported successfully" will appear. Tap or click the "Close" button or the "X" in the top right corner to close the program.



Figure 97 WLZent04 Import Tool: Successful Import

If the import fails, the message "Import failed: ..." appears

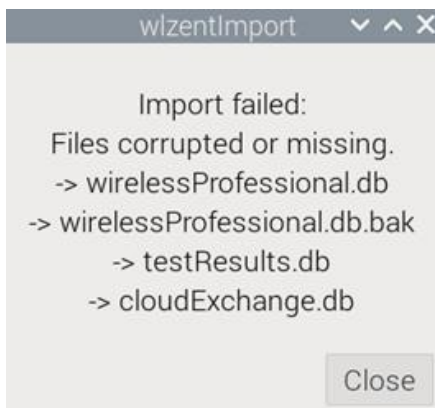


Figure 98 WLZent04 Import Tool: Failed Import



Note: The error message may vary depending on the cause of the failure.



Important: It must be checked whether the backup to be imported has been correctly saved by the source system beforehand. Please observe the instructions for manual backup of the respective device.



Important: Check whether the backup is correctly named and whether the necessary files listed in the error message are present.

19 Webbrowser

A web browser is installed on the WirelessProfessional WLZent04. The web browser is intended to enable access to central battery systems with a web server (e.g. multiControl *plus*). Launching the web browser

The web browser can be launched via the taskbar icons or via the *Start menu->Internet->Firefox*.

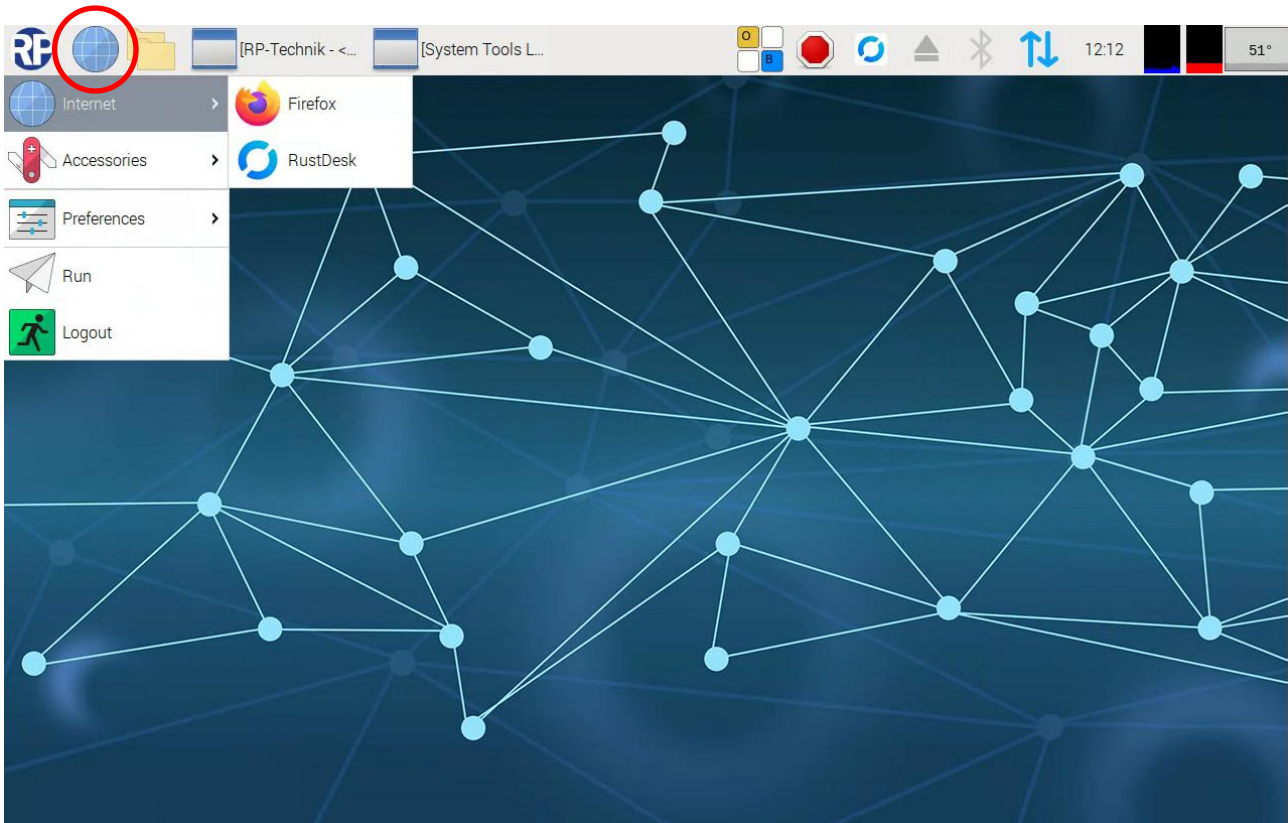


Figure 99 Start menu -> Internet

Firefox is installed as the web browser in this version of WirelessProfessional WLZent04. However, the web browser used may change due to an update of WLZent04. If you need help using the web browser, please use the web browser's help menu.



Note: The web browser may take approximately 10 seconds to start up.

20 Text editor

A text editor is installed on the WirelessProfessional WLZent04. With this text editor, WirelessProfessional logs can be saved as plain text.

20.1 Launching text editor

The text editor can be started via *Start menu->Accessories->Text Editor*.

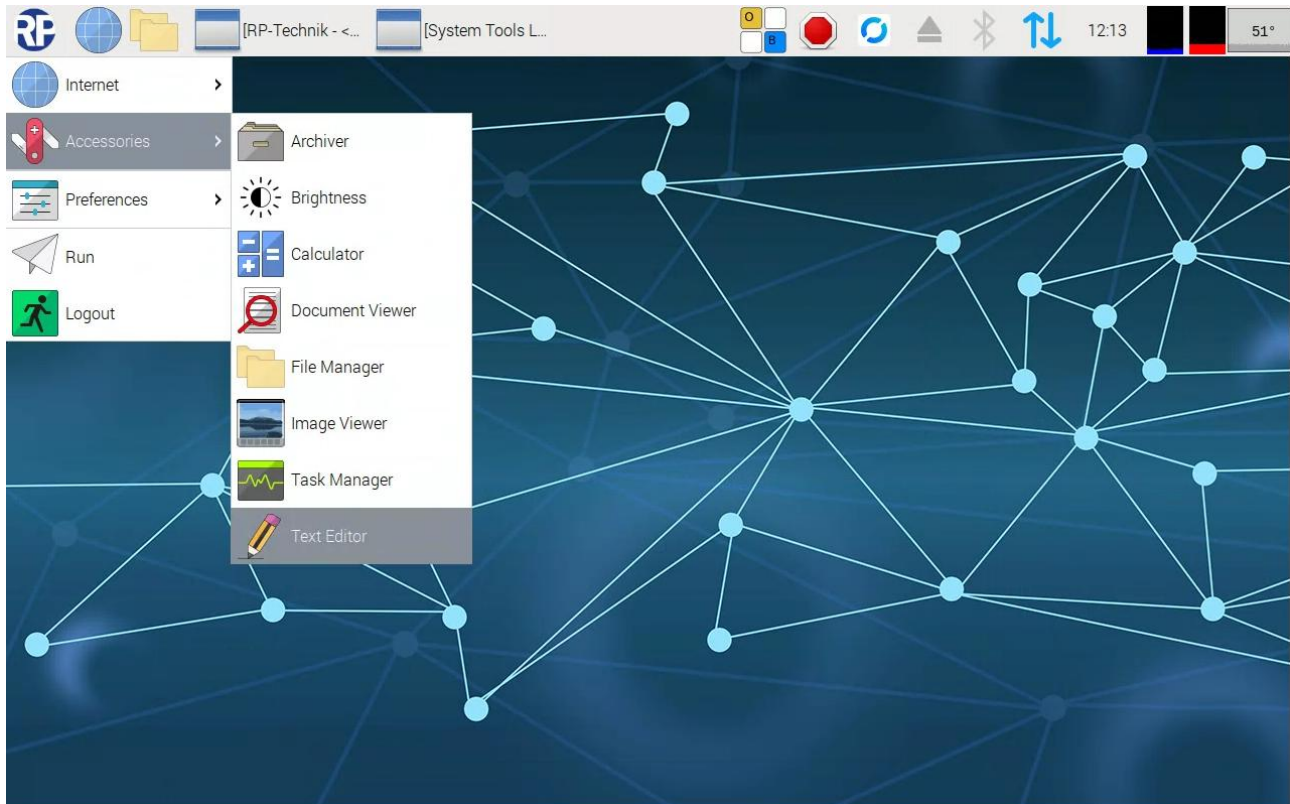


Figure 100 Start menu -> Accessories -> Mousepad

20.2 Pasting text from the clipboard

To paste text from the clipboard into the editor, tap the “Ctrl” and “v” buttons in succession on the on-screen keyboard that opens.

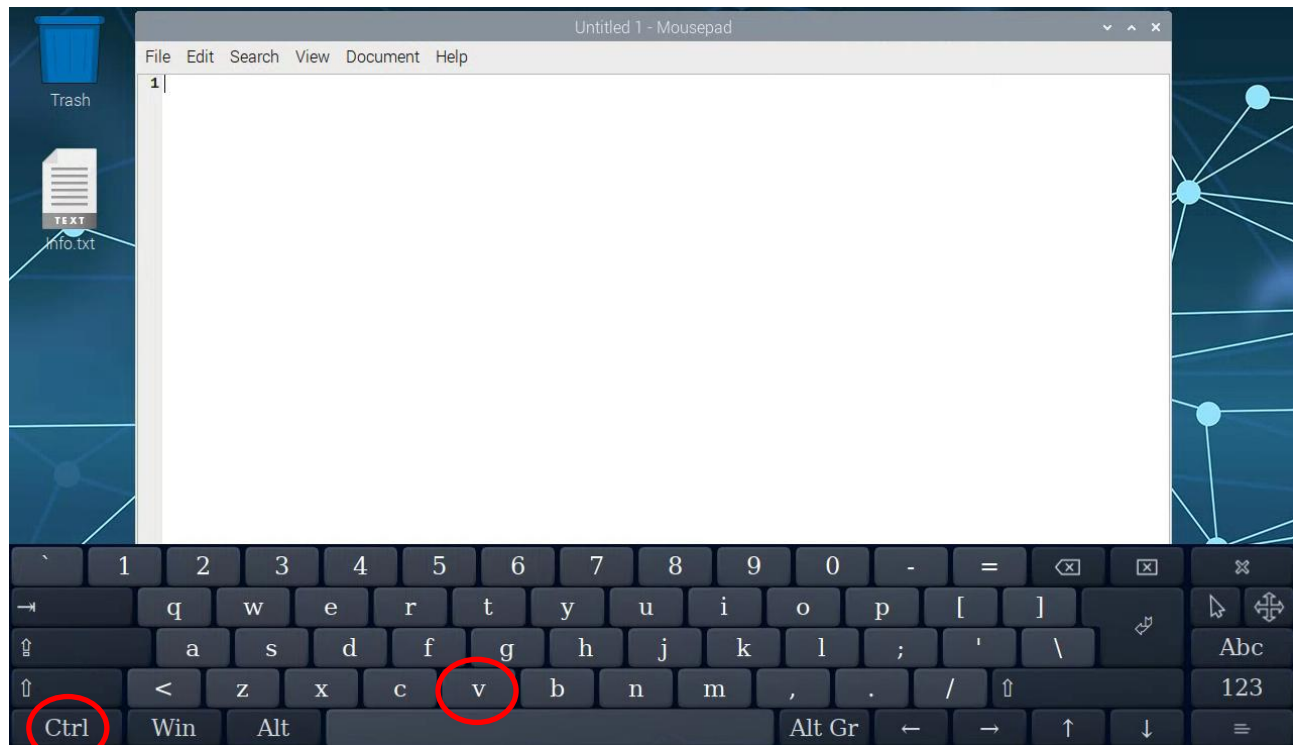


Figure 101 Text editor

Alternatively, you can select *Edit->Insert* from the menu bar.

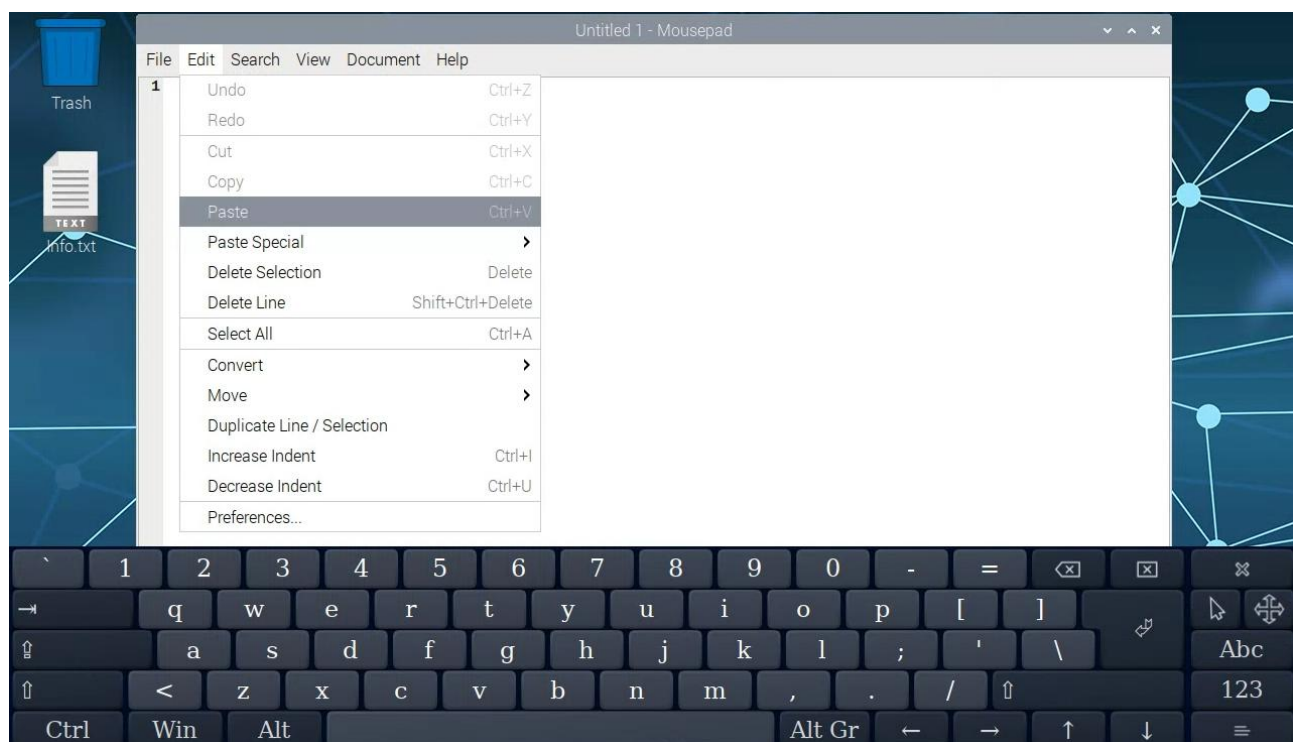


Figure 102 Text editor Edit menu

20.3 Save file

To save the document, select *File->Save As...* from the menu bar.

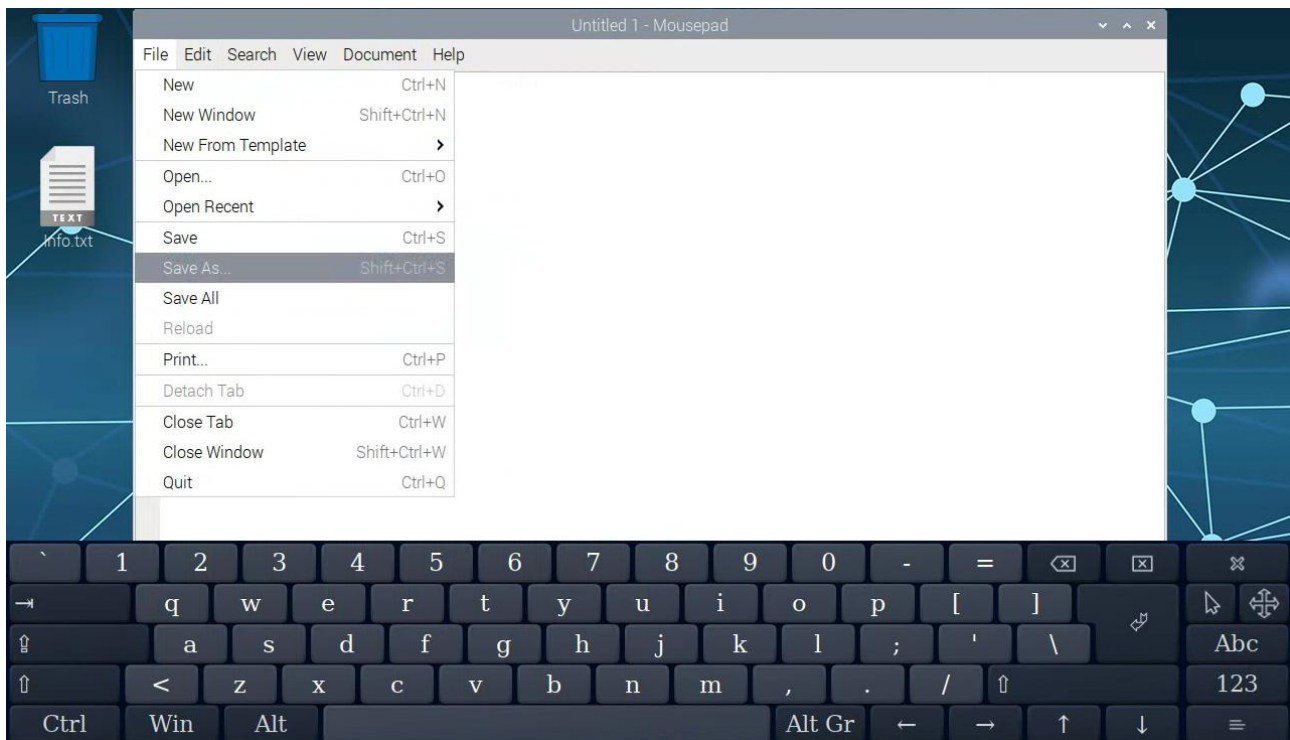


Figure 103 Text editor Save file

Another window will then open, allowing you to select the storage location and assign a file name.

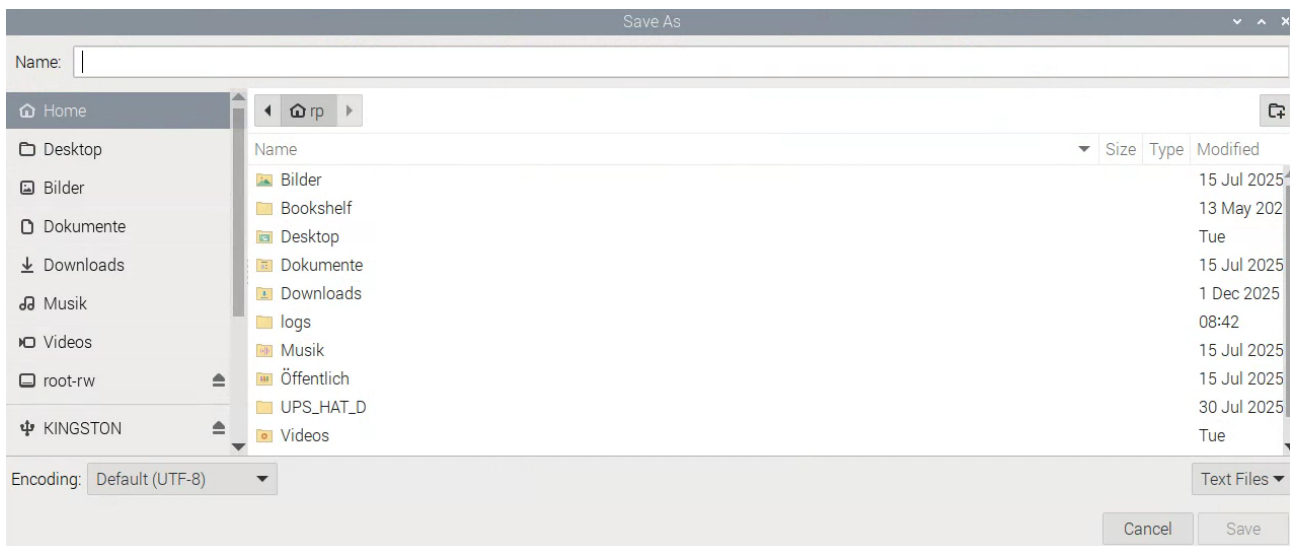


Figure 104 Text editor Save dialogue



Note: Plain text log files should not be stored in the WLZent04 file system, as they will be lost when the system is restarted.

20.4 Exit program

To exit the program, tap the “X” in the top right corner.

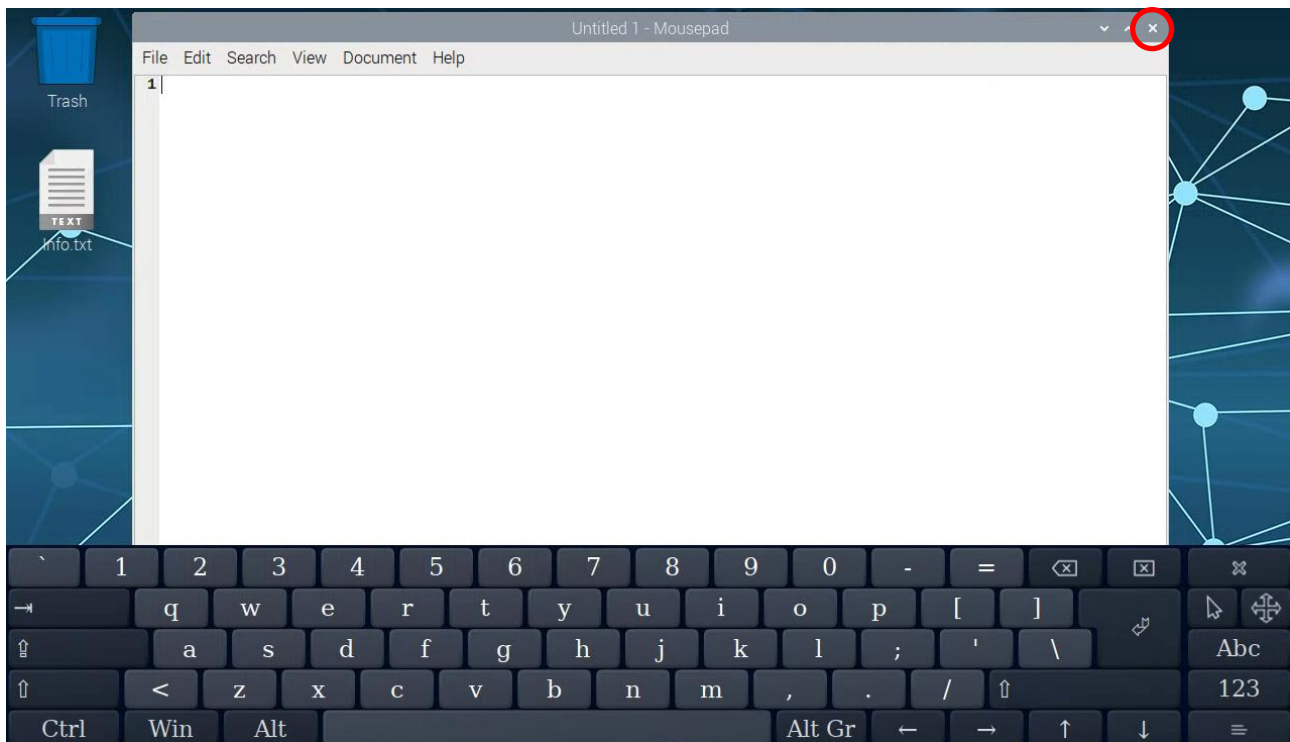


Figure 105 Closing text editor

Alternatively, select **Edit->Exit** from the menu bar. If the text document has not yet been saved, the program will ask whether the document should be saved or not.

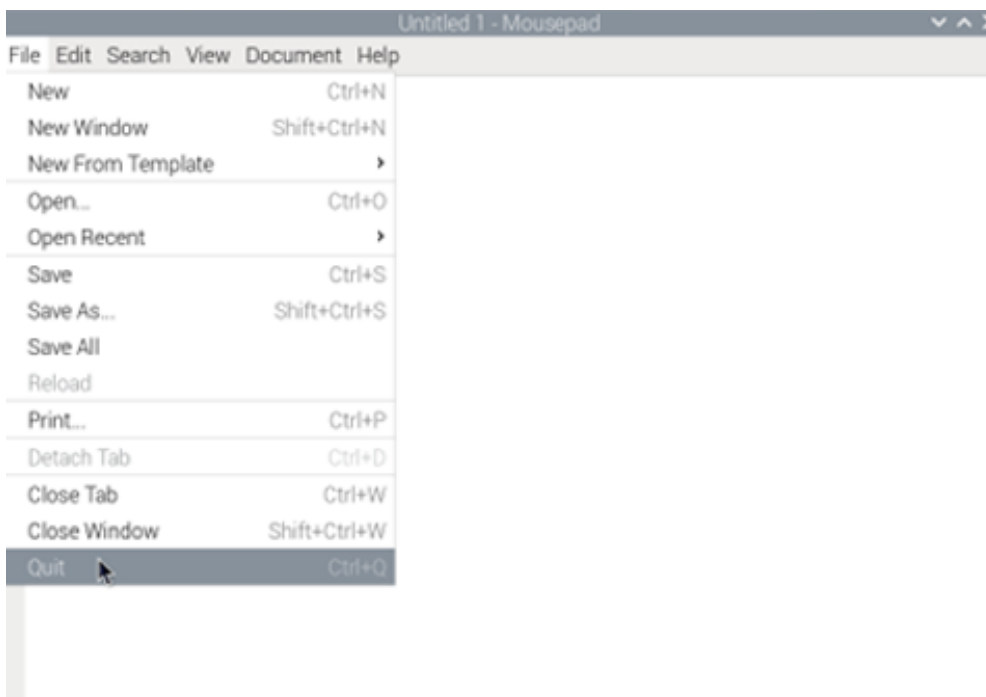


Figure 106 Closing the text editor via the menu

21 Updates to the operating system and WirelessProfessional software

The WirelessProfessional WLZent04 periodically checks for updates to the operating system and the WirelessProfessional software. The WLZent04 requires an internet connection for this check. The WLZent04 automatically searches for updates once a week (the default setting is Sundays at 1:00 a.m.), downloads them independently and installs them. The time can be set individually (see chapter 12.2 Set Update Time).



Important: From time to time, the operating system itself displays an icon in the bar at the top of the screen to indicate that an update is available and allows it to be installed by clicking on the icon (see Error! Reference source could not be found.). However, for technical reasons, updates installed in this way are lost when the system is restarted. Therefore, updates should NEVER be performed via the icon, but ONLY via the 'Check for Updates' command in the Start menu.



Note: It may happen that individual operating system updates are not installed. In this case, the update icon remains or reappears. This is not a malfunction, but intended behaviour. In such a case, the update icon should be ignored.




Figure 107 Taskbar: Update Available

The automatic update process does not require any manual intervention. However, it is possible to manually start the search and installation of updates at any time, regardless of the weekly cycle described above. The WLXUpdater is used for this purpose. The WLXUpdater allows you to manually search for updates or import an offline update from an external storage medium, such as a USB stick. It is only available in Maintenance Mode and can be accessed via the System Tools Launcher (see chapter 12 System Tool Launcher) by selecting 'Updates'.

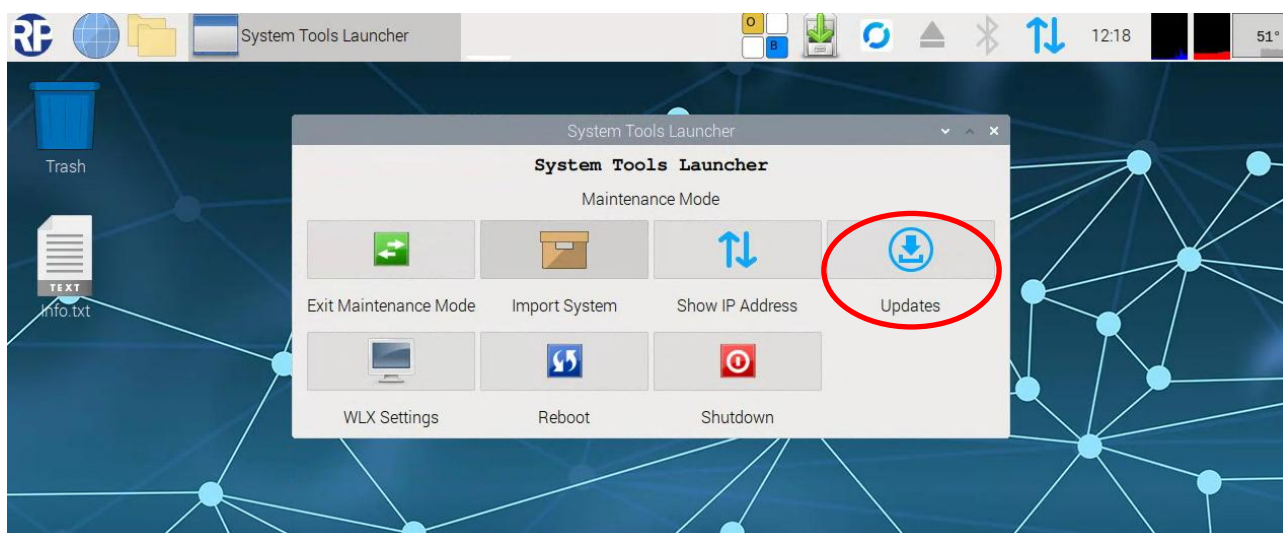


Figure 108 System Tools Launcher -> Update

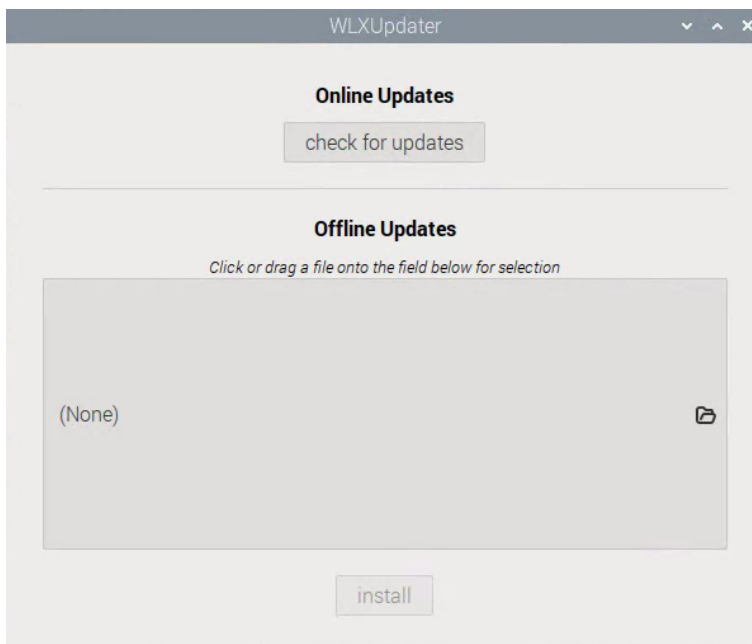


Figure 109 WLXUpdater

21.1 Online Update



Important: WLZent04 requires an internet connection for online updates.

Tapping or clicking the 'Check for Updates' button will search the update server for the latest update. Tapping or clicking the 'Install' button will automatically install it.

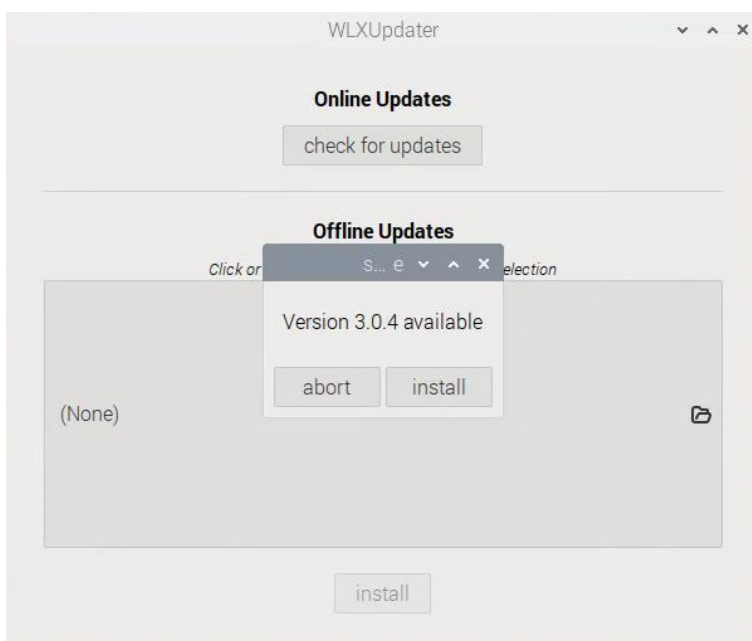


Figure 110 WLXUpdater Search for online updates

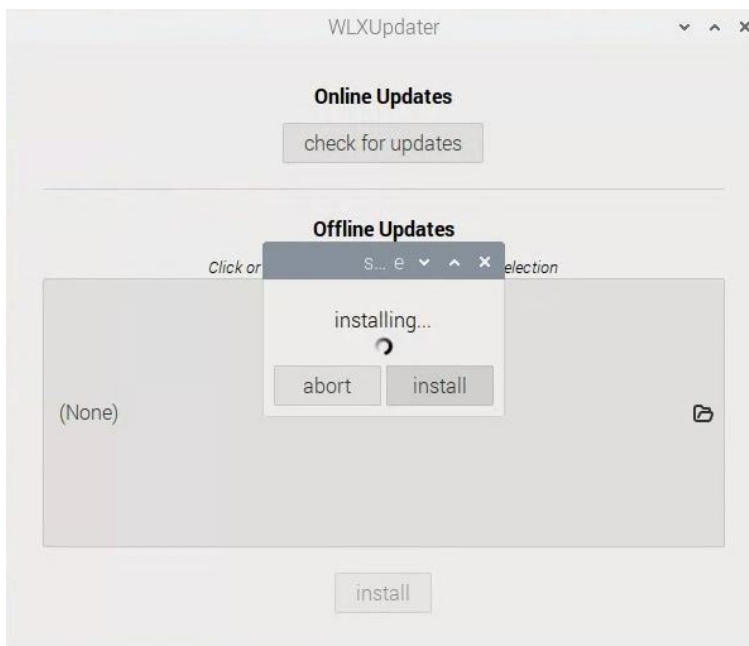


Figure 111 Installing an online update

Once the installation is complete, the WLXUpdater can be closed by tapping or clicking the 'Finish' button.

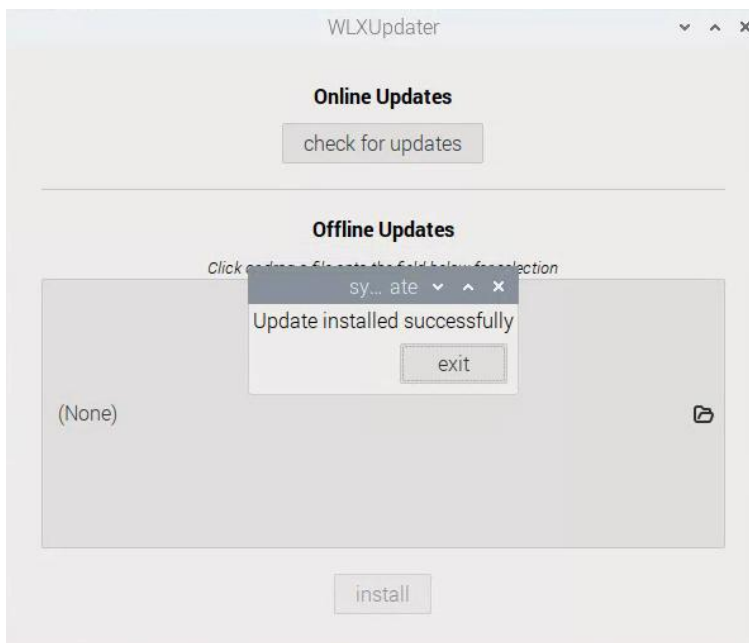


Figure 112 Online update successfully installed

21.2 Offline Update

In this example, the offline update is located on an external USB stick (KINGSTON). Inserting the external USB stick opens the removable media window. Tapping or clicking the 'OK' button opens the file explorer.

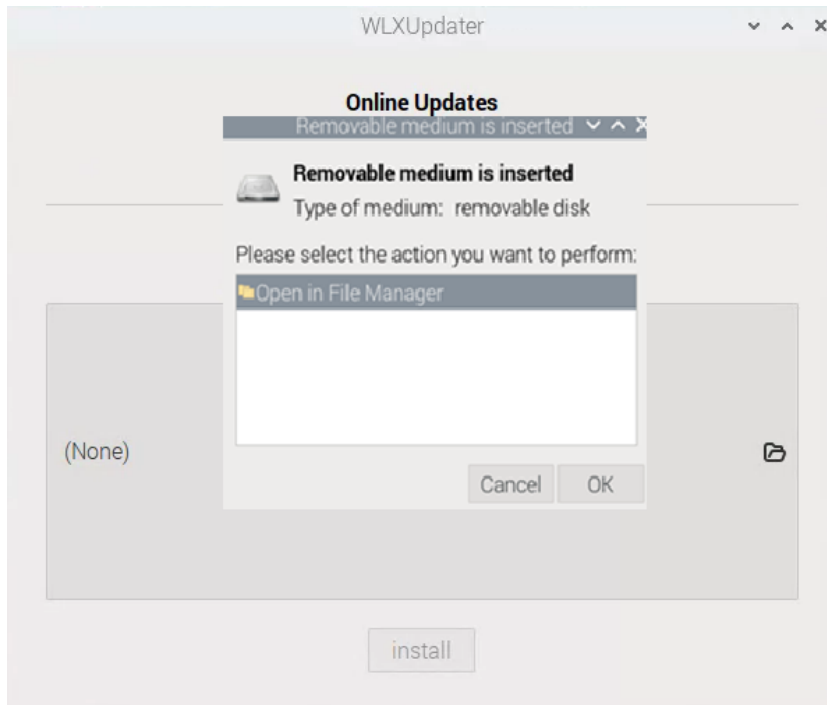


Figure 113 108 Confirm storage medium

Drag and drop the offline update into the selection field.

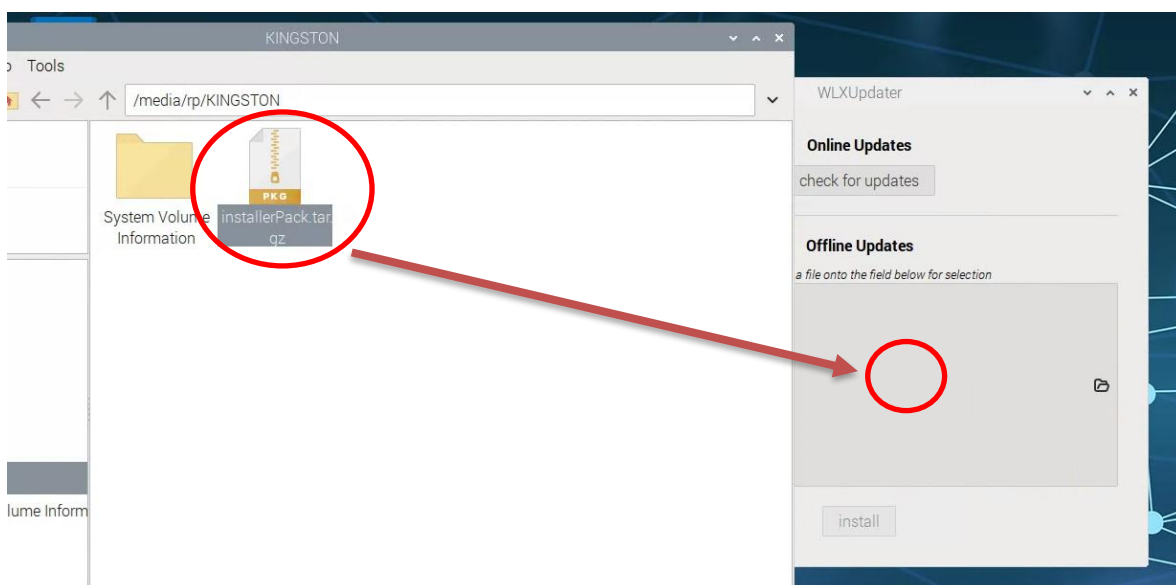


Figure 114 Select offline update via drag and drop

By tapping or clicking on the 'Install' button, it will be installed automatically.

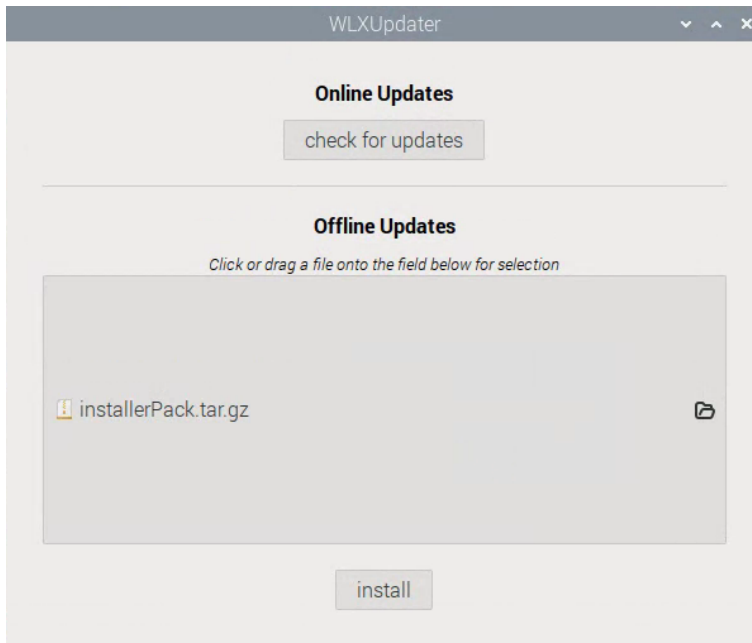


Figure 115 Importing offline updates

Once the installation is complete, the WLXUpdater can be closed by tapping or clicking the 'Finish' button.

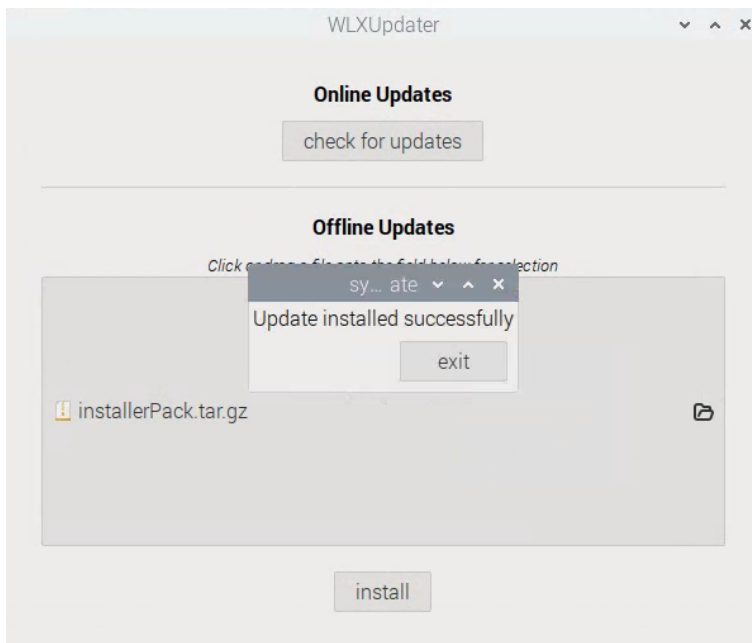


Figure 116 Offline update successfully installed

22 Firewall

The WirelessProfessional WLZent04 has a firewall that blocks incoming and outgoing connections to the device that are not necessary for operation.



Note: In order to make permanent changes to the operating system, the operating system must first be switched to Read-Write mode. (see chapter 9 MaintenanceMode)



Note: Some drop-down menus are difficult to use on the WLZent04 touch display. It is therefore recommended to use the arrow keys on the on-screen keyboard to make a selection in a drop-down menu.

The firewall configuration can be started via the *Start menu->Settings->Firewall configuration*.

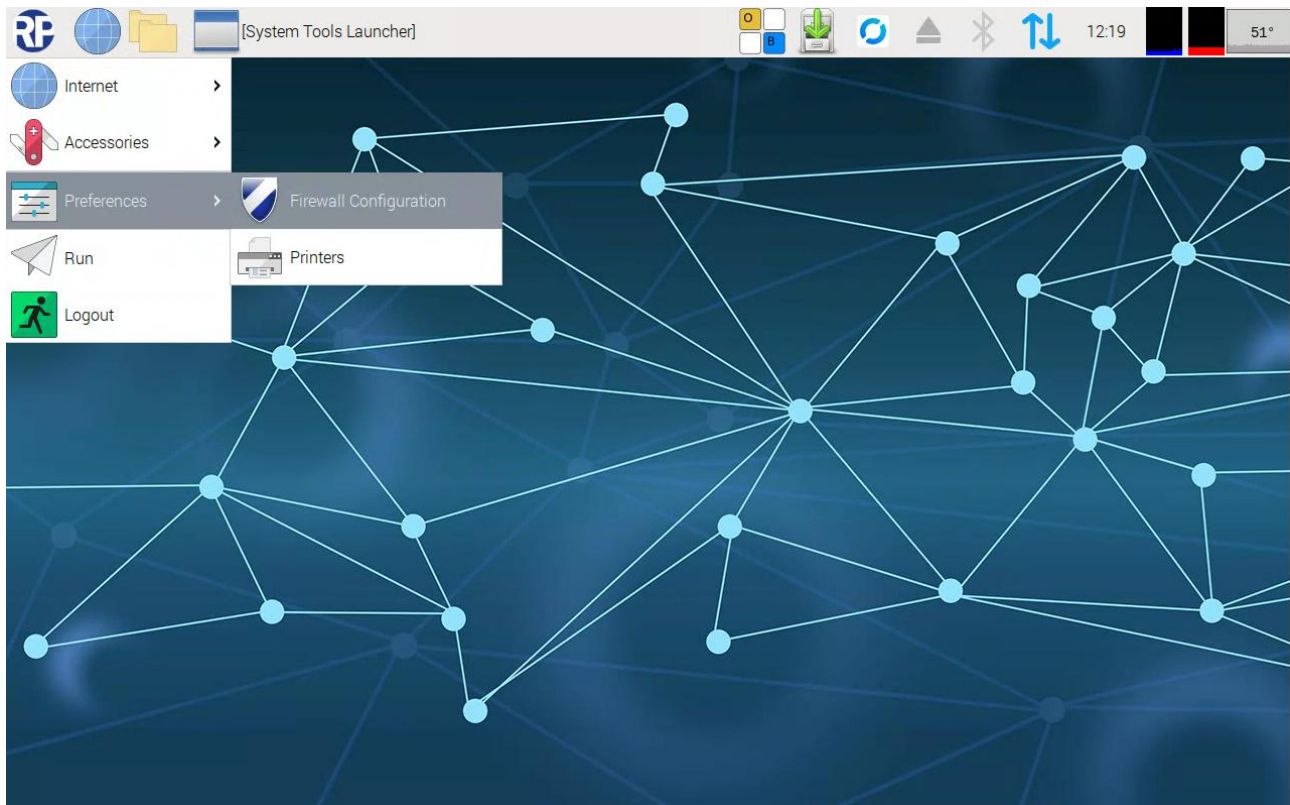


Figure 117 Start menu -> Settings -> Firewall configuration

The local user password can be found in the Info.txt file on the desktop or in the information sheet provided.

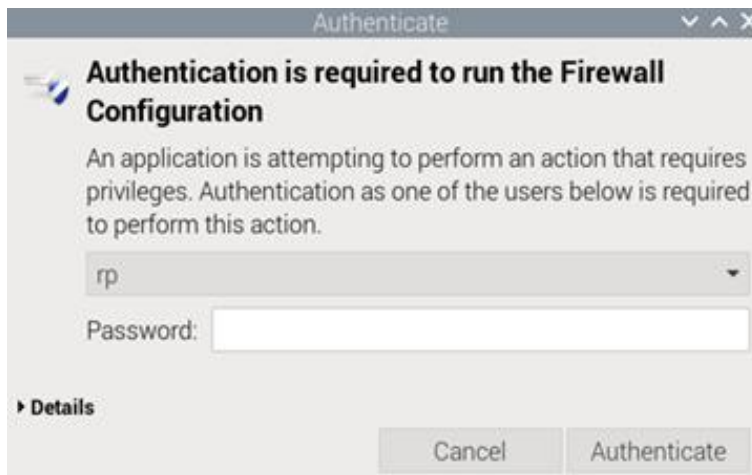


Figure 118 Firewall authentication

Once the password has been entered, the “Firewall” window appears.

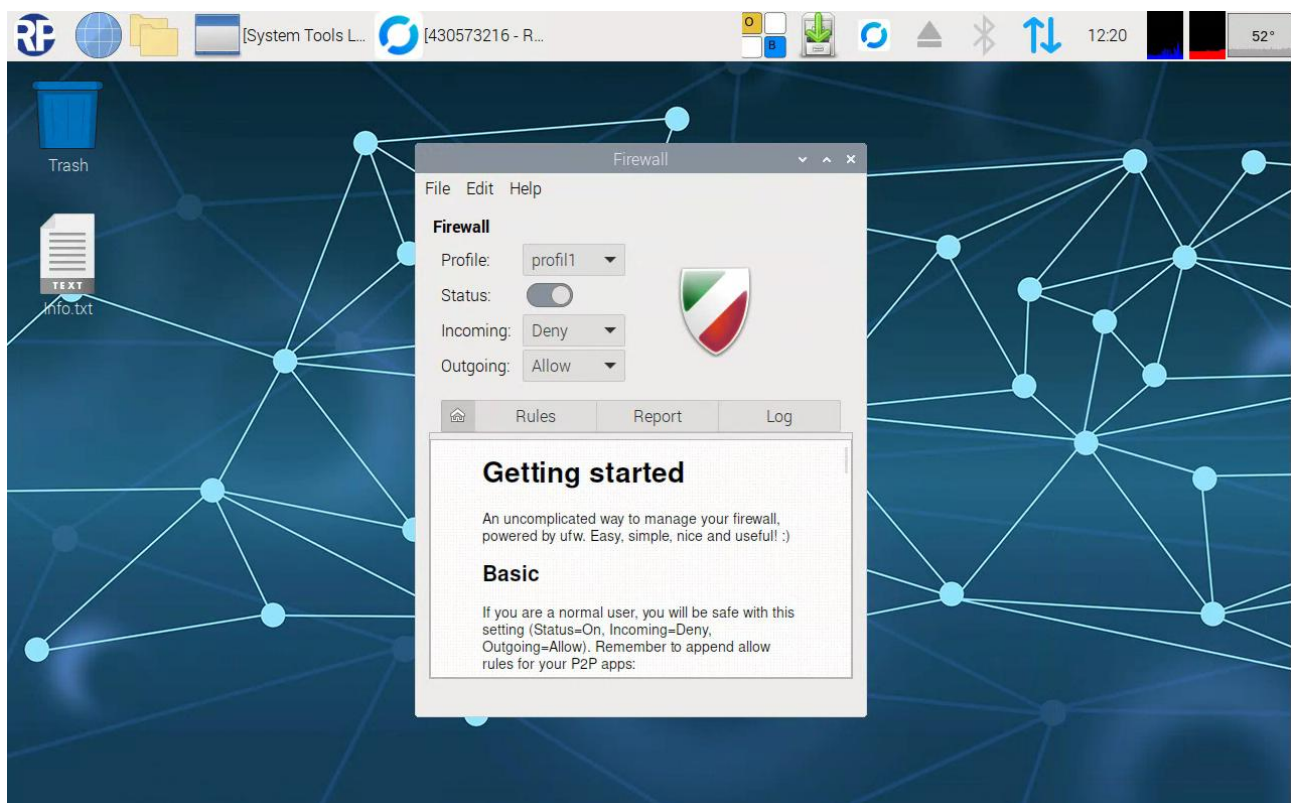


Figure 119 Firewall window



Important: Changes to the firewall configuration are not recommended and are made at your own risk.

23 Installing additional languages

The WirelessProfessional software supports multiple languages ex works.

Additional languages or newer language files for the WirelessProfessional software will be installed via the automatic software update as soon as they become available.



Note: The language of the Linux operating system can be switched between German and English (see chapter 13.1 System Language Settings).

24 FAQs

24.1 Which devices can be connected to the USB port?

Hubs, USB storage devices, and external input devices such as keyboards or mice.



Note: When connecting multiple external devices, ensure that their total power consumption does not exceed the device's capacity. E.g.: external hard drives.

24.2 Is it possible to install additional software on the device?

The installation of additional software is possible but requires detailed knowledge of Linux. In general, only software approved by the manufacturer may be installed on the device.



Warning: The warranty shall be void if third-party software or software not approved by the manufacturer is used on the WLZent04. The manufacturer shall not be liable for data loss or damage caused by malfunction if third-party software or software not approved by the manufacturer is used on the system. Furthermore, the manufacturer does not provide any support for the installation and operation of third-party software.

24.3 Why does the WirelessProfessional application keep restarting?

To ensure continuous monitoring of the individual battery emergency lights, the WirelessProfessional software must be active at all times. The WLZent04 has a so-called WatchDog mechanism, which checks every 180 seconds whether the WirelessProfessional application is running. If this is not the case, the WirelessProfessional software will be restarted.

24.4 How long can the UPS unit supply power to WLZent04 in the event of a power failure?

Up to 60 minutes.

[illegible]

26 Contact information



Identification number: 071124

Issue date 02/07/2026

Publisher: RP-Technik GmbH

Hermann-Staudinger-Str. 10-16, 63110 Rodgau, Germany

Subject to technical and editorial changes